

**INSTRUCTION MANUAL**



**FC**

**FLAIL MOWER**



# CONGRATULATIONS

Dear Owner,

Thank you for buying a SOVEMA manufactured product.

Your new machine is carefully designed and manufactured to give you superior performance and dependable service, if properly operated and maintained.

You will find this machine to be rugged and reliable when matched to the suggested horsepower operating range.

Much time has been invested in providing safety and protection. Please carefully read this manual. It tells you how to safely and easily assemble, operate and maintain your machine.

Be sure that you and any other operator carefully follow the recommended safety practices at all times. Failure to do so could result in personal injury or property damage.

Of course, if you should ever have any problems or questions, please contact your local SOVEMA dealer or contact us at the addresses or numbers indicated in this manual.

SOVEMA manufactures a variety of innovative equipment. If you are interested in reviewing our full line, please contact us.

Thanks for your choice.

Ginettino Mayer  
President

## TABLE OF CONTENTS


- SYMBOLS	Page 3
- GENERAL INFORMATION	Page 4
- SAFETY AND WARNING DECALS	Page 5
- SAFETY INSTRUCTIONS	Page 7
- MAIN CHECK	Page 10
- TECHNICAL SPECIFICATIONS	Page 11
- ATTACHING THE MACHINE TO THE TRACTOR	Page 12
- CUTTING HEIGHT ADJUSTMENT	Page 16
- BEGINNING WORK	Page 19
- TROUBLE SHOOTING	Page 20
- DISCONNECTING THE MACHINE FROM THE TRACTOR	Page 22
- STORING OF THE MACHINE	Page 23
- MAINTENANCE	Page 24
- TOXICOLOGICAL INFORMATION	Page 29
- SPARE PARTS LIST	Page 31
- WARRANTY POLICY	Page 42
- SOVEMA PRODUCT LINE	Page 46

# SYMBOLS


These symbols appear throughout the manual.  
Remember their meaning and advice.



**MEANS: CAUTION!  
YOUR SAFETY IS INVOLVED**

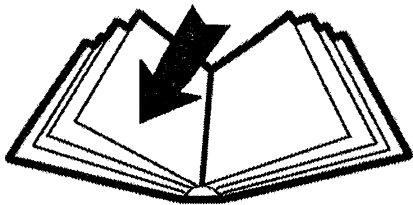


**MEANS: READ CAREFULLY**

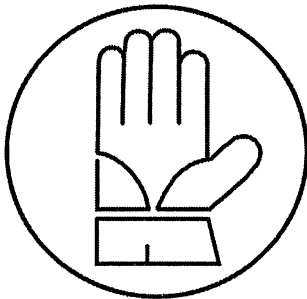

**MEANS: USE PROTECTIVE GLOVES**

 
# GENERAL INFORMATION



All implements with moving parts are potentially hazardous. The manufacturer has designed the implement to be used with all the safety equipment properly attached. The purpose of this manual is to assist you in safely maintaining and operating the implement.

These instructions have been compiled from our experience. Through this experience and these instructions, you should be able to develop operating procedures suitable to your particular situation.


Illustrations and data used in this manual may vary slightly in some details. Throughout this manual references are made in left and right directions. These are determined by standing at the rear of the equipment and facing the direction of forward travel.

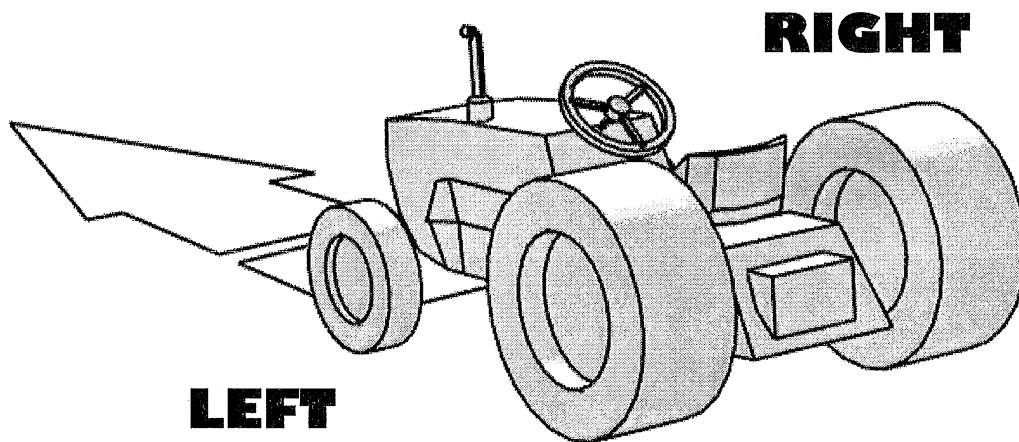


Even if some illustrations in this manual show the machine with safety shields removed for a better view, never operate in these conditions.

**BEFORE OPERATING THE IMPLEMENT, ALL SAFETY SHIELDS OR DEVICES MUST BE MOUNTED**
 
# SAFETY AND WARNING DECALS



Safety decals on the implement contain important safety warning messages. To prevent injuries we invite the operator to read them carefully and keep them clear. Check that all the decals are on the machine. If not, **DO NOT USE** the machine and report to the Dealer immediately to get the decals. Decals on the machine are the following and mean:

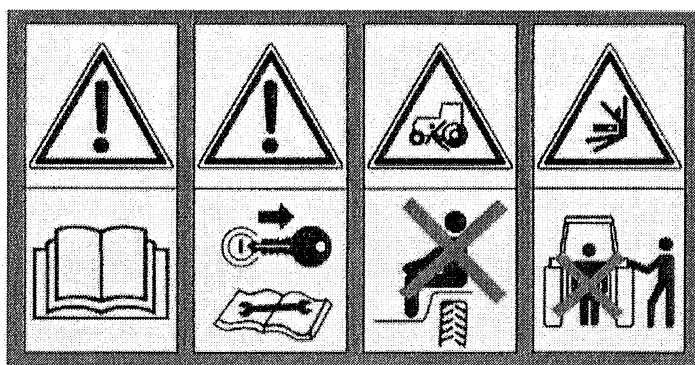

1

2

3

4



1. Before operating the equipment, read carefully the operator's manual.




2. Before maintenance operation, lower the implement, shut off the engine and read the operator's manual.



3. Do not allow riders on tractor or implement.



4. Do not stand behind the tractor during the operations.

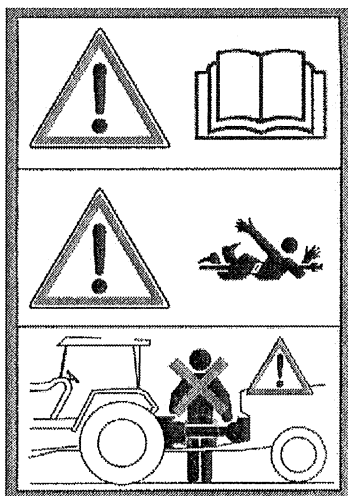


5. Before operating the equipment, read carefully the operator's manual.



6. DANGER! Entanglement of driveline..



7. KEEP AWAY from driveline in operation: contact can cause death!

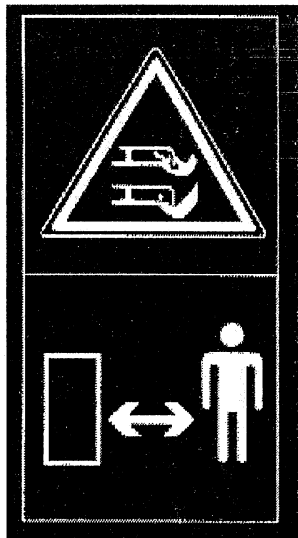


8



8. Danger. Your hands and feet can be injured by moving parts. Keep away from the implement.



9. Danger. Your feet can be injured. Keep away from the implement.

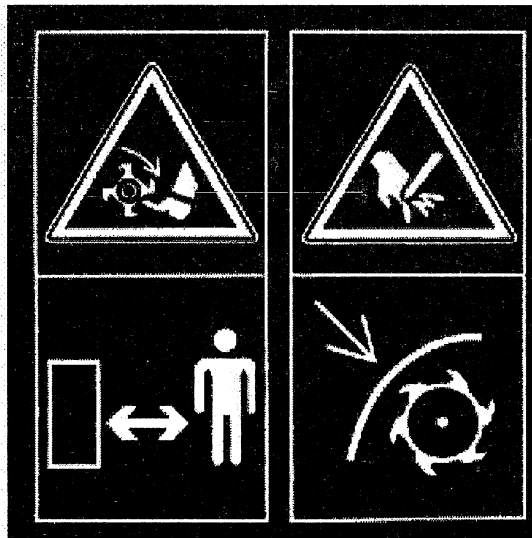

9


10



10. Danger. Your hands can be injured. Do not remove safety protection and keep away from moving parts.




11. Danger. Your hands can be injured. Do not remove the cover and keep away from moving parts.

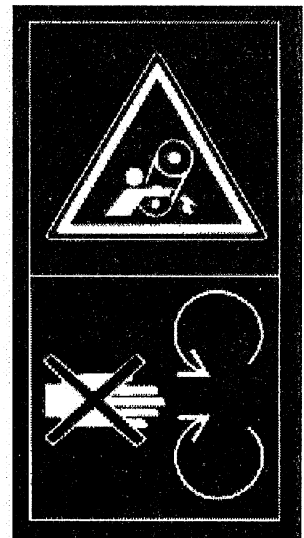

11



12. The machine is designed for use on tractors with 540 RPM PTO only.

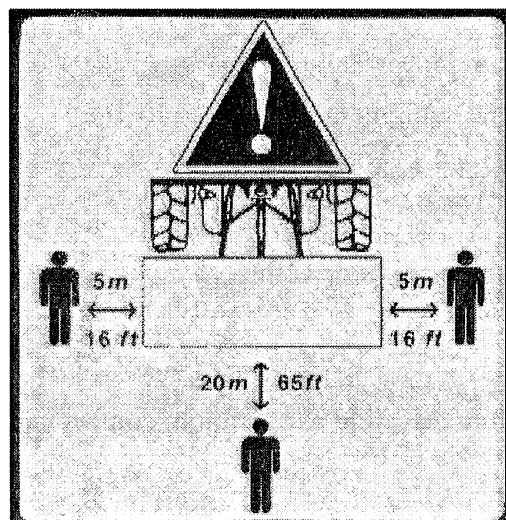

 
13. Caution! During working operations all bystanders must stay beyond the shown distances from the implement.














# SAFETY INSTRUCTIONS



Before using the implement you must be sure to know the main safety precautions; in fact many accidents are caused by not observing these rules.



## Pre-operational and operational safety rules

-  Make sure that no person operates this machine unless they first, thoroughly read and studied the operator instructions for this machine and understood all the safety precautions.
-  Keep all guards, shields and safety decals in place and proper working order before operating this machine.
-  Operate only with a tractor equipped with an approved Roll Over Protective System (ROPS) and always wear your seat-belt.
-  Operate only in daylight or good artificial light.
-  Only trained personnel can operate with the tractor and the implement.
-  **Personal protection equipment**, including safety shoes, safety glasses, hard hat and gloves are recommended during the different operations. Do not allow long hair, loose fitting clothing or jewellery to be around moving parts.
-  Do not leave the tractor seat until the engine is completely **turned off, brakes locked** and **ignition key removed**.
-  Do not allow riders on the machine or tractor at any time. No safe place for any rider.
-  Before starting to operate, be sure that the tractor's PTO is set to match the PTO requirements of the implement. The speed is indicated in this manual and on the implement.
-  Do not use different driveline . Always use type and size supplied by the manufacturer.
-  Make sure driveline spring-activated locking pin operate freely and are seated firmly in tractor PTO stub shaft groove.



For engaging or disengaging the tractor PTO, refer to your tractor manual.



Connect and disconnect PTO shaft only when tractor engine is turned off.



Keep hands, feet, hair and clothing away from moving parts.



To prevent injury by thrown objects DO NOT operate unless all personnel, livestock and pets are 20 m (65 ft) away.



The rotating parts of the machine have been designed and tested for rugged use. However they could fail upon impact with heavy solid objects. Such impact could cause the broken objects to be thrown outward at very high speed. To reduce the possibility of serious injury, or even death, never allow the rotating parts to contact such obstacles.




Stop the machine and tractor immediately upon striking an obstruction. Turn engine off, remove key, inspect and repair any damage before resuming operation.



No repairs or adjustments should be attempted while the machine is attached to a tractor that is turned on.



Working inclination of PTO driveline must not exceed 25° (see fig.1). Greater working angles will damage the PTO and serious personal injury could occur as well.

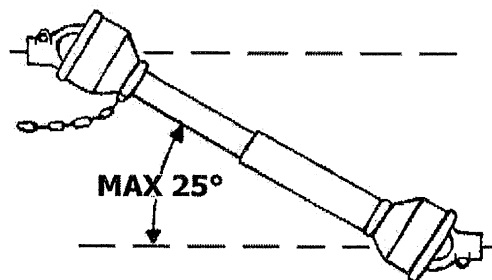

Disengage tractor PTO and place transmission into neutral before attempting to start engine.

## Transport safety



Plan your route to avoid heavy traffic.



For public roads, comply with state and local safety and movement rules.



Be sure that the implement is in the raised position for transport.



When you must drive, do not drink.



Pay attention to traffic when operating near or crossing roadways.



Reduce speed when transporting mounted implement to avoid bouncing and loss of steering control.



Pay attention when you turn curves or you go up and down on hills with the implement. Be sure that at least 25% of the tractor's weight is on the front wheels to maintain safe steering. Drive at a low speed.



NEVER allow riders on implement or tractor. Falling off can kill.



Be a safe and courteous driver.

## Maintenance safety



Good maintenance is your responsibility. Poor maintenance is an invitation to trouble.

### For maintenance follow these common practises:



- keep service area clean;
- use adequate illumination for the job;
- be sure tools and electrical outlets are properly grounded;
- make sure there is plenty of ventilation.



Before making maintenance on this machine, drive to a level area, disengage the PTO, lower the machine, turn off the engine, set the brakes and remove the ignition key.



Keep all persons away from operator control area while performing maintenance.



ALWAYS use personal protection devices.



Periodically tighten all bolts, nuts and screws.



The implement manufacturers assumes no liability if replacement parts other than the original factory parts are used.



After servicing, be sure that all safety shields are re-installed properly.

 


Be sure that all safety decals are installed, clean and in good condition.




If the machine is modified from the original design, no responsibility for the manufacturer can be claimed.

# MAIN CHECK LIST




Before connecting the machine to the tractor, read the following instructions:

- Be sure the weight and power of the tractor is correct with the machine you want to connect. If you have any doubt, see the technical specifications.

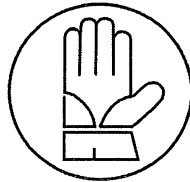

- Ensure that all safety decals are properly installed and clean.
- Check oil in the gearbox. With low oil, gears get damaged.
- Be sure that all safety shielding is properly installed and in good condition.

# TECHNICAL SPECIFICATIONS

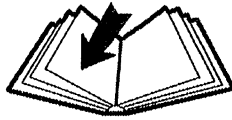


The machine described in this manual is an **FC series**.

## FC SERIES

MOD.	Working width	HP	Pto	Rotor	Weight	Width -A-	Depth -B-	Height -C-
	cm/inches		( rpm )	( rpm )	Kg./Lbs.	cm/inches	cm/inches	cm/inches
<b>FC 140</b>	140 / 56"	40 - 60	540	1918	417 / 917	160 / 64"	130 / 51"	100 / 40"
<b>FC 160</b>	160 / 64"	45 - 70	540	1918	460 / 1012	180 / 72"	130 / 51"	100 / 40"
<b>FC 200</b>	200 / 79"	50 - 70	540	1918	547 / 1203	220 / 87"	130 / 51"	100 / 40"
<b>FC 230</b>	230 / 92"	55 - 80	540	1918	710 / 1562	250 / 100"	130 / 51"	100 / 40"
<b>FC 250</b>	250 / 100"	60 - 80	540	1918	744 / 1637	270 / 108"	130 / 51"	100 / 40"
<b>FC 290</b>	290 / 116"	70 - 80	540/1000	1633/1775	875 / 1925	315 / 126"	130 / 51"	100 / 40"

MOD.							
	01	05	02	03	04	08	19
<b>FC 140</b>	28	28	28	28	14	56	56
<b>FC 160</b>	32	32	32	32	16	64	64
<b>FC 200</b>	40	40	40	40	20	80	80
<b>FC 230</b>	48	48	48	48	24	96	96
<b>FC 250</b>	48	48	48	48	24	104	96
<b>FC 290</b>	56	56	56	56	28	120	112

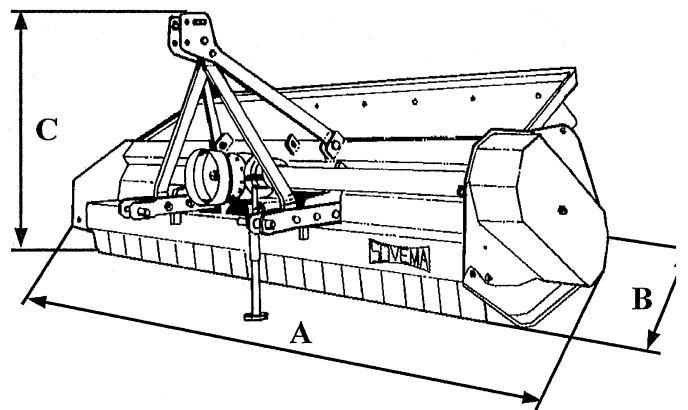

## LEVEL OF NOISE RESULT WHEN IDLING



**Lpa (A) 80 dB MAX**

# ATTACHING THE MACHINE TO THE TRACTOR



The machines described in this manual do apply to any kind of tractor provided of universal third hitch point.

The characteristics (length, diameter of the holes for the lifting pins) of the tractor's lifting arms depend on the type of tractor, therefore it is necessary to prepare the machine in order to conclude the attachment correctly.


Before attaching the machine to the tractor you must be sure that the engine is turned off, brakes are locked and the ignition key is removed.

This operation must be made on a flat area as it is very dangerous.



Do not allow anyone between tractor and implement when the engine is running.

Follow these instructions:

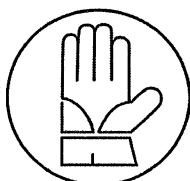

Connect the hitch of the drawbar to the tractor using a hitch pin and the hair clip pin (see fig. 1)

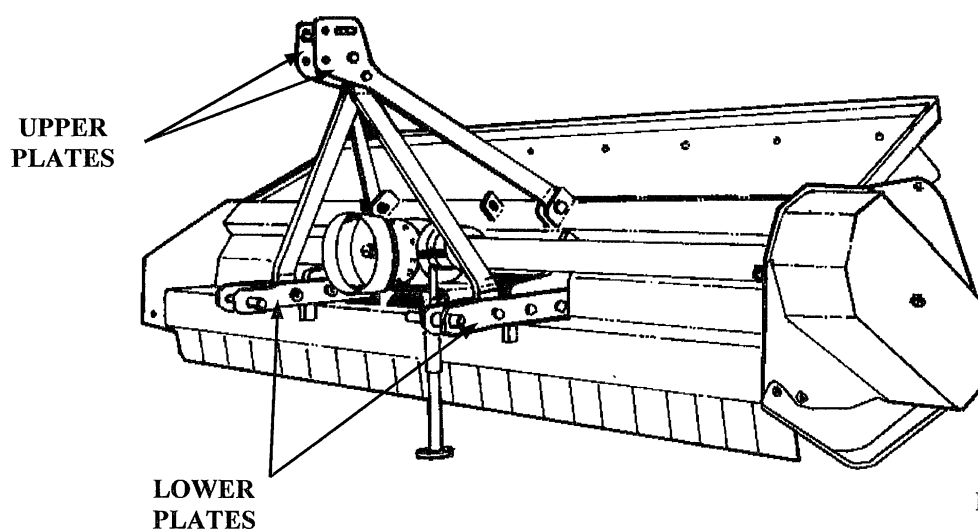





FIG. 1

 Connect the hitch point of the tractor to the upper plates of the machine using a hitch pin and the hair clip pin (see fig. 1).

 Raise the machine and lean it on its support leg, fixing it with the pin.

 Lower the machine and by means of the tie rod of the hitch point, which permits regulation of the machine's inclination, set the machine even to the ground-floor (see fig. 2). This procedure extends life time of the PTO shaft and the machine.

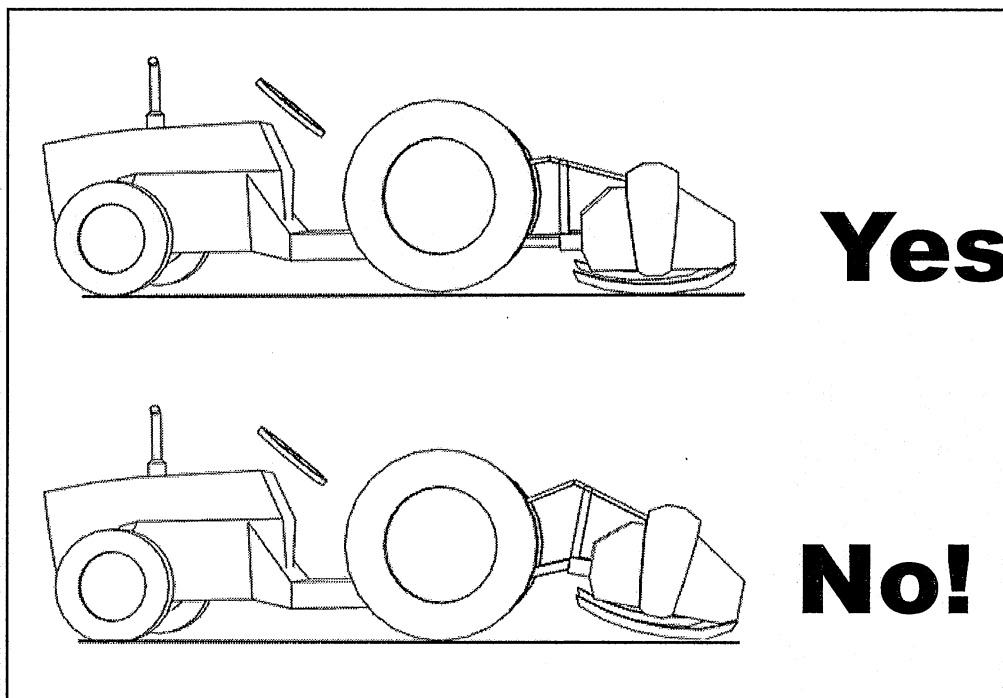



FIG. 2

 Connect the PTO shaft and be sure it is correctly connected to the tractor and the machine.

## Shortening the PTO shaft



Due to the many different types of tractors, it may be necessary to shorten the PTO shaft.




Always refer to the manual of the driveline's manufactures. Read it carefully.




In case shortening is needed, listed below are some basic guidelines on performing this modification. Determine how much length is to be removed, then:

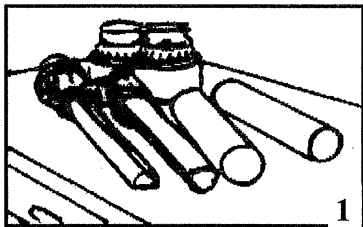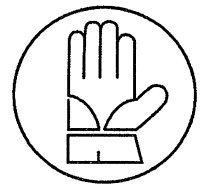

1) Remove plastic protection (both sections)

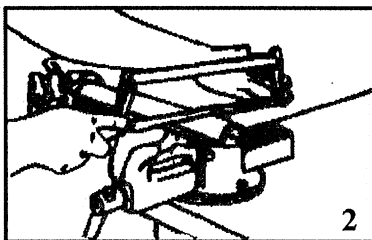



2) Cut the excess length of both tubes

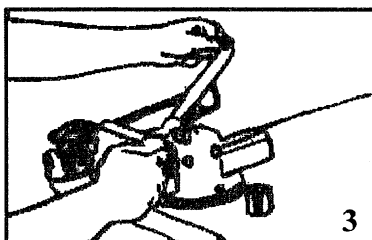



3) Deburr and clean the saw-dust off ends of tubes. Remove packing inside shaft tubing



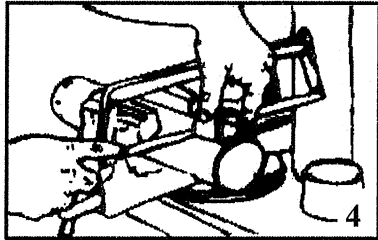

-  4) Cut the plastic protection to the same length you have cut the joints

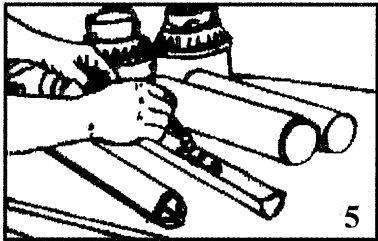


-  5) Grease the male joint section and reassemble protection



Do not use PTO shafts without proper shielding installed.

# CUTTING HEIGHT ADJUSTMENT

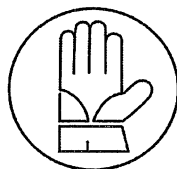

To set the machine's cutting height, follow one of the next three instructions:

## Adjustment by skid

If your machine is equipped with skids, adjust both of these as follows (see fig. 1):

- Loosen nut "a";
- Unscrew both nuts "b";
- Adjust skid as needed screwing back the two screws relative to nuts "b" in one of the pair of adjacent holes located in the skid itself;
- Adjust nut "a".

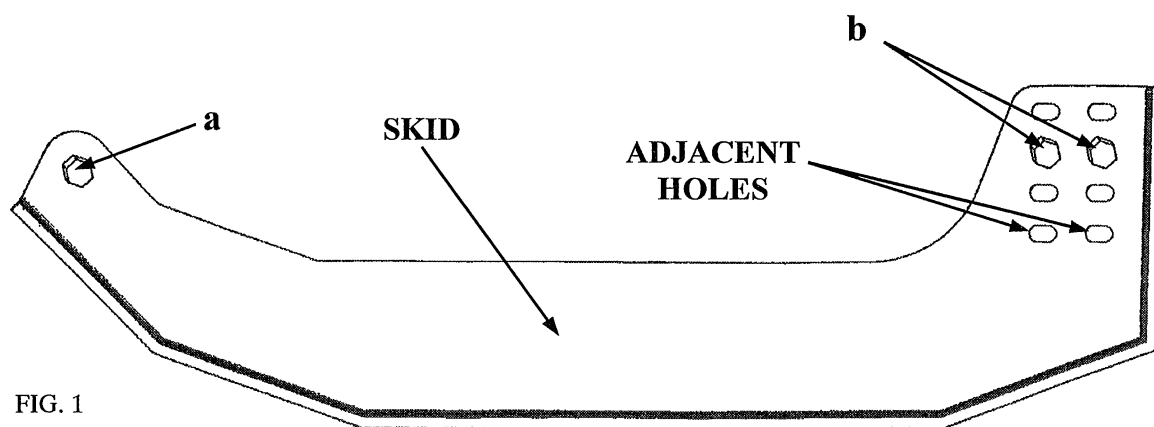


FIG. 1



To get on even soil, it is advisable to adjust both skids in the same way.

## Adjustment by roller

If your machine is equipped with rear roller, adjustment is carried out through the two support plates of the roller, as follows (see fig. 2):

- Loosen nut “c”;
- Unscrew both nuts “d”;
- Adjust roller’s height as needed screwing back the two screws relative to nuts “d” in one of the pair of adjacent holes located on the support plate itself;
- Adjust nut “c”.


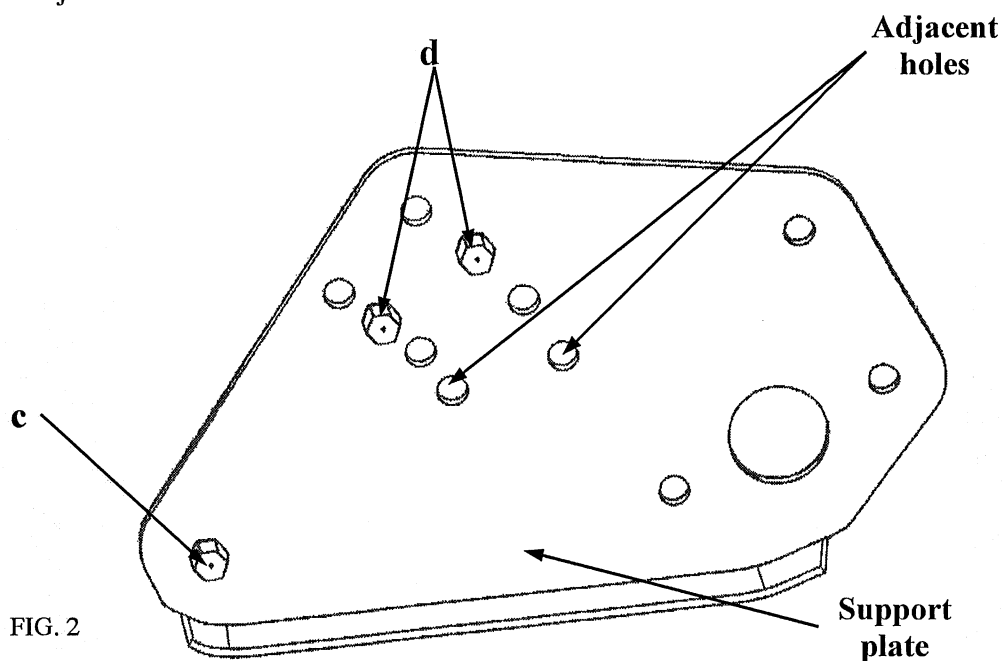


FIG. 2


 


To get on even soil, it is advisable to adjust both support plates of the roller in the same way.

## Adjustment by rear wheels

 If your machine is equipped with rear wheels, the adjustment is carried out in each wheel by regulating each of the two wheel arms, as follows (see fig. 3):

- Loosen screw “e”;
- Unscrew screw “f”;
- Adjust the cutting height as needed screwing back screw “f” in one of the holes located in the wheel arm itself;
- Adjust screw “e”.

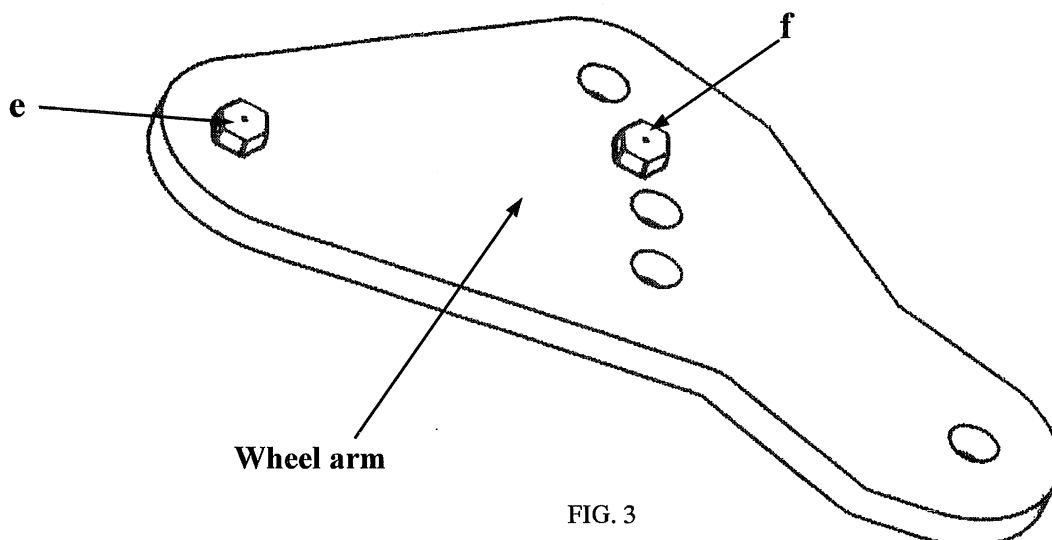

For each wheel adjust the two arms in the same way.



To get on even soil, make sure both wheels are adjusted in the same way.

# BEGINNING WORK



 
After completing all safety controls, to avoid damage start as follows:

- Raise the machine off the ground in order to let the knives start moving without touching ground.
- Maintaining the machine raised, engage the tractor PTO at suggested engine RPM.
- Start moving the tractor forward and then gradually lower the machine.


## Cutting tips




Proper ground speed for cutting will depend upon the height, type and density of the grass to be cut. However we suggest not to exceed 7 Km/h.



 To avoid damage to rotor and frame as a consequence of impact of the knives with soil or solid objects, it is advisable not to carry out low height cuts.




 During work, before making a turn, always raise the machine to avoid damage to the support plates of the roller or to the lateral sides to which are attached the skids.



Avoid going backwards with the wheels touching ground to reduce risk of damage to the wheels and its arms. Raise the machine before going backwards.

# TROUBLE SHOOTING

 

During work several problems can happen:

## Unusual noise

While working, if the **machine** made **unusual noise**, the operator must **stop it immediately** and follow next instructions:

- **Check for broken/bent parts.**
- **Check for correct oil level in the gearbox case.**

When present incorrect oil level (see chapter on maintenance), the gears of the gearbox are not lubricated correctly, and if continue to rotate, would determine a significant **increase in oil temperature**. If continue working in this condition **will quickly take to damage gear bearings**.

- **Check knives conditions.**

If some of the knives are broken, bent or worn, this will take to unbalance rotor, and if continue moving will take to brake support bearings and frame welding in a short time. To avoid this inconvenience it is advisable to replace all knives at the same time with originals (see chapter on maintenance).

- **Check condition of the bearings that support the rotor.**

As a result of inadequate lubrication (see chapter on maintenance), it is possible that one of the two support bearings of the rotor has been damaged. The rotor begins to oscillate causing excessive vibration of the frame and in short time causing the damage of its weldings. Another possible cause of damage of a bearing is the hard impact of the rotor with a solid object, as a consequence of improper use of the machine.

## Cutting defects

After work, if cut doesn't result uniform and clean, follow next instructions:

- **Check knife conditions.**

In case of worn knives, you need to replace them (see chapter on maintenance).

- **Check that cutting height adjustment has been done correctly.**

It is possible that adjustment has not been done in the same way for both skids (when adjustment done by skid), or for both the support plates of the rear roller (when adjustment done by roller), or for both the wheels (when adjustment done by wheels).

If after work quality of the cut is not the same as before, you must check the belt's condition, after removing the cover that protects these. In fact, belt sliding is possible not letting the knives cut with adequate force. Belt sliding can be a consequence of lack of tensioning (belt too slow) or wear (see chapter on maintenance).

- **If belts present signs of deterioration (even of small entity), these must be replaced immediately.**
- **If belts are slow, immediate tensioning must be done.**

If after work the cut doesn't present clean, it is possible that the machine's going speed is **not opportunely adequate** to the number of turns the rotor does, and therefore to the cutting speed of the knives. Often happens that speed of the machine doesn't give enough time to the knives for a correct cutting.



Before checking the machine to find the possible cause of malfunctioning, be sure the tractor's PTO is disconnected, tractor's engine turned off, brakes on, key ignition off the command board, and the machine completely lowered to the ground.

# DISCONNECTING THE MACHINE FROM THE TRACTOR



Disconnecting of the machine must be carried out on flat area, and it is considered a very dangerous operation. You must pay attention. Follow these instructions:



While remaining in the tractor seat, put the tractor PTO in neutral.



When the rotors are completely stopped, turn off the engine and set the parking brakes.



Remove the ignition key.



Descend from the tractor and disconnect the driveline.



If you have an hydraulic fold machine, disconnect hydraulic hoses from the tractor.



Engage the parking stand.




Disconnect the hitch of the drawbar from the tractor.



Before disconnecting the driveline, be sure the tractor PTO is in neutral and engine is off.




# STORING OF THE MACHINE

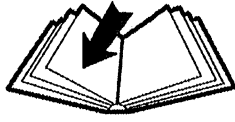

As your machine is an investment and if remains unused for a long period, we suggest the following procedures:

- Wash and dry the machine;
- Check all moving parts. For excessive wear replace the parts or contact your local dealer;
- Check bolts and nuts for proper tightness;
- Lubricate all the active parts like bearings, all grease zerk locations and other pivot or wear points that may not have a fitting;
- Lubricate all not-painted parts;
- Store the machine in a clean and dry place under roof.

# MAINTENANCE

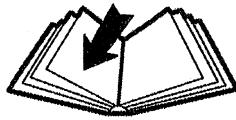

For long life of your machine and trouble free operation, regular program of maintenance is required.

The recommended phases of maintenance are for normal use and can be varied depending on the different conditions.



Always disengage tractor PTO before starting maintenance.



## Every 10 working hours

- Check for loose bolts that fix the knives to the rotor. Tighten as needed;
- Grease the PTO shaft components;
- Clean the end of PTO shaft with non toxic / non inflammable detergent;
- Be sure driveline shields are in place and in good condition;
- Grease lateral supports of the rotor. Before greasing, clean the grease nipple correctly for better lubrication. The lateral support of the right is at sight, the left one is covered by the cover itself. To be able to grease the left one, you will find a hole in the back part of the cover. Use lithium type grease NLGI2.
- Clean the machine.

## Every 20 working hours

- Check belt tensioning by measuring belt tightness. Correct tightness results when belt deflection along the front side of the belt is 1 cm, as a result of the pressure applied with the index finger to the centre of the belt length (see fig. 1).



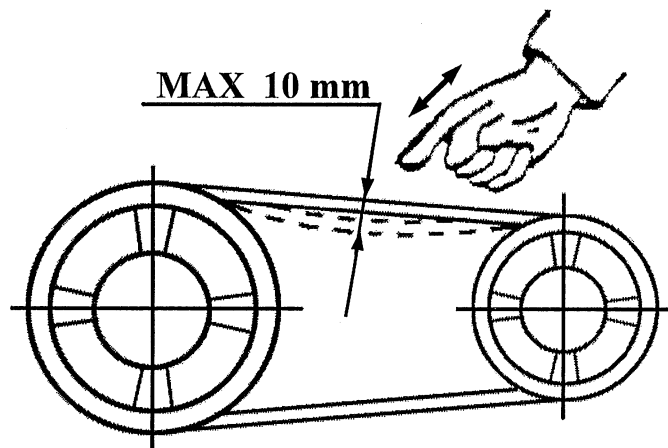



FIG. 1

In the case belt adjustment was needed, proceed as follows (see figs. 2 and 3):


- take out the cover;
- loosen the four screws that fix the gearbox to its support plate;
- rotate nut “a” counter clockwise, maintaining nut “b” fixed with a wrench.
- maintaining nut “b” fixed with a wrench, rotate clockwise screw for tensioning “c” in order to move the tube in forward direction.
- be sure that deflection along the front side of the belt is 1 cm;
- adjust back nuts “a” and “b”.
- In order that the upper pulley doesn't result inclined making the belt worn rapidly, straighten the tube as follows:
  - rotate nut “d” counter clockwise, maintaining nut “e” fixed with a wrench.
  - maintaining nut “e” fixed with a wrench, rotate screw “f” clockwise until straightening the tube.
  - adjust back nuts “d” and “e”.
- adjust back the four screws that fix the gearbox to its support plate.

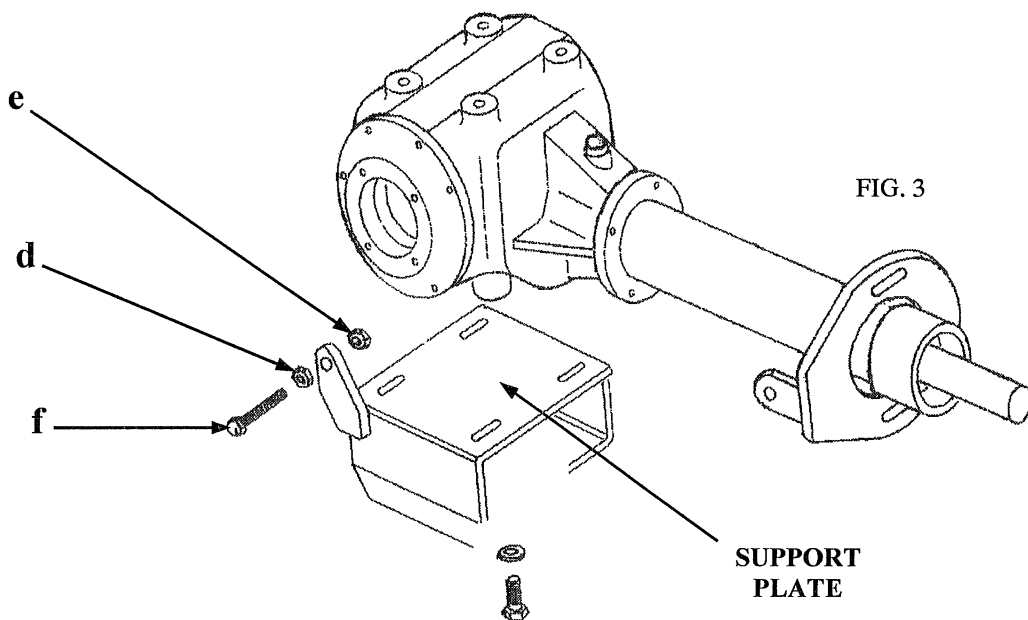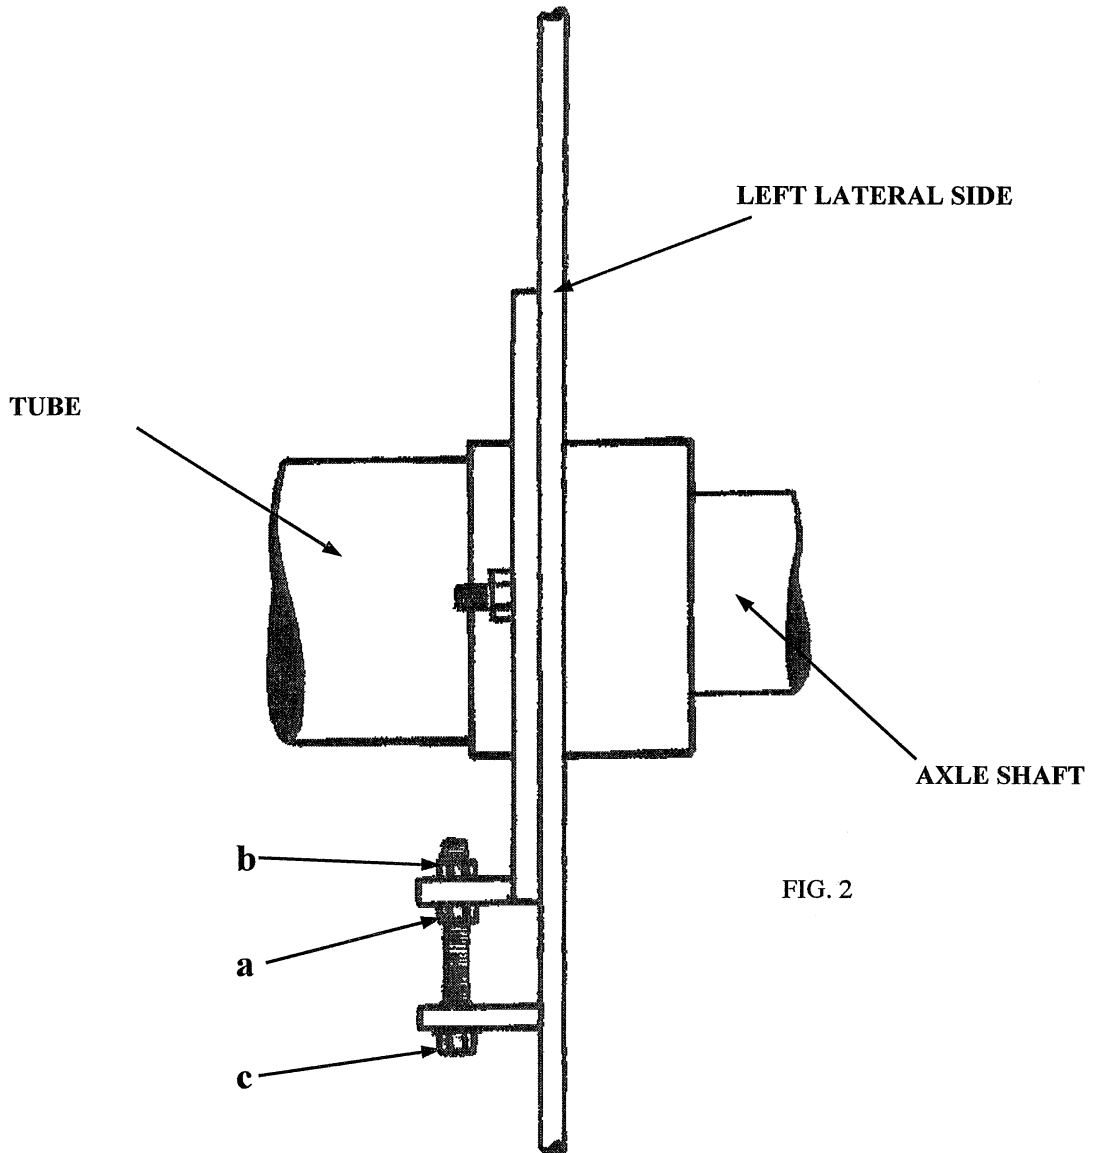

If belt presents signs of deterioration (even of small entity), or belt tension adjustment is not possible because on maximum limit of tensioning, provide to replace it. Before replacement clean both pulleys.

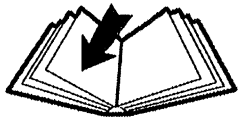

Remember to tighten the belt correctly.

 

If machine requires frequent belt replacement, which is not normal, check that rotor rotates liberally without obstacles in movement.

- Be sure knives are sharpen uniformly. If necessary substitution, replace with original knives.
- Check gearbox correct oil level. To proceed, remove the oil level plug (see fig. 4). If needed to add oil, remove the filler plug located in the top part of the box, and fill in until oil starts running out of the level hole.


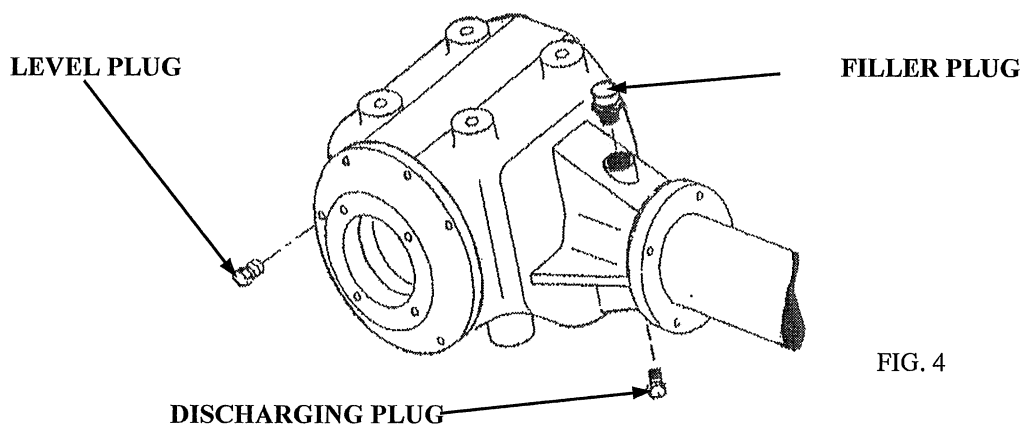


FIG. 4

- Check correct oil level of the tube. To proceed, remove the oil level plug (see fig. 5). If needed to add oil, remove the filler plug and fill in until oil starts running out of the oil level hole.

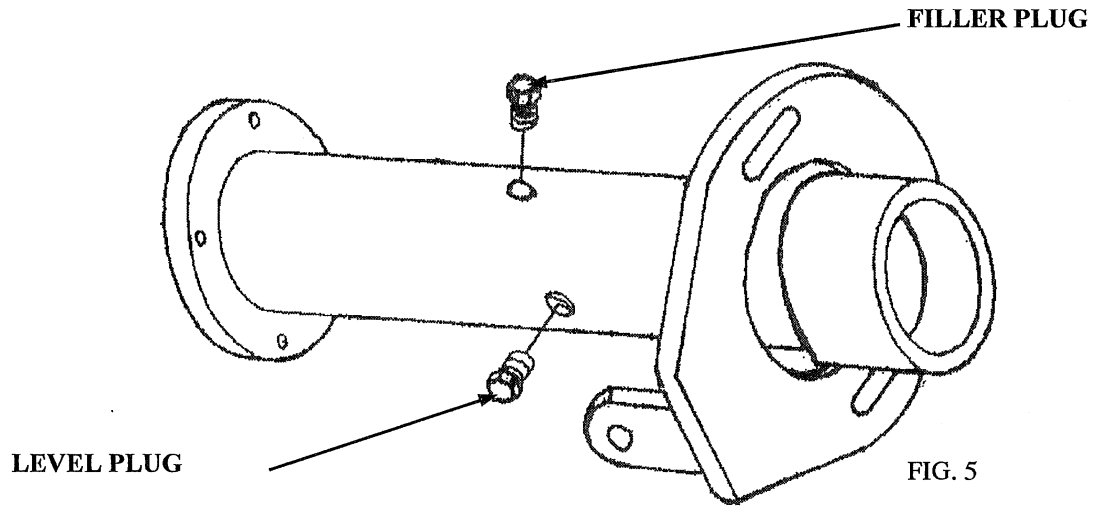

### Every 50 working hours

- For those versions of the machine equipped with rear roller, proceed to grease its lateral supports. Before greasing, clean the grease nipple correctly for better lubrication. Use lithium type grease NLGI2.
- For those versions of the machine equipped with back wheels, grease the moving supports of the wheels themselves. Before greasing, clean the grease nipple correctly for better lubrication. Use lithium type grease NLGI2.

### First 100 working hours

- When the machine has done its first 100 hours, change the oil from the gearbox. To proceed, remove the plug located under the box, drain all the oil through the discharging hole, then fill in with new oil through the filler hole. This substitution is necessary because the gears are new and so are subject to quicker worn. Use oil SAE 80 W 90 API GL4.


## Every 300 working hours

- Completely replace gearbox oil, proceeding as explained before. Use oil SAE 80 W 90 API GL4.

# TOXICOLOGICAL INFORMATION ABOUT LUBRICANTS



	TYPES OF DANGER	PROTECTIVE EQUIPMENT	PRIMARY INTERVENTION
<b>SKIN</b>	Possible irritation after prolonged contact	Gloves and/or lotion barrier	Wash with soap & water
<b>EYES</b>	Possible irritation on contact	Protective goggles	Rinse thoroughly w/ running water
<b>INHALATION</b>	Possible irritation after prolonged exposure	Maintain an oil mist level of 5mg/m <sup>3</sup> between TLV-TWA limits	Expose to fresh air and call medical assistance immediately
<b>INGESTION</b>	Such possibility not considered		DO NOT provoke vomiting; call medical assistance immediately

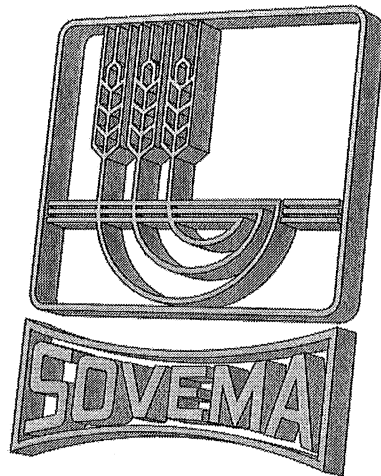


**USE EXCLUSIVELY ORIGINAL  
SPARE PARTS FROM  
SOVEMA**




# SPARE PARTS LIST

## FC Model

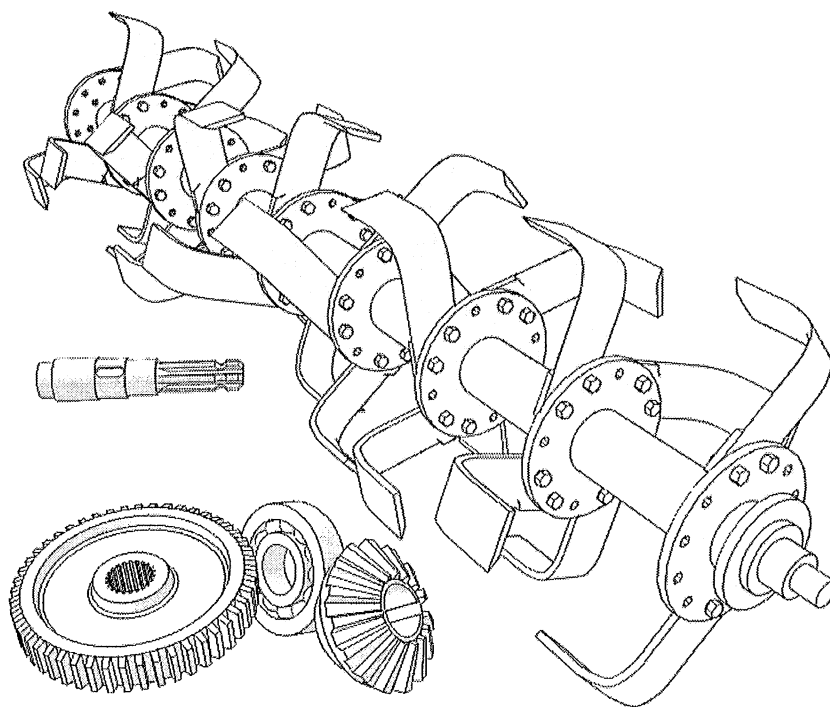

# FC


## Frame

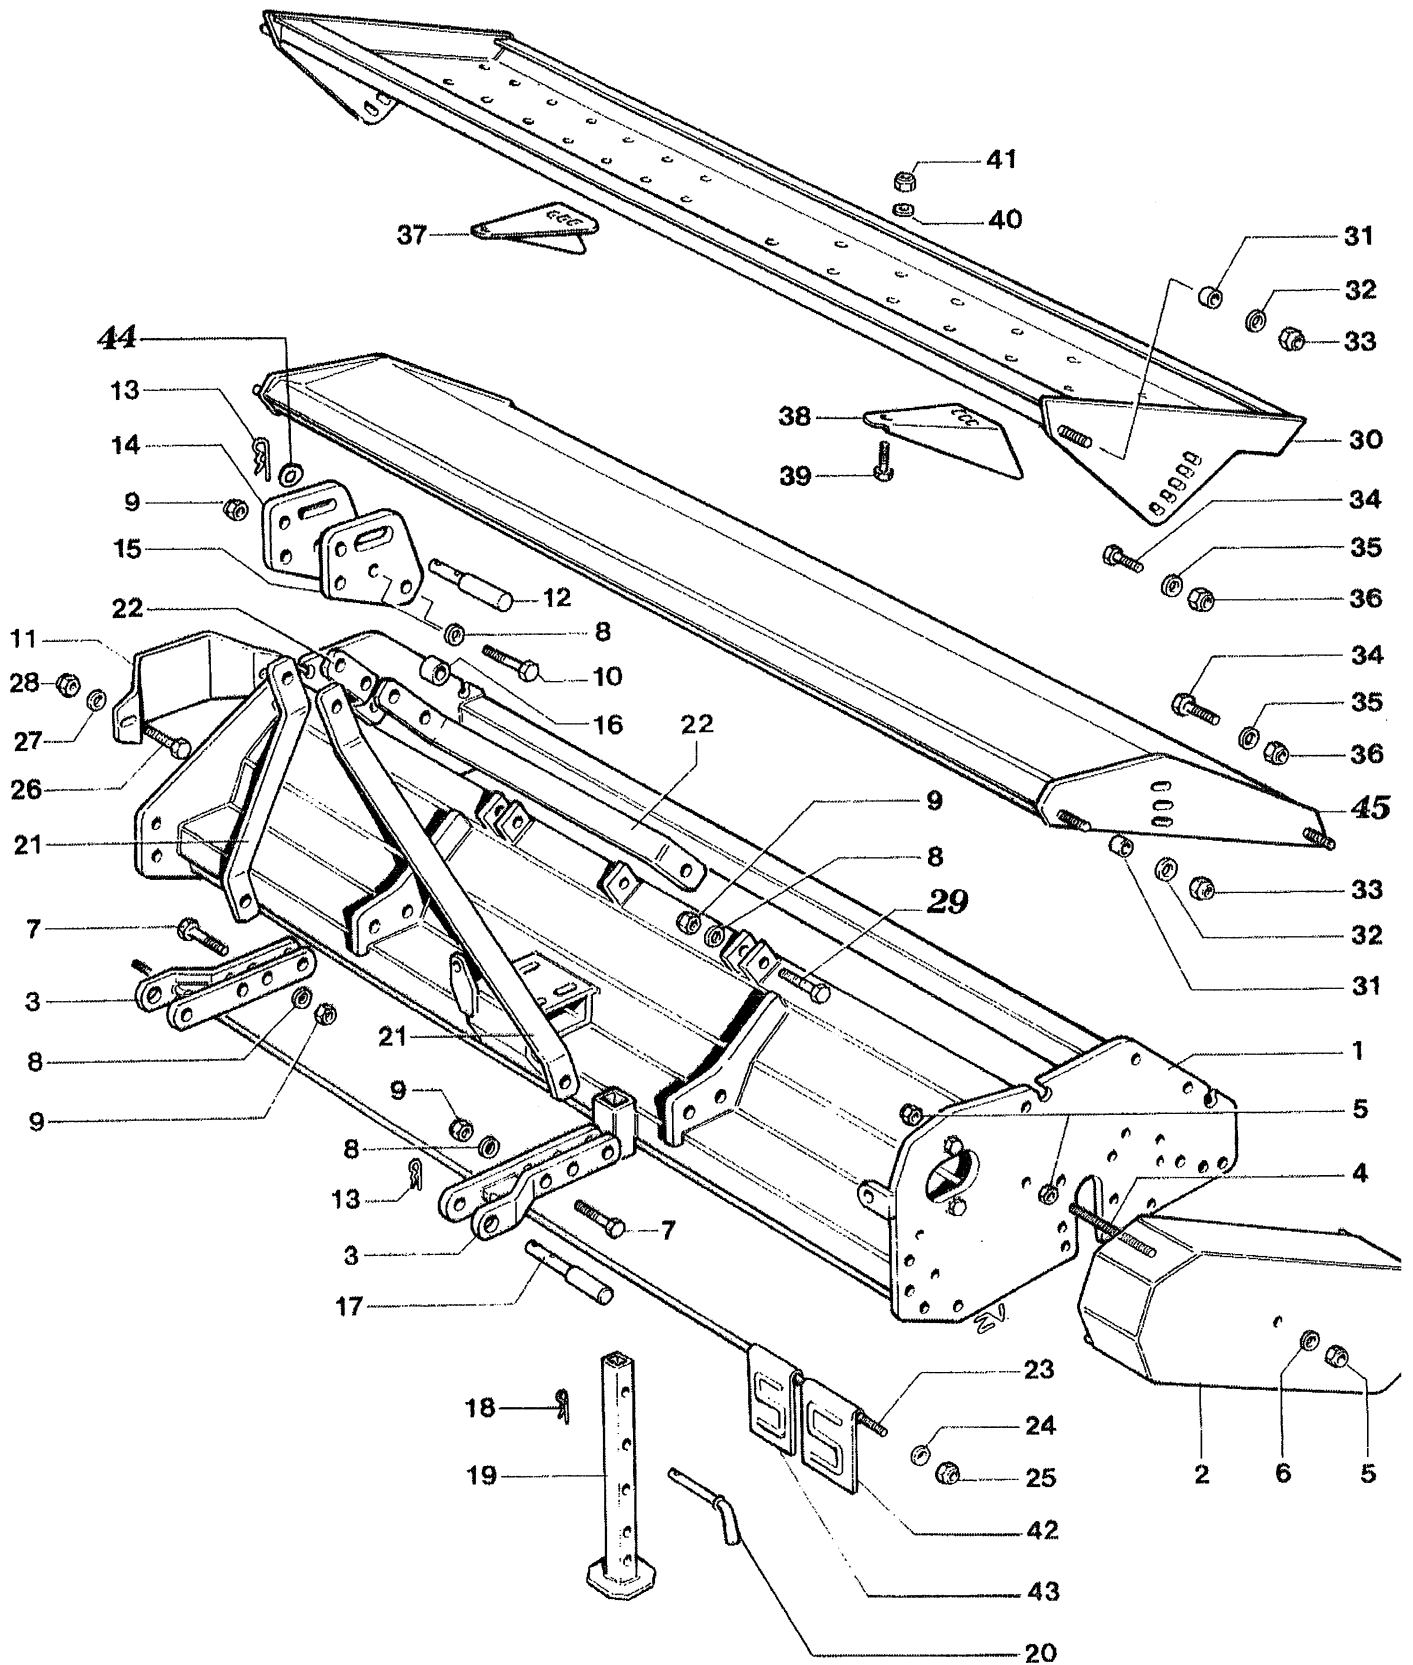

REF	CODE	QTY	ENGLISH	FRANÇAIS	ITALIANO	DEUTSCH	ESPAÑOL	NOTE
1	900.142.260	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	140
1	900.142.261	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	160
1	900.142.263	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	200
1	900.142.264	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	230
1	900.142.265	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	250
1	900.142.266	1	FRAME	CHASSIS	TELAIO	RAHMEN	BASTIDOR	290
2	900.272.002	1	COVER	CARTER	CARTER	GEHAUSE	CARTER	
3	900.238.357	2	ARM	BRAS	BRACCIO	ARM	BRAZO	
4	900.238.384	1	BAR	BARRE	BARRA	STANGE	BARRA	
5	900.103.018	3	NUT	ECROU	DADO	MUTTER	TUERCA	
6	900.104.045	1	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
7	900.102.333	6	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
8	900.104.048	10	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
9	900.103.106	10	NUT	ECROU	DADO	MUTTER	TUERCA	
10	900.102.331	2	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
11	900.238.002	1	GUARD	PROTECTION	PROTEZIONE	SCHUTZ	PROTECCION	
12	900.116.028	1	PIN	TOURILLON	PERNO	STIFT	PERNO	
13	900.108.017	3	SPLIT PIN	GOUPILLE	COPIGLIA	ARRETIERUNG	PASADOR	
14	900.238.354	1	PLATE	PLAT	PIATTO	PLATTE	PLACA	
15	900.235.355	1	PLATE	PLAT	PIATTO	PLATTE	PLACA	
16	900.238.356	1	BUSH	COQUILLE	BOCCOLA	BUCHSE	CASQUILLO	
17	900.116.033	2	PIN	TOURILLON	PERNO	STIFT	PERNO	
18	900.108.005	-	SPLIT PIN	GOUPILLE	COPIGLIA	ARRETIERUNG	PASADOR	
19	900.238.001	-	STAND	SUPPORT	SOSTEGNO	STUETZE	SOPORTE	
20	900.207.008	-	PIN	TOURILLON	PERNO	STIFT	PERNO	
21	900.238.352	2	TIE ROD	TIRANT	TIRANTE	ZUGSTANGE	TIRANTE	
22	900.238.353	2	TIE ROD	TIRANT	TIRANTE	ZUGSTANGE	TIRANTE	
23	900.238.057	1	ROD	TIGE	ASTA	STANGE	VARILLA	140
23	900.238.058	1	ROD	TIGE	ASTA	STANGE	VARILLA	160
23	900.238.059	1	ROD	TIGE	ASTA	STANGE	VARILLA	200
23	900.238.060	1	ROD	TIGE	ASTA	STANGE	VARILLA	230
23	900.238.061	1	ROD	TIGE	ASTA	STANGE	VARILLA	250
23	900.238.062	1	ROD	TIGE	ASTA	STANGE	VARILLA	290
24	900.104.046	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
25	900.103.019	2	NUT	ECROU	DADO	MUTTER	TUERCA	
26	900.102.121	2	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
27	900.104.045	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
28	900.103.018	2	NUT	ECROU	DADO	MUTTER	TUERCA	
29	900.102.332	2	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
30	900.114.110	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	140
30	900.114.111	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	160
30	900.114.112	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	200
30	900.114.113	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	230
30	900.114.114	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	250
30	900.114.115	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	290
31	900.211.028	4	BUSH	COQUILLE	BOCCOLA	BUCHSE	CASQUILLO	
32	900.104.043	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
33	900.103.023	4	NUT	ECROU	DADO	MUTTER	TUERCA	
34	900.102.102	4	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
35	900.104.046	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
36	900.103.019	4	NUT	ECROU	DADO	MUTTER	TUERCA	
37	900.238.052	-	AILERON	AILERON	ALETTONE	FLUEGEL	ALERON	
38	900.238.053	-	AILERON	AILERON	ALETTONE	FLUEGEL	ALERON	
39	900.102.121	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
40	900.104.045	-	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
41	900.103.018	-	NUT	ECROU	DADO	MUTTER	TUERCA	
42	900.238.064	-	FLAP	AILETTE	ALETTA	SCHUTZLAMELLE	ALETA	
43	900.238.063	-	FLAP	AILETTE	ALETTA	SCHUTZLAMELLE	ALETA	
44	900.104.048	1	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
45	900.114.116	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	140
45	900.114.117	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	160
45	900.114.118	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	200
45	900.114.119	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	230
45	900.114.120	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	250
45	900.114.121	1	SHIELD	CAPOT	COFANO	HAUBE	CARCASA	290

# FC


Gearbox 140—250

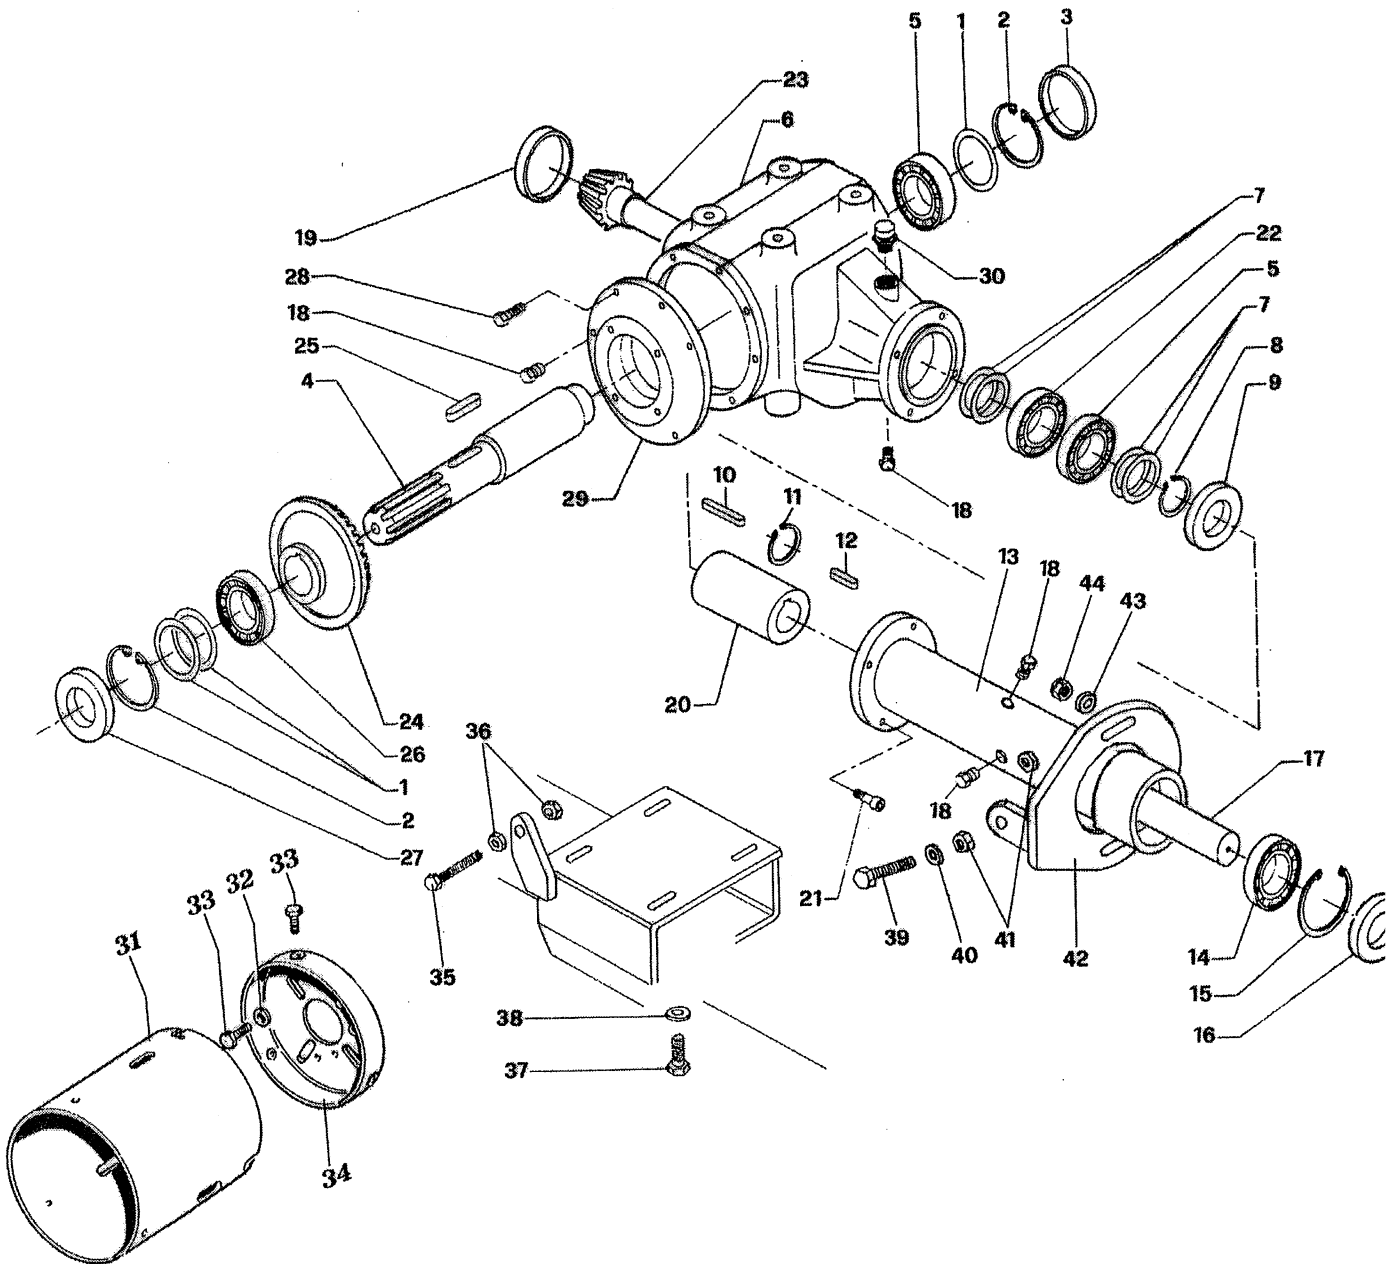

REF	CODE	QTY	ENGLISH	FRANÇAIS	ITALIANO	DEUTSCH	ESPAÑOL	NOTE
1	900.107.066	2	SHIM	EPAISSEUR REG.	SPESSORE	STAERKE	ESPESOR REG.	
2	900.106.011	2	CIRCLIP	SERFLEX	SEEGER	SEEGER	SEEGER	
3	900.238.320	1	LID	COUVERCLE	COPERCHIO	DECKEL	TAPA	
4	900.238.321	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	
5	900.100.033	2	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
6	900.238.322	1	CASE	BOITE	SCATOLA	KISTE	CAJA	
7	900.107.047	2	SHIM	EPAISSEUR REG.	SPESSORE	STAERKE	ESPESOR REG.	
8	900.106.003	1	CIRCLIP	SERFLEX	SEEGER	SEEGER	SEEGER	
9	900.101.019	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
10	900.105.044	1	KEY	CLAVETTE	CHIAVETTA	KEIL	CHAVETA	
11	900.106.026	1	CIRCLIP	SERFLEX	SEEGER	SEEGER	SEEGER	
12	900.105.005	1	KEY	CLAVETTE	CHIAVETTA	KEIL	CHAVETA	
13	900.238.323	1	TUBE	TUBE	CANNOTTO	ROHR	TUBO	140-160
13	900.238.324	1	TUBE	TUBE	CANNOTTO	ROHR	TUBO	200
13	900.238.325	1	TUBE	TUBE	CANNOTTO	ROHR	TUBO	230
13	900.238.326	1	TUBE	TUBE	CANNOTTO	ROHR	TUBO	250
14	900.100.016	1	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
15	900.106.005	1	CIRCLIP	SERFLEX	SEEGER	SEEGER	SEEGER	
16	900.101.076	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
17	900.238.327	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	140-160
17	900.238.328	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	200
17	900.238.329	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	230
17	900.238.330	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	250
18	900.102.079	4	PLUG	BOUCHON	TAPPO	DECKEL	TAPON	
19	900.238.331	1	LID	COUVERCLE	COPERCHIO	DECKEL	TAPA	
20	900.238.332	1	BUSH	COQUILLE	BOCCOLA	BUCHSE	CASQUILLO	
21	900.102.206	4	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
22	900.100.025	1	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
23	900.238.333	1	PINION	PIGNON	PIGNONE	RITZEL	PINON	
24	900.238.334	1	CROWN	COURONNE	CORONA	TELLERRAD	CORONA	
25	900.105.011	1	KEY	CLAVETTE	CHIAVETTA	KEIL	CHAVETA	
26	900.100.034	1	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
27	900.101.066	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
28	900.102.011	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
29	900.238.335	1	LID	COUVERCLE	COPERCHIO	DECKEL	TAPA	
30	900.102.236	1	PLUG	BOUCHON	TAPPO	DECKEL	TAPON	
31	900.117.072	1	GUARD	PROTECTION	PROTEZIONE	SCHUTZ	PROTECCION	
32	900.104.057	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
33	900.102.256	7	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
34	900.117.070	1	PROT. HOLDER	DISQUE	FONDELLO	ZWSCHUTZHALTER	DISCO	
35	900.102.334	1	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
36	900.103.035	2	NUT	ECROU	DADO	MUTTER	TUERCA	
37	900.102.034	4	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
38	900.104.027	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
39	900.102.286	1	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
40	900.104.044	1	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
41	900.103.051	2	NUT	ECROU	DADO	MUTTER	TUERCA	
42	900.238.358	1	BELT TIGHTENER	TENDCOURROIE	TENDICINGHIA	RIEMENPLATTE	TENDICINTA	
43	900.104.044	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
44	900.103.021	2	NUT	ECROU	DADO	MUTTER	TUERCA	

# FC


## Gearbox 290

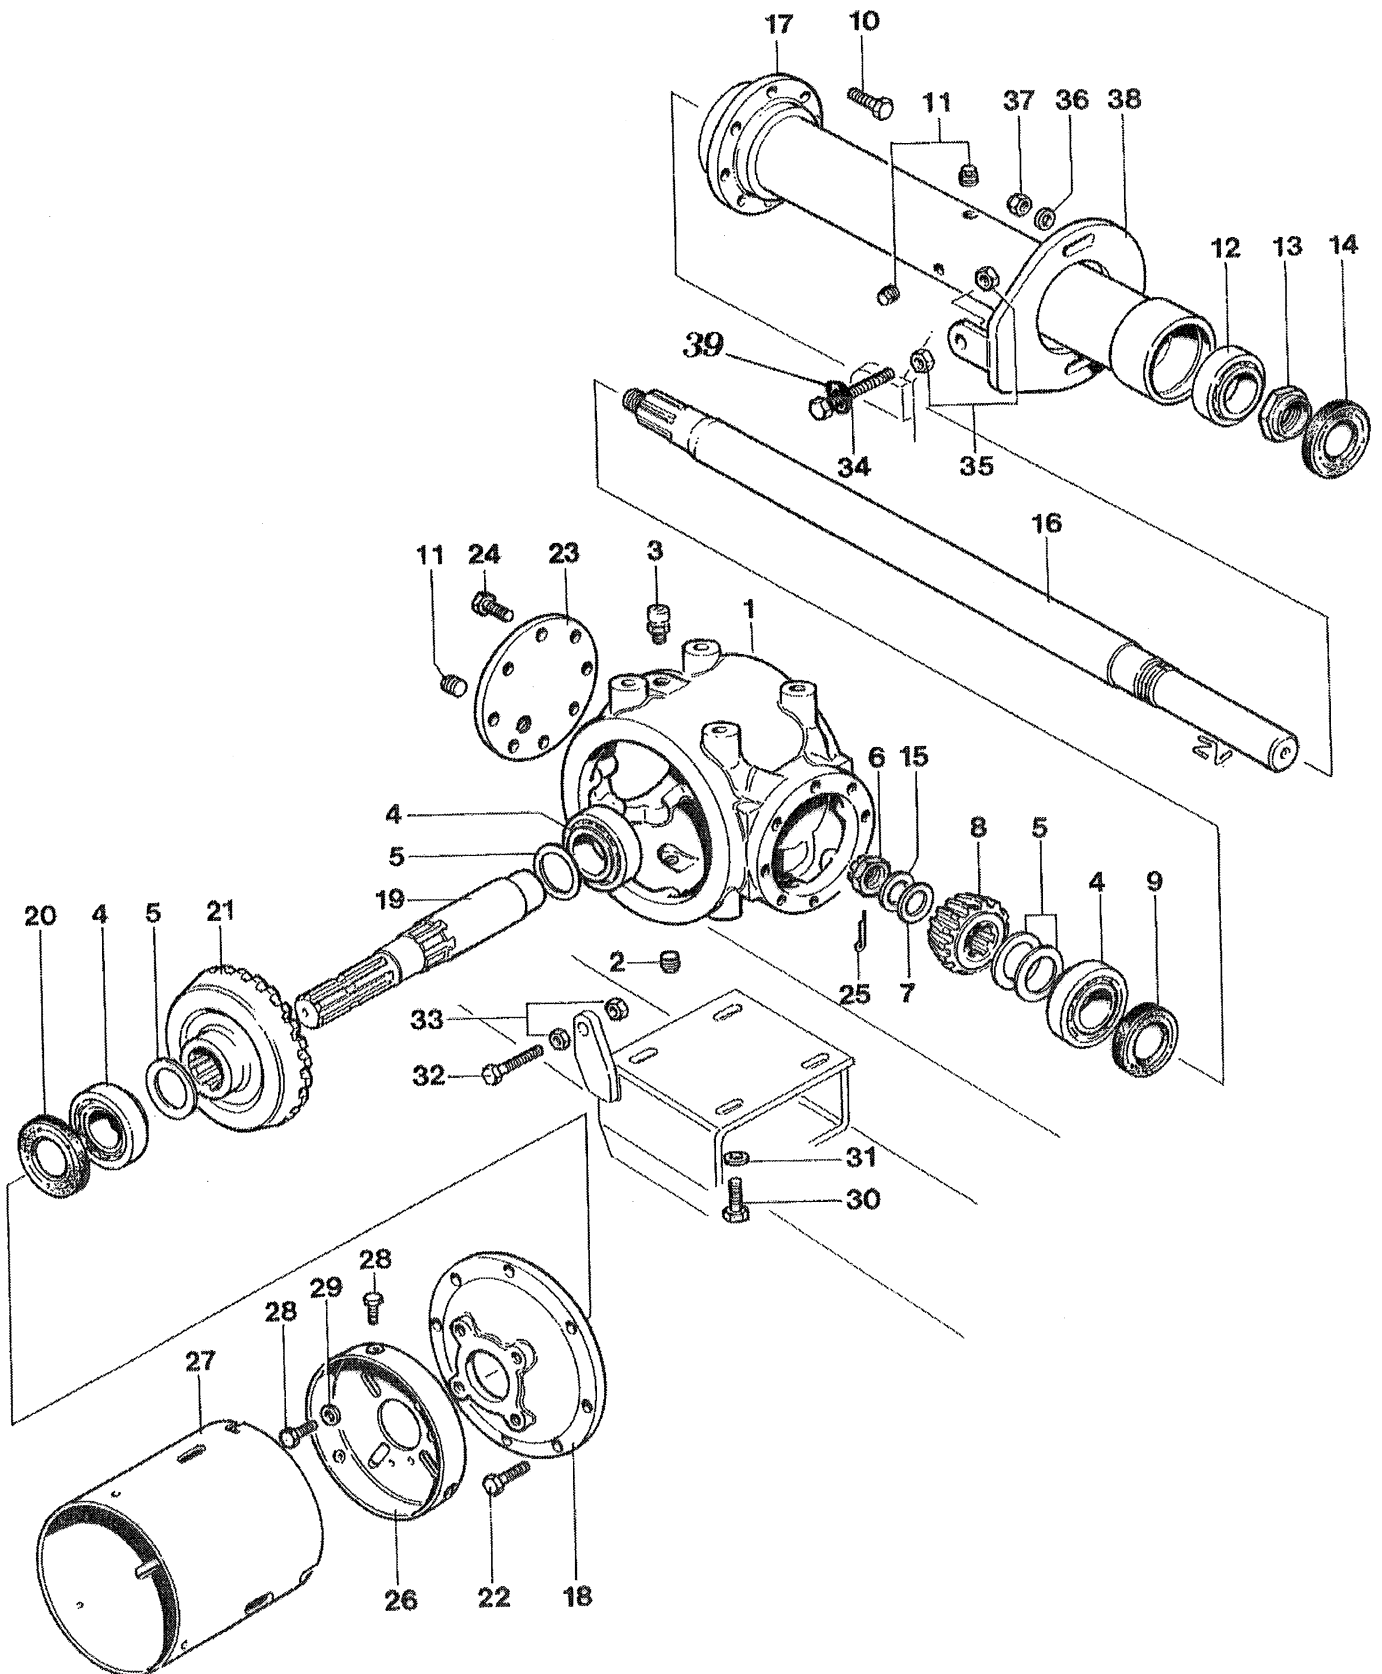

REF	CODE	QTY	ENGLISH	FRANÇAIS	ITALIANO	DEUTSCH	ESPAÑOL	NOTE
1	900.238.168	1	CASE	BOITE	SCATOLA	KISTE	CAJA	
2	900.102.173	1	PLUG	BOUCHON	TAPPO	DECKEL	TAPON	
3	900.102.236	1	PLUG	BOUCHON	TAPPO	DECKEL	TAPON	
4	900.100.059	3	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
5	900.107.041	3	SHIM	EPAISSEUR REG.	SPESSORE	STAERKE	ESPESOR REG.	
6	900.103.014	1	RING NUT	EMBOUT	GHIERA	NUTMUTTER	CASQUILLO	
7	900.107.058	1	SHIM	EPAISSEUR REG.	SPESSORE	STAERKE	ESPESOR REG.	
8	900.238.181	1	PINION	PIGNON	PIGNONE	RITZEL	PINON	540 RPM
8	900.238.171	1	PINION	PIGNON	PIGNONE	RITZEL	PINON	1000 RPM
9	900.101.049	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
10	900.102.011	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
11	900.102.079	3	PLUG	BOUCHON	TAPPO	DECKEL	TAPON	
12	900.100.054	1	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
13	900.103.061	1	RING NUT	EMBOUT	GHIERA	NUTMUTTER	CASQUILLO	
14	900.101.064	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
15	900.107.059	1	SHIM	EPAISSEUR REG.	SPESSORE	STAERKE	ESPESOR REG.	
16	900.238.239	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	
17	900.238.240	1	TUBE	TUBE	CANNOTTO	ROHR	TUBO	
18	900.238.169	1	LID	COUVERCLE	COPERCHIO	DECKEL	TAPA	
19	900.238.172	1	SHAFT	ARBRE	ALBERO	WELLE	EJE	
20	900.101.004	1	OIL SEAL	PARE-HUILE	PARAOLIO	SIMMERING	PARA-ACEITE	
21	900.238.238	1	CROWN	COURONNE	CORONA	TELLERRAD	CORONA	540 RPM
21	900.238.170	1	CROWN	COURONNE	CORONA	TELLERRAD	CORONA	1000 RPM
22	900.102.010	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
23	900.238.175	1	LID	COUVERCLE	COPERCHIO	DECKEL	TAPA	
24	900.102.190	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
25	900.108.027	1	SPLIT PIN	GOUPILLE	COPIGLIA	ARRETIERUNG	PASADOR	
26	900.117.070	1	PROT. HOLDER	DISQUE	FONDELLO	ZWSCHUTZHALTER	DISCO	
27	900.117.072	1	GUARD	PROTECTION	PROTEZIONE	SCHUTZ	PROTECCION	
28	900.102.256	7	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
29	900.104.057	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
30	900.102.034	4	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
31	900.104.027	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
32	900.102.334	1	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
33	900.103.035	2	NUT	ECROU	DADO	MUTTER	TUERCA	
34	900.102.286	1	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
35	900.103.051	2	NUT	ECROU	DADO	MUTTER	TUERCA	
36	900.104.044	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	
37	900.103.021	2	NUT	ECROU	DADO	MUTTER	TUERCA	
38	900.238.359	1	BELT TIGHTENER	TENDCOURROIE	TENDICINGHIA	RIEMENPLATTE	TENDICINTA	
39	900.104.044	1	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIEBE	ARANDELA	

# FC


## Accessories

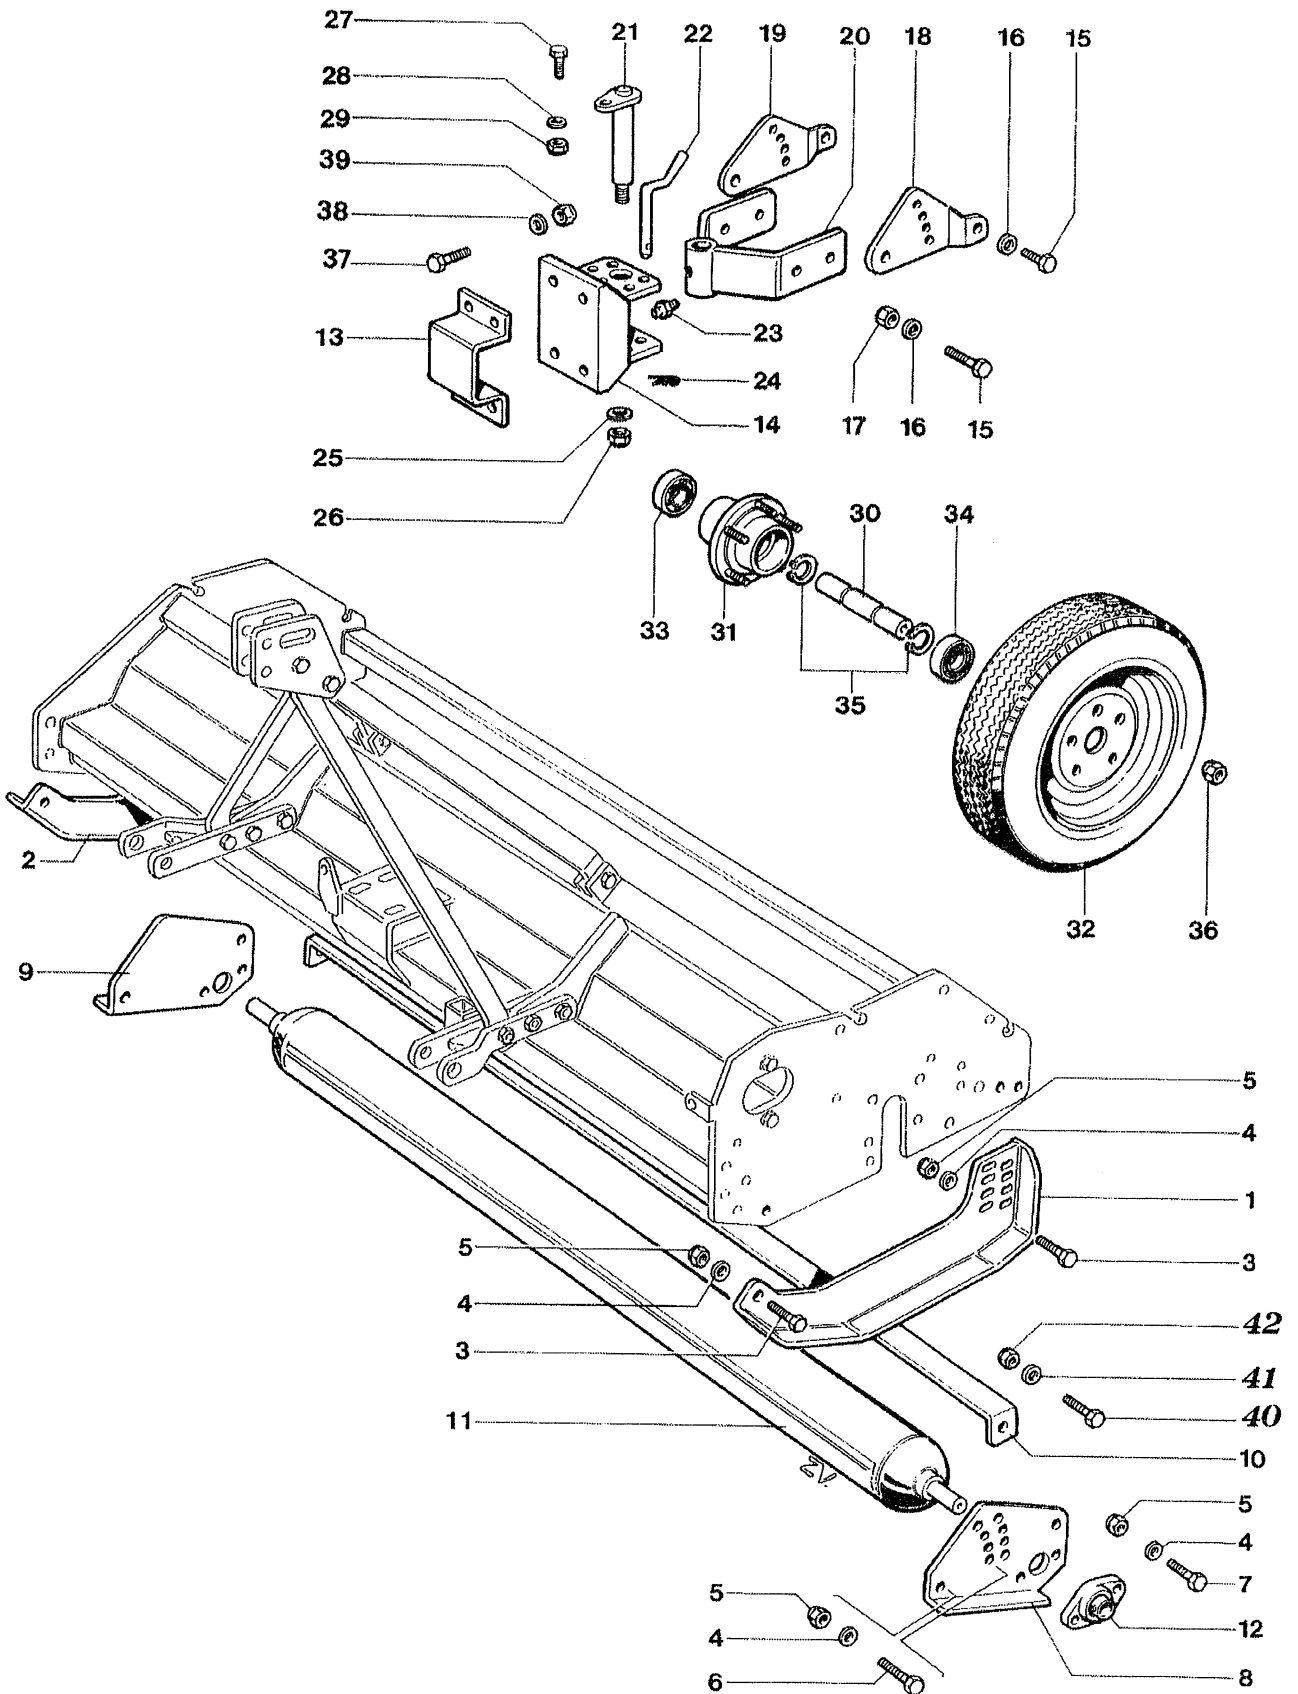




REF	CODE	QTY	ENGLISH	FRAANÇAIS	ITALIANO	DEUTSCH	ESPAÑOL	NOTE
1	900.238.351	1	SKID	PATIN	SLITTA	KUFE	CORREDERA	
2	900.238.350	1	SKID	PATIN	SLITTA	KUFE	CORREDERA	
3	900.102.188	6	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
4	900.104.044	-	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
5	900.103.021	-	NUT	ECROU	DADO	MUTTER	TUERCA	
6	900.102.096	6	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
7	900.102.112	4	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
8	900.238.367	1	PLATE	PLAQUE	PIASTRA	PLATTE	PLACA	
9	900.238.366	1	PLATE	PLAQUE	PIASTRA	PLATTE	PLACA	
10	900.238.374	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	140
10	900.238.375	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	160
10	900.238.376	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	200
10	900.238.377	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	230
10	900.238.378	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	250
10	900.238.379	1	SCRAPER	RACLEUR	RASCHIARULLO	WALZENSCHABER	RASCAROD.	290
11	900.238.122	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	140
11	900.238.123	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	160
11	900.238.124	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	200
11	900.238.125	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	230
11	900.238.126	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	250
11	900.238.127	1	ROLLER	ROULEAU	RULLO	WALZE	RODILLO	290
12	900.100.030	2	SUPPORT	SUPPORT	SUPPORTO	STUETZE	SOPORTE	
13	900.238.004	2	PLATE	PLAQUE	PIASTRA	PLATTE	PLACA	
14	900.238.360	2	SUPPORT	SUPPORTO	SUPPORTO	STUETZE	SOPORTE	
15	900.102.235	12	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
16	900.104.043	12	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
17	900.103.023	8	NUT	ECROU	DADO	MUTTER	TUERCA	
18	900.238.362	2	PLATE	PLAQUE	PIASTRA	PLATTE	PLACA	
19	900.238.385	2	PLATE	PLAQUE	PIASTRA	PLATTE	PLACA	
20	900.238.361	2	MOBILE SUPPORT	SUPPORT MOB.	SUPPORTO MOB.	STUETZE	SOPORTE M.	
21	900.238.364	2	PIN	TOURILLON	PERNO	STIFT	PERNO	
22	900.238.365	4	BLOCK WHEEL	ARRET-ROUE	SPINA FERMO R.	RADBLOCKIERUNG	PARO-RUEDA	
23	900.105.015	2	GREASE NIPPLE	GRAISSEUR	INGRASSATORE	SCHMIERNIPPEL	ENGRASADOR	
24	900.108.006	4	SPLIT PIN	GOUPILLE	COPIGLIA	ARRETIERUNG	PASADOR	
25	900.104.048	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
26	900.103.106	2	NUT	ECROU	DADO	MUTTER	TUERCA	
27	900.102.096	2	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
28	900.104.044	2	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
29	900.103.021	2	NUT	ECROU	DADO	MUTTER	TUERCA	
30	900.238.363	2	PIN	TOURILLON	PERNO	STIFT	PERNO	
31	900.238.017	2	HUB	MOYEU	MOZZO	NABE	MOZO	
32	900.238.009	2	WHEEL	ROUE	RUOTA	RAD	RUEDA	
33	900.100.131	2	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
34	900.100.130	2	BEARING	ROULEMENT	CUSCINETTO	KUGELLAGER	COJINETE	
35	900.106.013	4	CIRCLIP	SERFLEX	SEEGER	SEEGER	SEEGER	
36	900.238.317	10	NUT	ECROU	DADO	MUTTER	TUERCA	
37	900.102.033	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
38	900.104.044	8	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
39	900.103.021	8	NUT	ECROU	DADO	MUTTER	TUERCA	
40	900.102.102	2	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
41	900.104.046	4	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHIBE	ARANDELA	
42	900.103.019	2	NUT	ECROU	DADO	MUTTER	TUERCA	

# FC Rotor

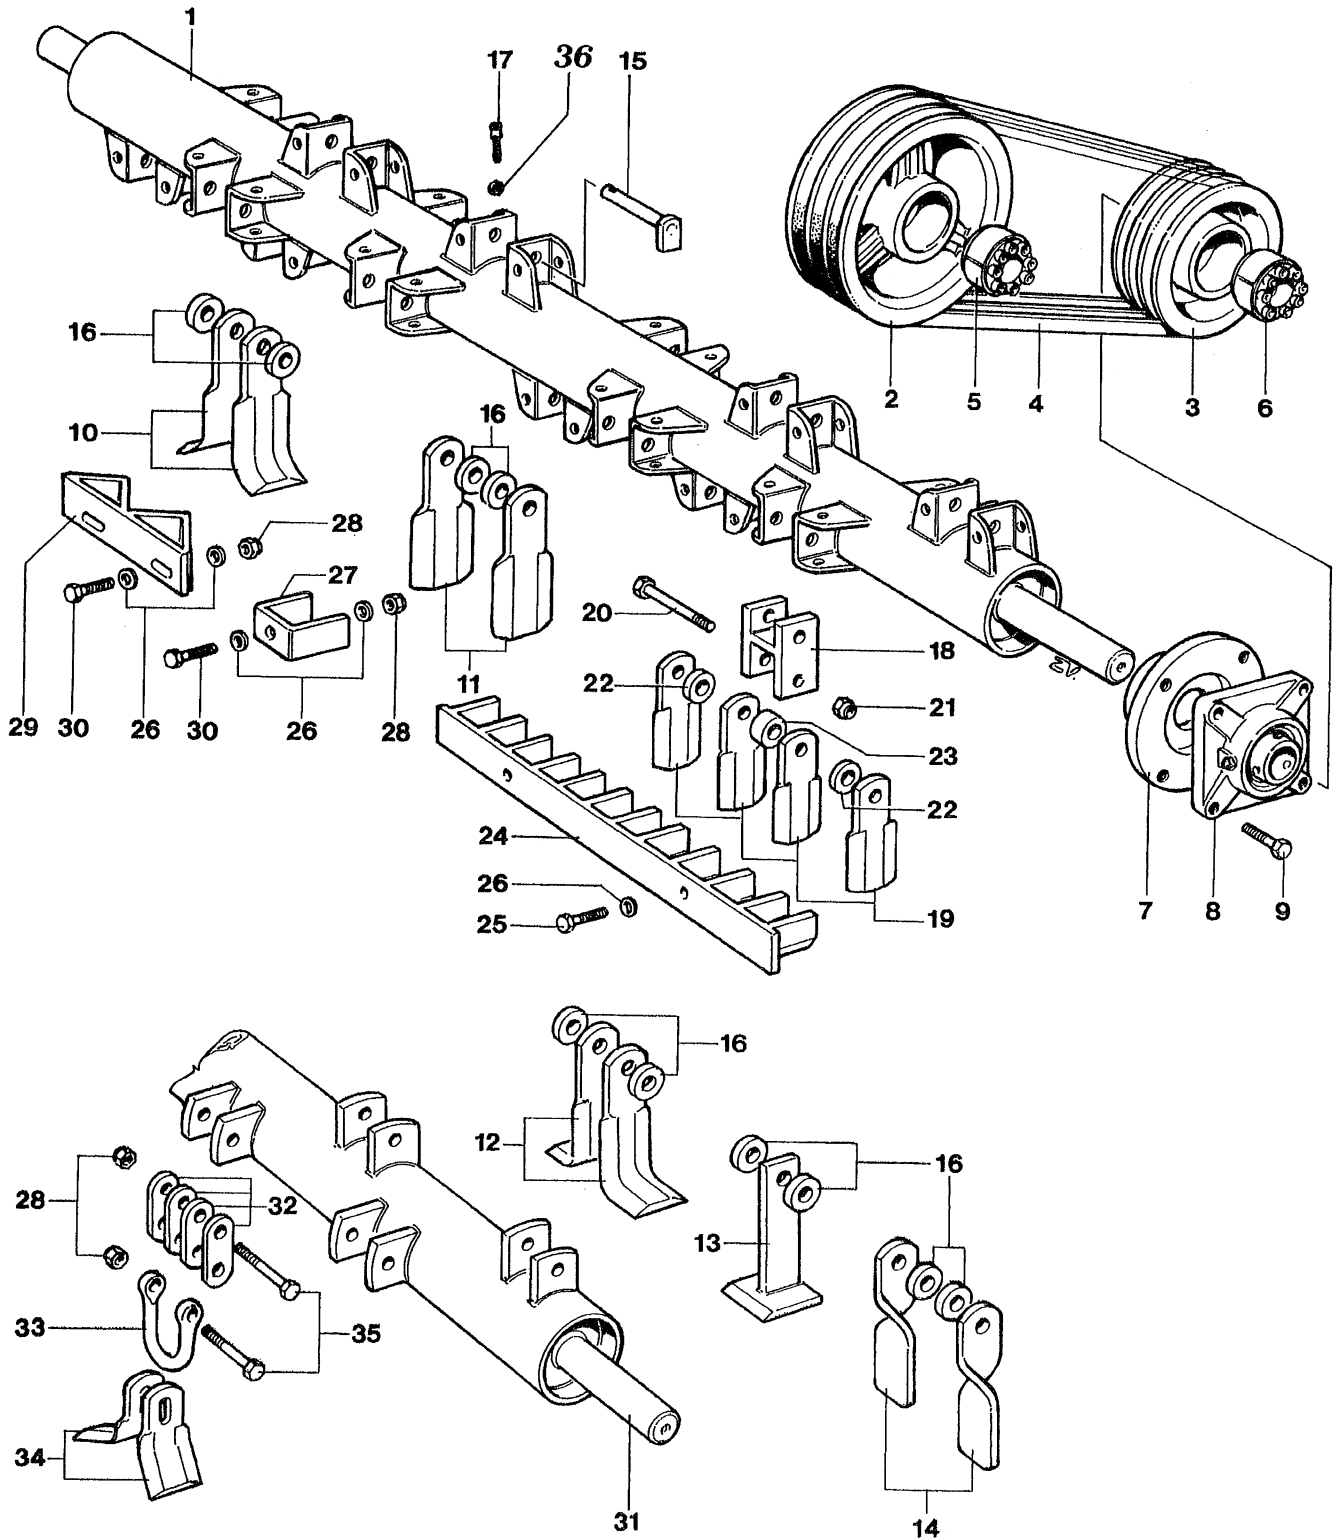

REF	CODE	QTY	ENGLISH	FRANÇAIS	ITALIANO	DEUTSCH	ESPAÑOL	NOTE
1	900.238.380	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	140
1	900.238.381	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	160
1	900.238.095	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	200
1	900.238.096	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	230
1	900.238.097	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	250
1	900.238.098	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	290
2	900.270.006	1	PULLEY	POULIE	PULEGGIA	REIMENSCHLEIBE	POLEA	140-250
2	900.270.007	1	PULLEY	POULIE	PULEGGIA	REIMENSCHLEIBE	POLEA	290
3	900.238.085	1	PULLEY	POULIE	PULEGGIA	REIMENSCHLEIBE	POLEA	140-250
3	900.238.089	1	PULLEY	POULIE	PULEGGIA	REIMENSCHLEIBE	POLEA	290
4	900.268.003	4	BELT	COURROIE	CINGHIA	RIEMEN	CINTA	140-250
4	900.268.003	5	BELT	COURROIE	CINGHIA	RIEMEN	CINTA	290
5	900.238.208	1	CLAMP	BLOCAGE	CALETTATORE	KLEMMHUELSE	ENSAMBLADOR	140-250
5	900.269.002	1	CLAMP	BLOCAGE	CALETTATORE	KLEMMHUELSE	ENSAMBLADOR	290
6	900.238.092	1	CLAMP	BLOCAGE	CALETTATORE	KLEMMHUELSE	ENSAMBLADOR	
7	900.238.100	2	FLANGIE	FLASQUE	FLANGIA	FLANSCH	BRIDA	
8	900.100.069	2	SUPPORT	SUPPORTO	SUPPORTO	STUETZE	SOPORTE	
9	900.102.108	8	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
10	900.238.065	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
11	900.238.067	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
12	900.238.066	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
13	900.238.068	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
14	900.238.136	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
15	900.238.386	-	PIN	TOURILLON	PERNO	STIFT	PERNO	
16	900.238.070	-	SPACER	ENTRETOISE	DISTANZIALE	ABSTANDSRING	DISTANCIADOR	
17	900.102.342	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
18	900.238.156	-	SUPPORT	SUPPORTO	SUPPORTO	STUETZE	SOPORTE	
19	900.238.155	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
20	900.102.165	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
21	900.103.063	-	NUT	ECROU	DADO	MUTTER	TUERCA	
22	900.238.130	-	SPACER	ENTRETOISE	DISTANZIALE	ABSTANDSRING	DISTANCIADOR	
23	900.238.131	-	SPACER	ENTRETOISE	DISTANZIALE	ABSTANDSRING	DISTANCIADOR	
24	900.250.045	-	STATIC KNIFE	CONTRE COUT.	CONTROCOLTELLO	GEGENMESSER	CONTRACUCH.	140-230
24	900.238.128	-	STATIC KNIFE	CONTRE COUT.	CONTROCOLTELLO	GEGENMESSER	CONTRACUCH.	250-290
25	900.102.174	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
26	900.104.046	-	WASHER	RONDELLE	RONDELLA	ZWISCHENSCHLEIBE	ARANDELA	
27	900.238.137	-	STATIC KNIFE	CONTRE COUT.	CONTROCOLTELLO	GEGENMESSER	CONTRACUCH.	
28	900.103.019	-	NUT	ECROU	DADO	MUTTER	TUERCA	
29	900.238.184	-	STATIC KNIFE	CONTRE COUT.	CONTROCOLTELLO	GEGENMESSER	CONTRACUCH.	140-230
29	900.238.185	-	STATIC KNIFE	CONTRE COUT.	CONTROCOLTELLO	GEGENMESSER	CONTRACUCH.	250-290
30	900.102.098	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
31	900.238.382	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	140
31	900.238.383	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	160
31	900.238.221	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	200
31	900.238.222	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	230
31	900.238.223	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	250
31	900.238.224	1	ROTOR	ROTOR	ROTORE	ROTOR	ROTOR	290
32	900.238.140	-	SPACER	ENTRETOISE	DISTANZIALE	ABSTANDSRING	DISTANCIADOR	
33	900.240.061	-	U-BOLT	MANILLE	CAVALLOTTO	U-BOLZEN	SOPORTE	
34	900.240.060	-	KNIFE	COUTEAU	COLTELLO	MESSER	CUCHILLA	
35	900.102.176	-	SCREW	VIS	VITE	SCHRAUBE	TORNILLO	
36	900.103.117	-	NUT	ECROU	DADO	MUTTER	TUERCA	

# LIMITED WARRANTY POLICY

 

SOVEMA S.p.A., Manufacturer of quality machinery, guarantees new Sovema machinery from the time of delivery to the original purchaser to be free from defects in material and workmanship if properly set up and operated in accordance with recommendations set forth in SOVEMA's operator manual. SOVEMA's liability for any defect of accepted goods shall be limited to replacing them, or as SOVEMA shall elect.

The original purchaser will qualify for the SOVEMA warranty only after they have completed the warranty card in full and forwarded it to SOVEMA S.p.A. Italy or any SOVEMA branch.

SOVEMA's obligation shall terminate 12 (twelve) months after the date of purchase of the product by the original purchaser. This warranty cannot be assigned or transferred to anyone unless SOVEMA's consent in writing has first been obtained. All warranty claims must be forwarded to SOVEMA S.p.A. Italy or a SOVEMA branch within 8 (eight) days after occurrence.

The original purchaser will be responsible for and bear costs of:

- A) Normal maintenance such as greasing, maintenance of oil levels, minor adjustments, etc.
- B) Transportation of any kind of, any SOVEMA product to and from the place where warranty work is performed.

This warranty shall not apply to any machine which has been repaired or altered in any way outside the SOVEMA factory which affects its stability or reliability, nor which has been subject to misuse, negligence or accident, nor to any machine that has not been operated in accordance with SOVEMA's printed instructions, or operated beyond the company recommended capacity as per machine.

This warranty shall not be applicable to items which are subject to the warranties of their respective manufacturers. Such items would include but would not be limited to clutches, universal joints, knives, hydraulic components, bearings, tires, belts and other trade accessories.


This warranty shall not be applicable to items defined as normal wearing items. Such items would include but would not be limited to belts, discs, knives, tines stone guards, tires, slip clutches, pitman shaft, swath sticks, blades or tine holders.

The judgement of SOVEMA S.p.A. in all cases of claims under this warranty shall be final and conclusive and the original purchaser agrees to accept its decisions about all questions as to defects and/or to the exchange of any part or parts.

No Agent, Employee or Representative of SOVEMA has any authority to bind SOVEMA to any affirmation, representation or warranty, concerning its machinery excepts as specifically set forth.

SOVEMA shall not be liable for special or consequential damages of any kind caused by any SOVEMA product.

SOVEMA S.p.A.  
 Via Olmo, 6-8-10  
 41010 Gaggio di Piano (MO)  
 Italy

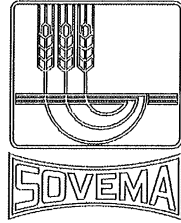

Telephone: 059 93 85 85  
 Fax : 059 93 85 12  
 E-mail : sovema@sovema.com  
 Web site: www.sovema.com

## WARRANTY REGISTRATION

This warranty will become valid only if this form is completed and signed by both the Purchaser and the Dealer and is returned within 8 days of purchase date! **IF NOT WARRANTY IS INVALID.**

### TO FILL OUT

- ❖ *TYPE OF IMPLEMENT* : \_\_\_\_\_
- ❖ *IMPLEMENT SERIAL NUMBER* : \_\_\_\_\_
- ❖ *DATE OF PURCHASE* : \_\_\_\_\_


<p><b>DEALER: I HEREBY CERTIFY THAT</b></p> <ul style="list-style-type: none"> <li>The machine has been correctly assembled in accordance with the manufacturers instructions.</li> <li>All nuts and bolts, oil level and grease have been checked.</li> <li>All safety guards and warning stickers have been placed on machine.</li> <li>PTO has been matched to tractor and greased.</li> <li>All other pre-delivery checks have been completed as per operators manual.</li> <li>Purchaser was given operators manual and instructed in safe and correct usage of machine and on limitation of warranty.</li> <li>Machine was tested and operates correctly.</li> </ul>	<p><b>PURCHASER: I HEREBY ACCEPT</b></p> <ul style="list-style-type: none"> <li>That the machine is correctly assembled.</li> <li>Receipt of the operators manual which I have read and have clearly understood..</li> <li>To have a clear understanding of the warranty limitations.</li> <li>To have a clear understanding of the correct and safe operation of the machine.</li> <li>That the machine need regular maintenance as instructions in operators manual.</li> <li>To have clear understanding on the capacity of this machine and made aware of its limitations.</li> </ul>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<p style="text-align: center;">(address)</p> <p style="writing-mode: vertical-rl; transform: rotate(180deg);"><b>DEALER</b></p> <p>_____</p> <p>_____</p> <p>_____</p> <p>Date: _____ Signature: _____</p>	<p style="text-align: center;">(address)</p> <p style="writing-mode: vertical-rl; transform: rotate(180deg);"><b>PURCHASER</b></p> <p>_____</p> <p>_____</p> <p>_____</p> <p>Date: _____ Signature: _____</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**COPY TO DELIVER TO: SOVEMA**



SOVEMA S.p.A.  
 Via Olmo, 6-8-10  
 41010 Gaggio di Piano (MO)  
 Italy

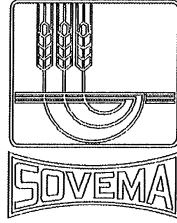

Telephone: 059 93 85 85  
 Fax : 059 93 85 12  
 E-mail : sovema@sovema.com  
 Web site: www.sovema.com

## WARRANTY REGISTRATION

This warranty will become valid only if this form is completed and signed by both the Purchaser and the Dealer and is returned within 8 days of purchase date! **IF NOT WARRANTY IS INVALID.**

### TO FILL OUT


- ❖ **TYPE OF IMPLEMENT** : \_\_\_\_\_
- ❖ **IMPLEMENT SERIAL NUMBER** : \_\_\_\_\_
- ❖ **DATE OF PURCHASE** : \_\_\_\_\_

<p><b>DEALER: I HEREBY CERTIFY THAT</b></p> <ul style="list-style-type: none"> <li>The machine has been correctly assembled in accordance with the manufacturers instructions.</li> <li>All nuts and bolts, oil level and grease have been checked.</li> <li>All safety guards and warning stickers have been placed on machine.</li> <li>PTO has been matched to tractor and greased.</li> <li>All other pre-delivery checks have been completed as per operators manual.</li> <li>Purchaser was given operators manual and instructed in safe and correct usage of machine and on limitation of warranty.</li> <li>Machine was tested and operates correctly.</li> </ul>	<p><b>PURCHASER: I HEREBY ACCEPT</b></p> <ul style="list-style-type: none"> <li>That the machine is correctly assembled.</li> <li>Receipt of the operators manual which I have read and have clearly understood..</li> <li>To have a clear understanding of the warranty limitations.</li> <li>To have a clear understanding of the correct and safe operation of the machine.</li> <li>That the machine need regular maintenance as instructions in operators manual.</li> <li>To have clear understanding on the capacity of this machine and made aware of its limitations.</li> </ul>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<p style="text-align: center;">(address)</p> <p><b>DEALER</b></p> <p>_____</p> <p>_____</p> <p>_____</p> <p>Date: _____ Signature: _____</p>	<p style="text-align: center;">(address)</p> <p><b>PURCHASER</b></p> <p>_____</p> <p>_____</p> <p>_____</p> <p>Date: _____ Signature: _____</p>
----------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------

**PURCHASER COPY**

# SOVEMA Product Line


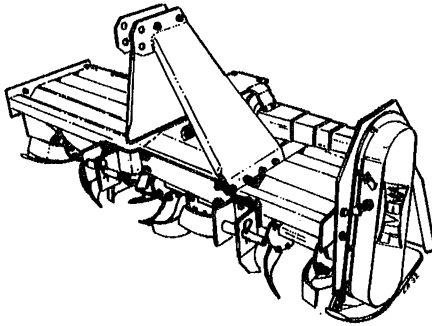


## SIDE SHIFT ROTARY TILLERS

- 15 different models;
- For tractors from 12 to 70 HP
- Working width from 80 to 200 cm.

## FIXED ROTARY TILLERS

- Over 45 different models;
- For tractors from 15 to 130 HP
- Working width from 80 to 300 cm.

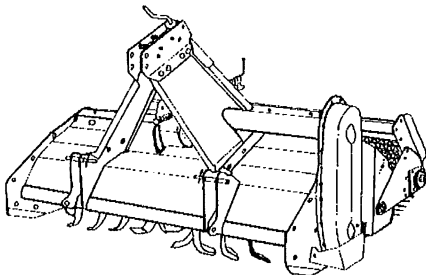
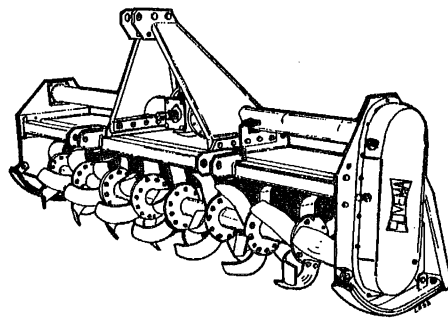


## STONE BURRIERS

- 6 different models;
- For tractors from 35 to 90 HP
- Working width from 100 to 200 cm.

## ROTARY HARROWS


- 13 different models;
- For tractors from 25 to 150 HP
- Working width from 110 to 500 cm.

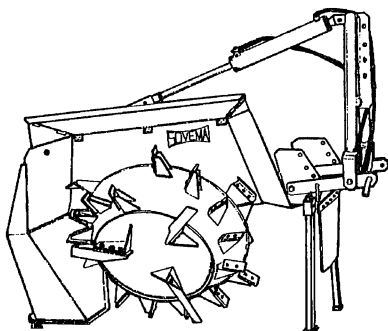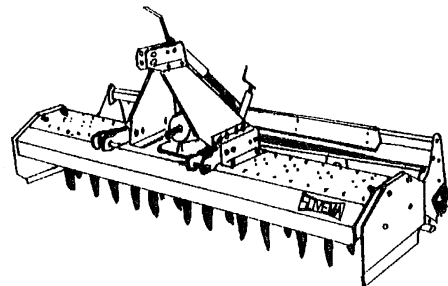

## ROTARY DITCHERS

- 10 different models;
- For tractors from 40 to 130 HP
- Working depth from 45 to 110 cm.




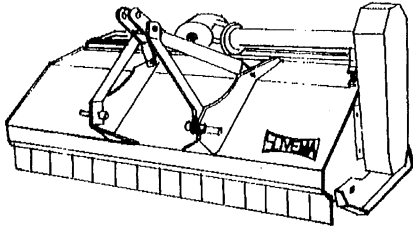


### FLAIL MOWERS - SHREDDERS

- 35 different models;
- For tractors from 15 to 120 HP
- Working width from 100 to 470 cm.

### MOWERS COLLECTOR

- 6 different models;
- For tractors from 30 to 60 HP
- Working width from 120 to 180 cm.
- Available with high discharge and low discharge

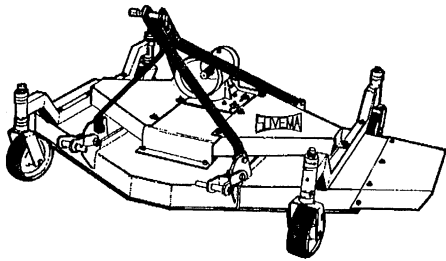
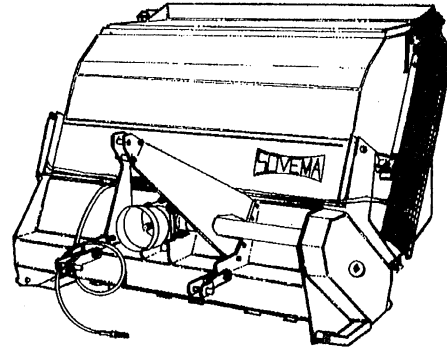


### FINISHING MOWERS

- 14 different models;
- For tractors from 15 to 70 HP
- Working width from 100 to 300 cm.


### HYDRAULIC FORK-LIFTS

- 11 different models;
- For tractors up to 60 HP
- Lifting capacity from 1.300 Kg to 2.000 Kg.

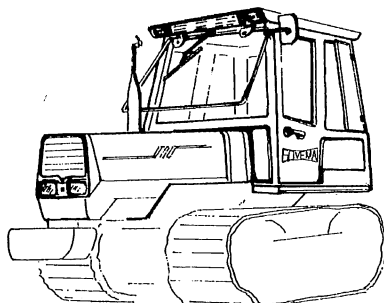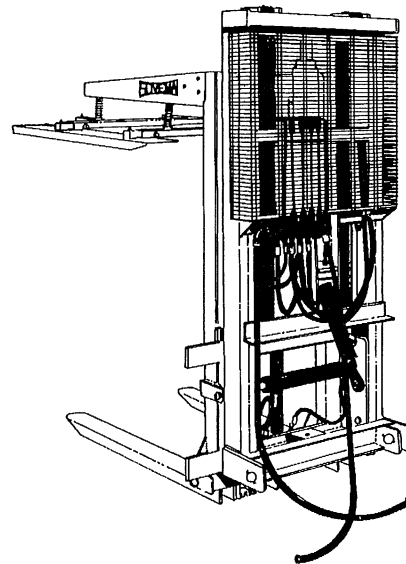

### TRACTOR CABS

- Over twenty models of cabs for eleven manufacturers of tractors;
- For tractors with wheels or crawlers;
- All models available with heating and/or air conditioned.


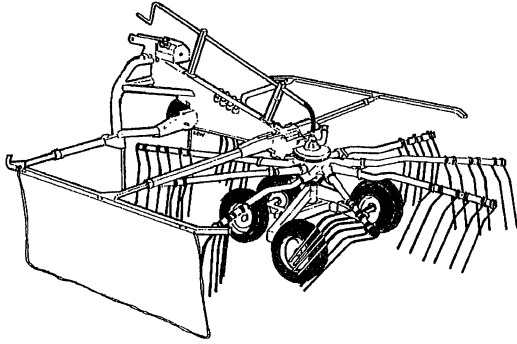


### **ROTARY RAKE**

- 4 different models
- For tractors from 30 to 70 HP
- Working width from 340 to 695 cm.

### **HAY TEDDERS**

- 6 different models (2, 4, 6 rotors)
- For tractors from 10 to 40 HP
- Working width from 310 to 730 cm.

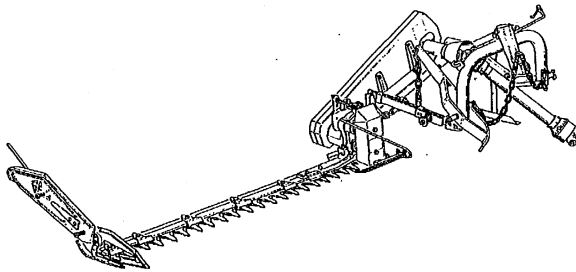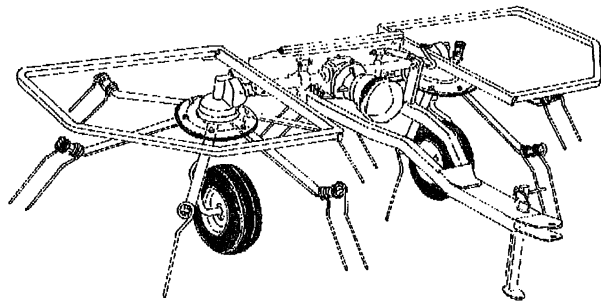

### **SICKLE BAR MOWER**

- 3 different models.
- For tractors from 10 to 15 HP.

### **FINGER WHEELS**

- 8 different models (8-20 stars)
- For tractors from 30 to 80 HP
- Working width from 7.35 to 12.50 m.

