


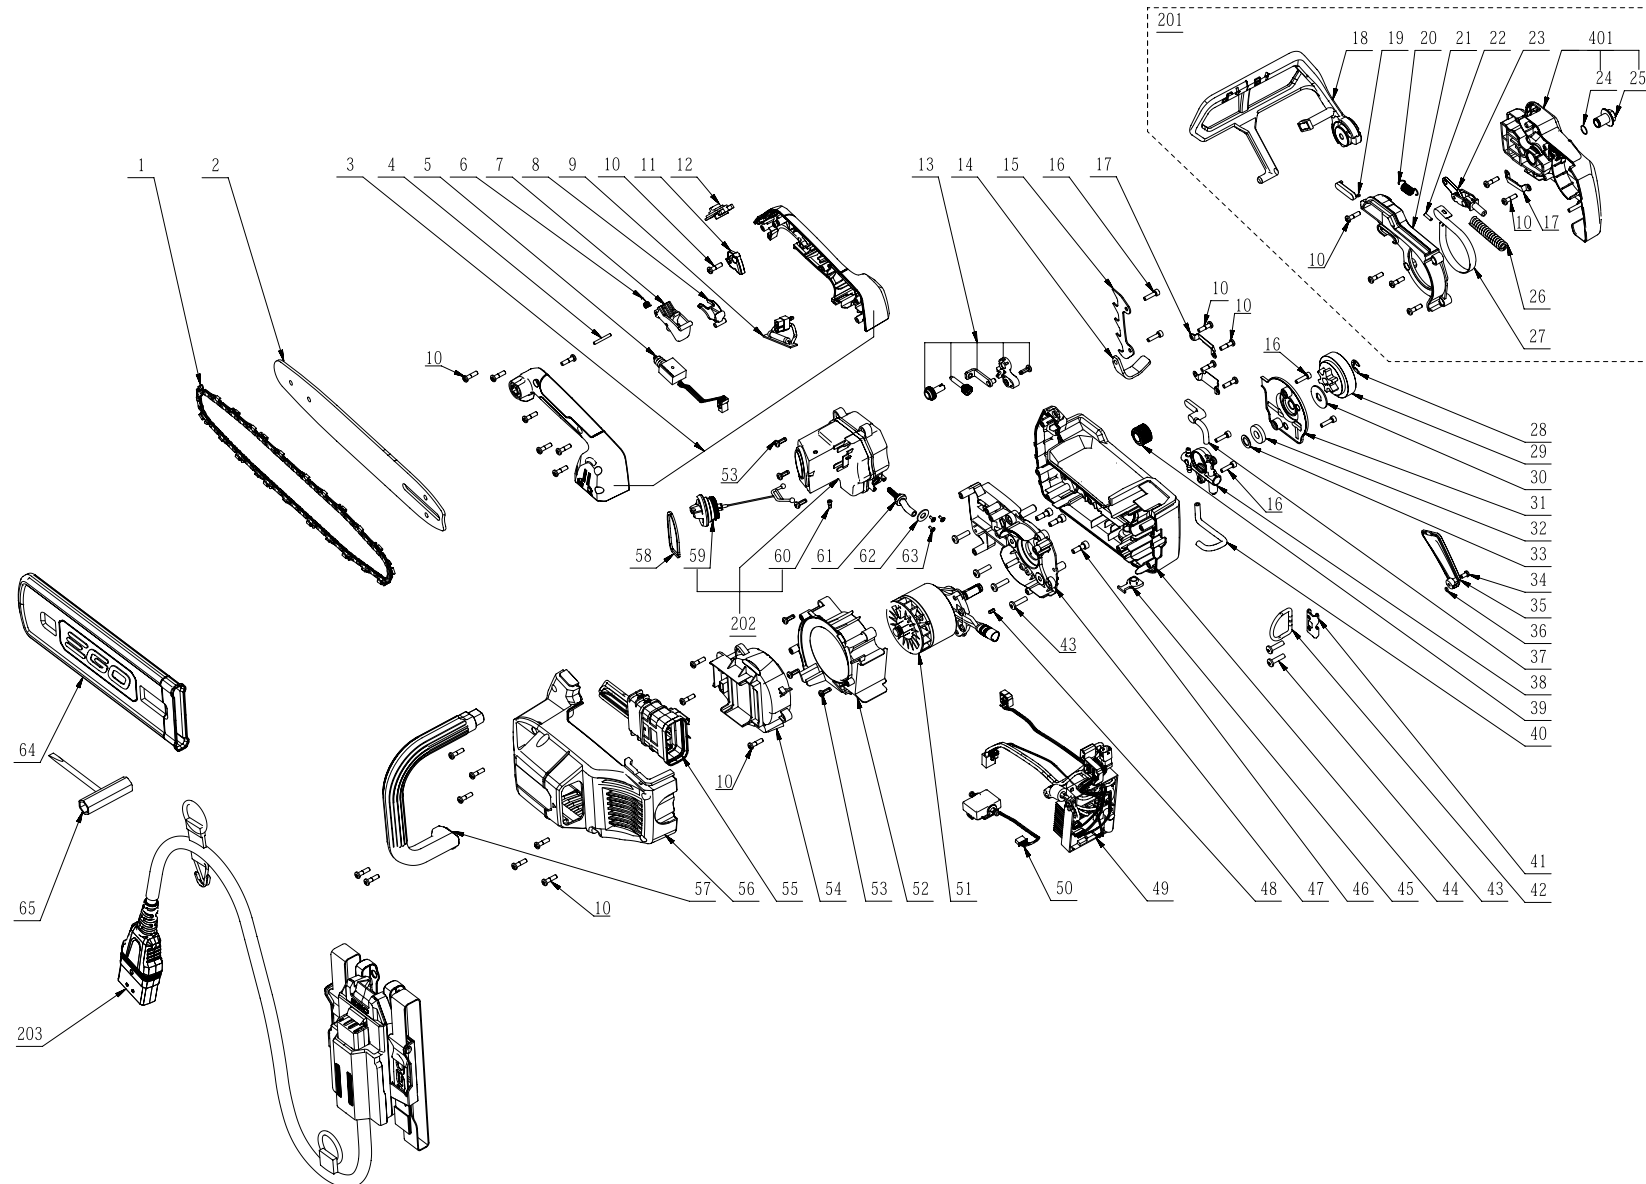


Product Description: Chain Saw
Model Number: CSX3000
Body Number: 0640008001_S
Version: A
Issue Date: 2020/9/20





Product Description: Chain Saw
Model Number: CSX3000
Body Number: 0640008001_S
Version: A
Issue Date: 2020/9/20

203

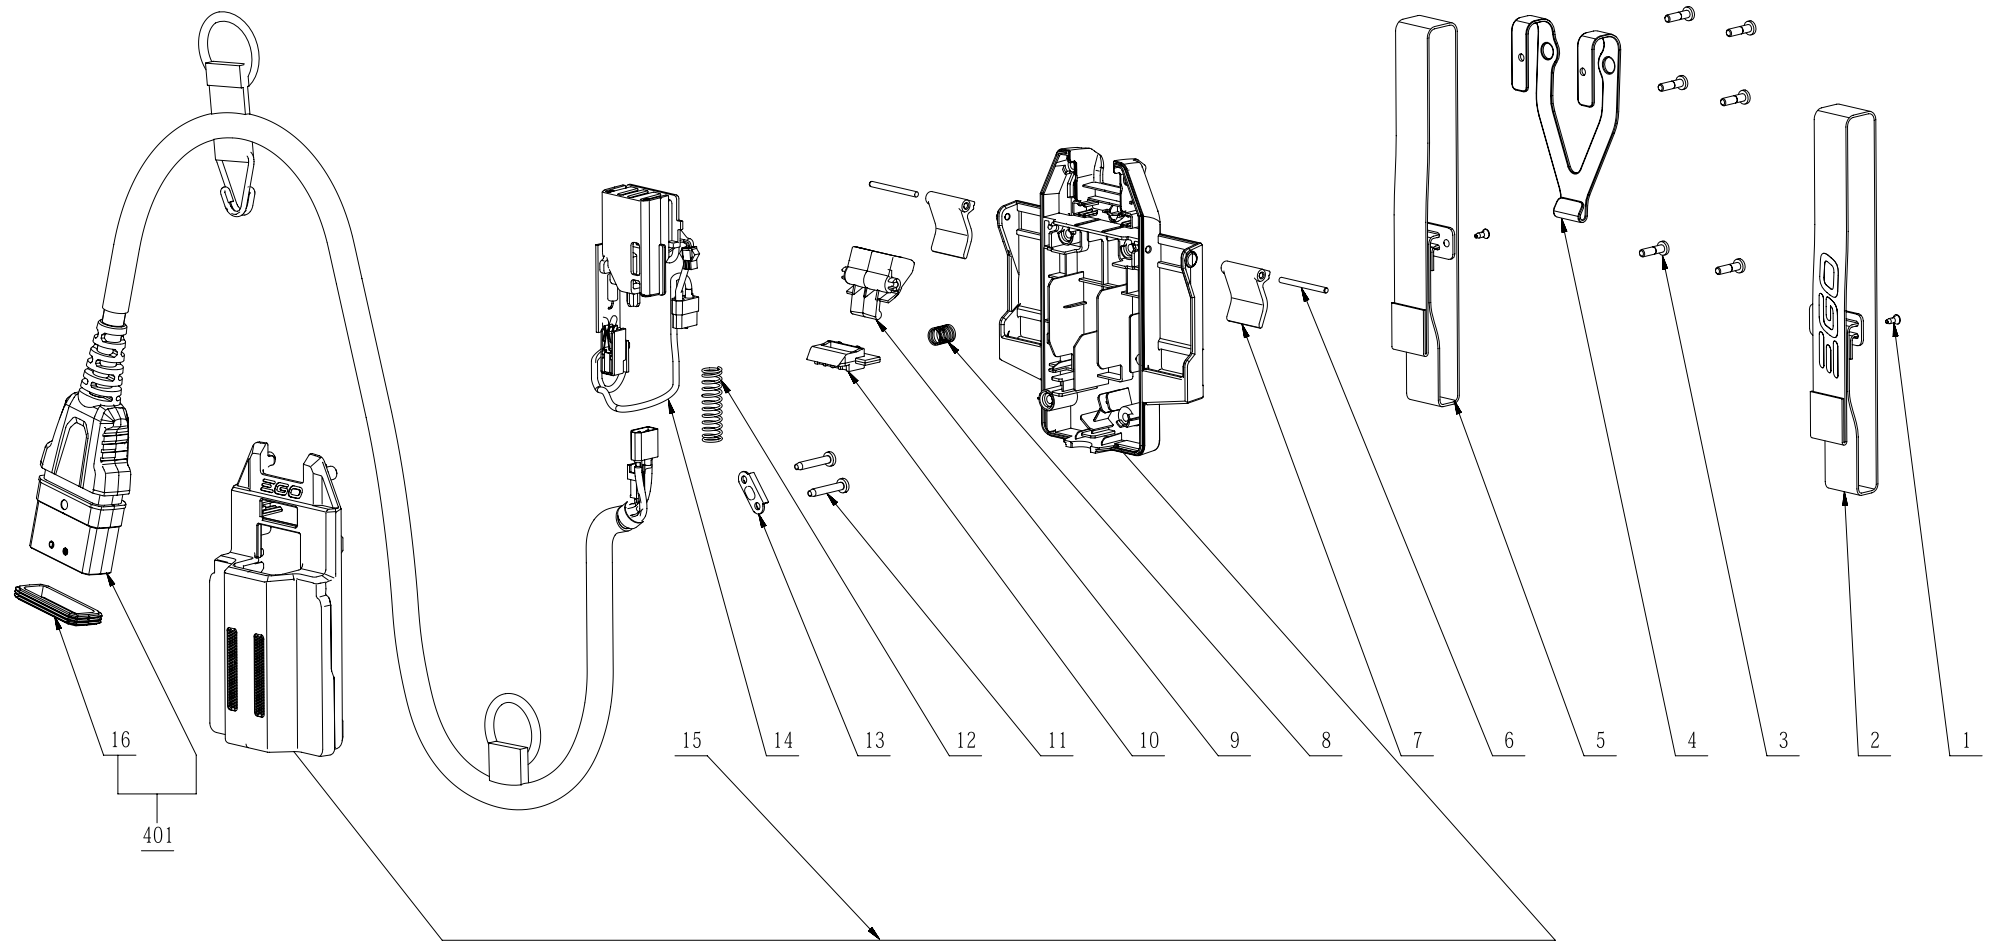

Service Part List_CSX3000_Version A

No.	Product Model#	Part Number	Description	Qty
1	CSX3000	3810729001	Chain	1
2	CSX3000	3706953004	Guide	1
3	CSX3000	2827689001	Handle Assembly	1
4	CSX3000	5670313002	Pin	1
5	CSX3000	4870752001	Switch Assembly	1
6	CSX3000	3660697001	Torsion Spring	1
7	CSX3000	2827132002	Switch Lever Assembly	1
8	CSX3000	3422689001	Trigger Lever	1
9	CSX3000	2830718001	Fuse Electric Assembly	1
10	CSX3000	5620479001	Screw	29
11	CSX3000	3521234001	Plunge Frame	1
12	CSX3000	3130880001	Lock Button	1
13	CSX3000	2827275002	Tension Nut Assembly	1
14	CSX3000	3707341001	Chip Shield	1
15	CSX3000	3707012001	Wood Teeth	1
16	CSX3000	5620013006	Hexagon Socket Screw	6
17	CSX3000	3707340001	Protecting Cover Plate	3
18	CSX3000	2827278002	Pivot Plate Assembly	1
19	CSX3000	3130984001	Sealing Gasket	1
20	CSX3000	3660802001	Tension Spring	1
21	CSX3000	3130858001	Cover Plate	1
22	CSX3000	5670298001	Parallel Pin	1
23	CSX3000	2827274001	Crank Assembly	1
24	CSX3000	5660266001	C Ring	1
25	CSX3000	5630369001	Flange Nut	1
26	CSX3000	3660803001	Compression Spring	1
27	CSX3000	3707342001	Brake Band	1
28	CSX3000	5660028001	E Ring	1
29	CSX3000	3422529001	Sprocket	1
30	CSX3000	5660208002	Gasket	1
31	CSX3000	3130860001	Right Cover	1
32	CSX3000	5690474001	Felt Ring	1

No.	Product Model#	Part Number	Description	Qty
33	CSX3000	5650526002	Plain Washer	1
34	CSX3000	5620651002	Hexalobular Socket Screw	1
35	CSX3000	3130857001	Cover Plate	1
36	CSX3000	5690203001	O Ring	1
37	CSX3000	3130983001	Rear Tube	1
38	CSX3000	2827231001	Pump Assembly	1
39	CSX3000	3570062001	Worm	1
40	CSX3000	3130982001	Intermediate Tube	1
41	CSX3000	3707343001	Fixing Board	1
42	CSX3000	3650257001	Pothook	1
43	CSX3000	5610291003	Tapping Screw	6
44	CSX3000	3403164001	Right Housing	1
45	CSX3000	3130979001	Protective Cover	1
46	CSX3000	5620019005	Hexagon Socket Screw	3
47	CSX3000	2827276002	Support Assembly	1
48	CSX3000	5680216001	Key	1
49	CSX3000	2830736002	Control Electric Assembly	1
50	CSX3000	2830698001	Signal Acquisition PCBA	1
51	CSX3000	2730321001	DC Motor	1
52	CSX3000	3130862001	Right Fan Baffle	1
53	CSX3000	5610237001	Tapping Screw	6
54	CSX3000	3130861001	Left Fan Cover	1
55	CSX3000	4860525003	Internal Wire ASSY	1
56	CSX3000	3130852001	Left Housing	1
57	CSX3000	3130853001	Front Handle	1
58	CSX3000	3131120001	Rubber Ring	1
59	CSX3000	2827277002	Kettle Cover Assembly	1
60	CSX3000	3128576001	Valve	1
61	CSX3000	2827286002	Oil Screen Assembly	1
62	CSX3000	5650419002	Plain Washer	1
63	CSX3000	5620176002	Screw With Washer	3
64	CSX3000	3131184001	Sheath	1
65	CSX3000	5680272001	Socket Wrench	1
401	CSX3000	2827273002	Cover Plate Assembly	1

No.	Product Model#	Part Number	Description	Qty
201	CSX3000	2827131002	Brake Assembly	1
202	CSX3000	2827709001	Kettle Assembly	1
203	CSX3000	2827512001	Battery Holster	1
203-1	CSX3000	5610076004	Tapping Screw	2
203-2	CSX3000	3800160001	Braided Strap	1
203-3	CSX3000	5620479001	Screw	6
203-4	CSX3000	3707472001	Belt Hook	1
203-5	CSX3000	3800101001	Braided Strap	1
203-6	CSX3000	5670153002	Pin	2
203-7	CSX3000	3422761001	Lock Plate	2
203-8	CSX3000	3660013003	Spring1	1
203-9	CSX3000	3131218001	Power Pack Button	1
203-10	CSX3000	3127497001	Power Pack Button	1
203-11	CSX3000	5620454001	Tapping Screw	2
203-12	CSX3000	3660818001	Compression Spring	1
203-13	CSX3000	3700285001	Cord Anchorage	1
203-14	CSX3000	2830813001	Electric Assembly	1
203-15	CSX3000	3900357001	Housing Assembly	1
203-16	CSX3000	5690356002	Seal Ring	1
203-401	CSX3000	4860764001	Cable Assembly	1