

**This Manual Must Be Read Before Operating The Equipment**

# **Owner / Operator's Manual**



**FOR MODEL**

**SP-9300XH**



Madison Heights, Michigan 48071  
800-725-8377  
[www.snowexproducts.com](http://www.snowexproducts.com)

**Customer Copy**

# Table of Contents



General Information .....	3
Introduction .....	4
Safety .....	5
Warning Decal Positions.....	6-7
Spreader Operation.....	8-10
Control and Harness Diagram .....	11
Spreader Maintenance .....	12
Wiring Instructions .....	13
Mounting Instructions .....	14-15
Troubleshooting .....	16-17
Warranty .....	18
Spreader Views	
Model # SP-9300XH .....	19
Frame Assembly Parts Breakdown	
Model # SP-9300XH .....	20-21
Auger Drive Assembly Parts Breakdown	
Model # SP-9300XH .....	22-23
Hopper Assembly Parts Breakdown	
Model # SP-9300XH .....	24-25
Auger Extension Assembly Parts Breakdown	
Model # SP-9300XH.....	26-27
Drive Assembly Parts Breakdown	
Model # SP-9300XH .....	28-29
Notes .....	30-31

**Have a question or need assistance?**

**SnowEx Customer Care**

**(800) 725-8377**

**or (248) 586-3500**

**Monday through Friday 8:00 AM to 4:30 PM EST**

**Fax: (248) 691-8378**

**E-Mail: [customercare@trynexfactory.com](mailto:customercare@trynexfactory.com)**

**Website: [www.snowexproducts.com](http://www.snowexproducts.com)**



## General Information



### CONGRATULATIONS!

The product you have purchased is an example of snow and ice control technology at its finest! Your product's self-contained design is a trademark of all SnowEx products. Here's why...

**SIMPLICITY:** Fewer moving parts manufactured of higher quality means minimal maintenance for your SnowEx spreader.

**RELIABILITY:** High-Impact linear low density polyethylene hopper. Custom engineered powder-coated frame. And a high torque hydraulic motor.

**VERSATILITY:** Multi-use capabilities allows spreading of a variety of materials for snow and ice control.

**WARRANTY:** Best in the industry, hands down! 2 years standard and now 5 year extended (optional).

The benefits you are about to recognize are that of time, money and effort.  
We welcome you to the world of SnowEx Performance.

## Registration

Record the following information in this manual for quick reference.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Handheld Control Pendant Serial Number \_\_\_\_\_ Control Board Serial Number \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Dealer Where Purchased \_\_\_\_\_

When ordering parts, the above information is necessary. This will help to see that you receive the correct parts.

At the right is a diagram of the ID tag. This tag on the spreader is located on the frame.

Please fill out the warranty card with all the necessary information to validate it. This will also give us a record so that any safety or service information can be communicated to you.



This manual has been designed for your help. It will assist you and instruct you on the proper set-up, installation and use of this spreader.

Refer to the table of contents for an outline of this manual.

We require that you read and understand the contents of this manual completely (especially all safety information) before attempting any procedure contained herein.



**THIS SIGN SHOULD ALERT YOU:**

The Society of Automotive Engineers has adopted this **SAFETY ALERT SYMBOL** to pinpoint characteristics that, if **NOT** carefully followed, can create a safety hazard. When you see this symbol in this manual or on the machine itself, **BE ALERT!** Your personal safety and the safety of others is involved.

Defined below are the **SAFETY ALERT** messages and how they will appear in this manual:



**DANGER**

(RED)

Information that, if not carefully followed,  
can cause death!



**WARNING**

(ORANGE)

Information that, if not carefully followed,  
can cause serious personal injury or death!



**CAUTION**

(YELLOW)

Information that, if not carefully followed,  
can cause minor injury or damage to equipment



Before attempting any procedure in this book, these safety instructions must be read and understood by all workers who have any part in the preparation or use of this equipment.

For your safety warning and information decals have been placed on this product to remind the operator of safety precautions. If anything happens to mark or destroy the decals, please request new ones from SnowEx.



Never exceed the Gross Vehicle Weight Rating of vehicle. Failure to do so may limit a vehicle's handling characteristics.

Never attempt to take a unit off a truck with material in it.



Always keep hands, feet, and clothing away from power driven parts.

Unit must be pinned and locked into position before operating vehicle.

Always shut off vehicle and power source before attempting to attach or detach or service unit. Be sure vehicle/power source is properly braked or chocked.

Remember, most accidents are preventable and caused by human error. Exercising of care and precautions must be observed to prevent the possibility of injury to operator or others!

Never operate equipment when under the influence of alcohol, drugs, or medications that might alter your judgment and/or reaction time.

Before working with the spreader, secure all loose fitting clothing and unrestrained hair.

Always wear safety glasses with side shields when servicing spreader. Failure to do this could result in serious injury to the eyes.

Never allow children to operate or climb on equipment.

Always check areas to be spread to be sure no hazardous conditions or substances are in the area.

Always inspect unit for defects: broken, worn or bent parts, weakened areas on spreader.

Remember it is the owner's responsibility to communicate information on safe usage and proper maintenance of all equipment.

Always make sure personnel are clear of areas of danger when using equipment.

Never weld or grind on equipment without having a fire extinguisher available.

Inspect the unit periodically for defects. Parts that are broken, missing or worn out must be replaced immediately. The unit or any part of it can not be altered without prior written permission from the manufacturer.

Always inspect pins and latches whenever attaching or detaching spreader, and before operation of spreader.

Never exceed 45 m.p.h. when loaded spreader is attached to vehicle. Braking distances may be increased and handling characteristics may be impaired at speeds above 45 m.p.h.




Never use wet materials or materials with foreign debris with any of these spreaders. These units are designed to handle dry, clean, free flowing material.

Never leave material in hopper for long periods of time. Be aware that all ice melters are hygroscopic and will attract atmospheric moisture and harden up.

## Warning Decal Positions

Model # SP-9300XH

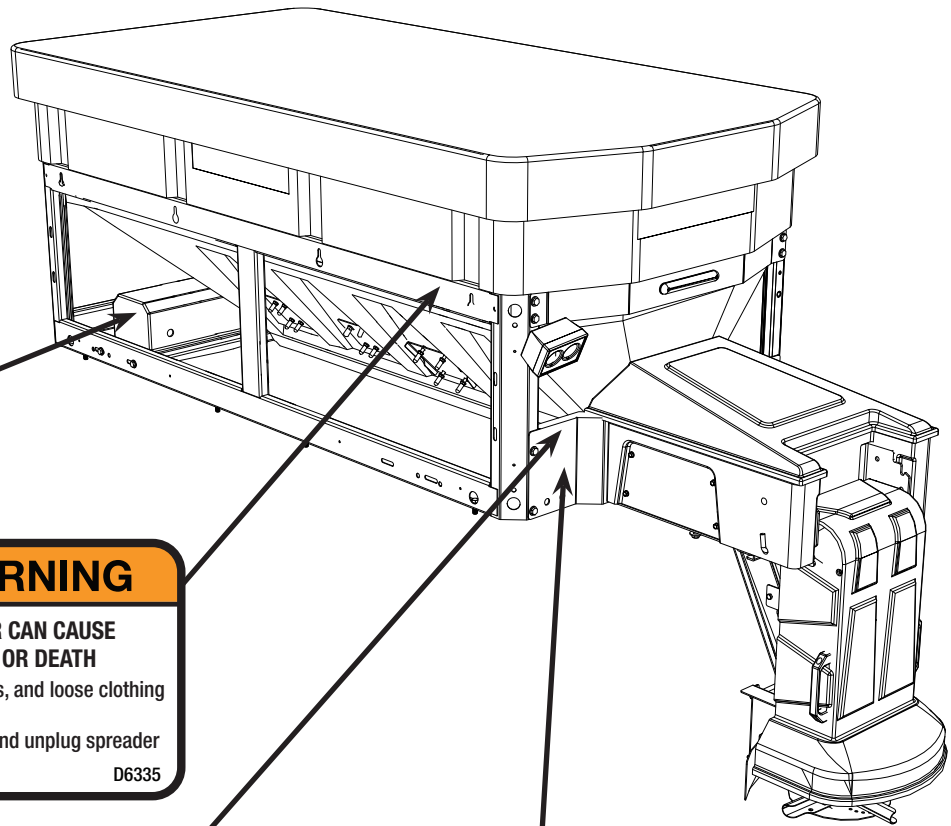

**⚠ WARNING**

- Keep hands, feet & loose clothing away from moving parts.
- Disconnect power before servicing equipment.

D6192

**⚠ WARNING**

**ROTATING AUGER CAN CAUSE SERIOUS INJURY OR DEATH**

- Keep arms, hands, and loose clothing away from auger.
- Shut off control and unplug spreader before servicing.

D6335

**⚠ DANGER**

- DO NOT REMOVE SPREADER WITH MATERIAL IN HOPPER
- FASTEN SPREADER DOWN WITH APPROVED RATCHET STRAPS AND BOLT KIT
- REAR FRAME LOCATOR BARS MUST BE IN PLACE BEFORE OPERATING VEHICLE

D6547


**⚠ WARNING**

- Read Owner's Manual for Installation Instructions.
- Secure spreader to truck with ratchet straps.
- Anchor spreader securely to truck body with bolt kit provided to prevent slipping or sliding.
- Routinely check straps and hardware to make sure they are secure.

D6548

## Warning Decal Positions

Model # SP-9300XH

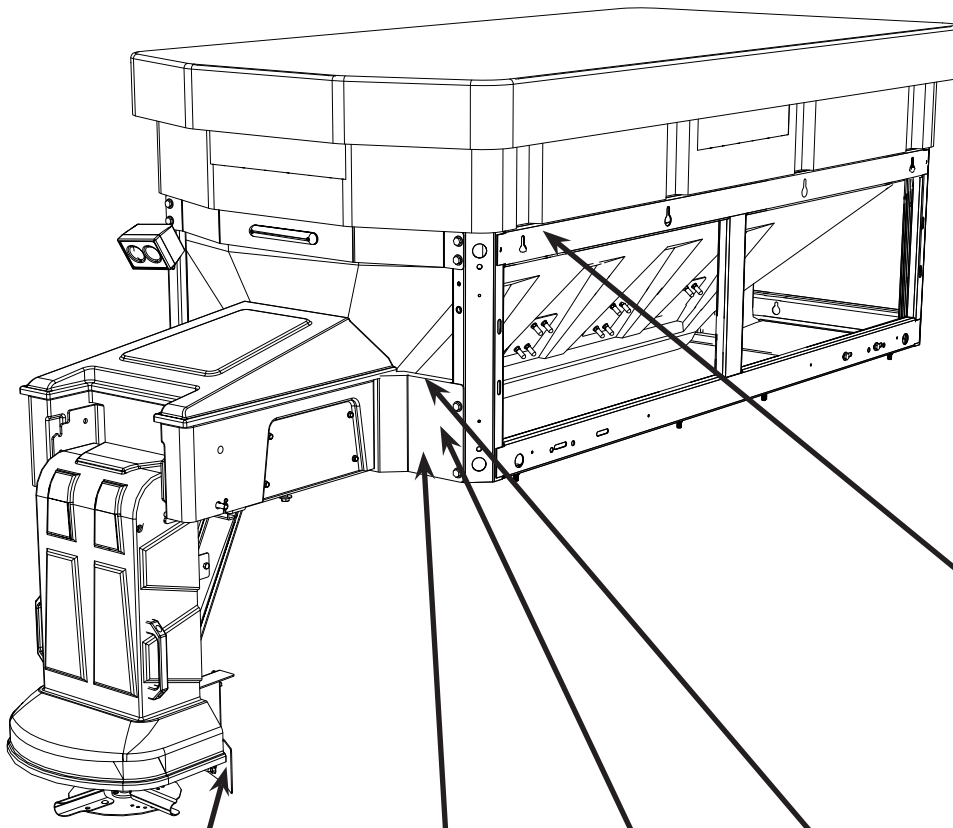


### ⚠ WARNING

- Read owners manual before operating equipment.
- Never remove spreader with material in hopper.

D6194

### ⚠ WARNING

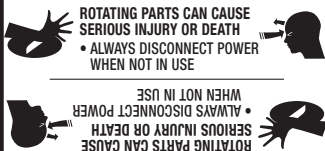

ROTATING PARTS CAN CAUSE  
SERIOUS INJURY OR DEATH  
• ALWAYS DISCONNECT POWER  
WHEN NOT IN USE

WHEN NOT IN USE  
• ALWAYS DISCONNECT POWER  
SERIOUS INJURY OR DEATH  
ROTATING PARTS CAN CAUSE

### ⚠ WARNING

### ⚠ WARNING



- DO NOT EXCEED GVWR OF VEHICLE
- DO NOT OVERLOAD SPREADER
- LOAD SPREADER EVENLY

D6546

### ⚠ WARNING



ROTATING AUGER CAN CAUSE  
SERIOUS INJURY OR DEATH

- Keep arms, hands, and loose clothing away from auger.
- Shut off control and unplug spreader before servicing.

D6335

### ⚠ DANGER

- DO NOT REMOVE SPREADER WITH MATERIAL IN HOPPER
- FASTEN SPREADER DOWN WITH APPROVED RATCHET STRAPS AND BOLT KIT
- REAR FRAME LOCATOR BARS MUST BE IN PLACE BEFORE OPERATING VEHICLE

D6547

# Spreader Operation



Model # SP-9300XH

## SPREADER LOADING

**WARNING:** Do not overload vehicle.

Use chart below to calculate weight of material. Weights of material are an average for dry materials.

Material	Weight Per Cubic Ft.
Rock Salt	80-90 lbs.
Sand/Salt Mix	95-120 lbs.

**WARNING:** Never leave material in hopper for long periods of time as salt is hygroscopic and will attract atmospheric moisture and harden up.

When spreading sand mix, a 1:1 ratio for Sand/Salt mix is recommended to prevent the material from freezing.

## SPREADING TIPS

For a heavier pass:

Decrease vehicle speed

Increase Auger speed

For a lighter pass:

Increase vehicle speed

Decrease Auger speed

For a wider pass:

Increase spinner speed

Spread ice melters with the storm to prevent unmanageable levels of ice.

Never exceed 10 miles per hour when spreading.

Calculate spread pattern when near vegetation and other vehicles.

Never operate spreader near pedestrians.




# Spreader Operation



Model # SP-9300XH


## INVERTED-V INSTRUCTIONS

- The Super-Maxx 9300XH uses an “Inverted V” Baffle design over the auger area. This baffle reduces the load on the auger. The inverted V should not be removed unless servicing the unit.
- **WARNING:** Always disconnect power source before attempting to remove material baffle.

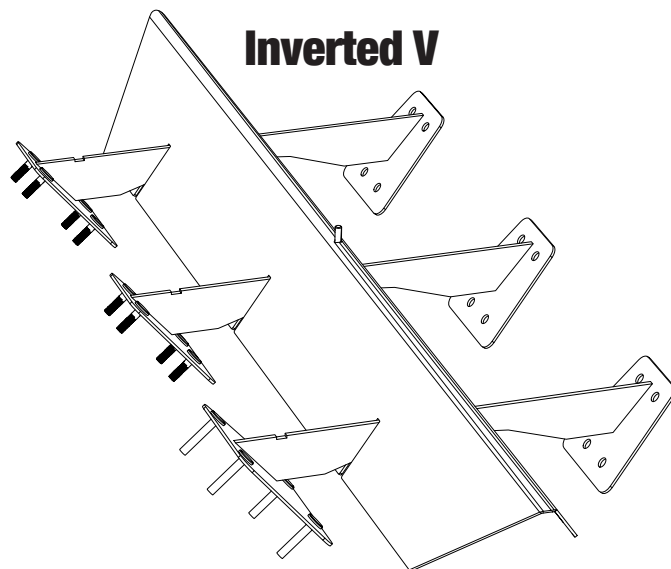

## AUGER DISCHARGE TUBE INSTRUCTIONS

- The Super-Maxx Spreaders use an auger discharge tube to reduce material leakage. It must not be removed unless servicing the unit.
- **WARNING:** Always disconnect power source before attempting to remove auger discharge tube.

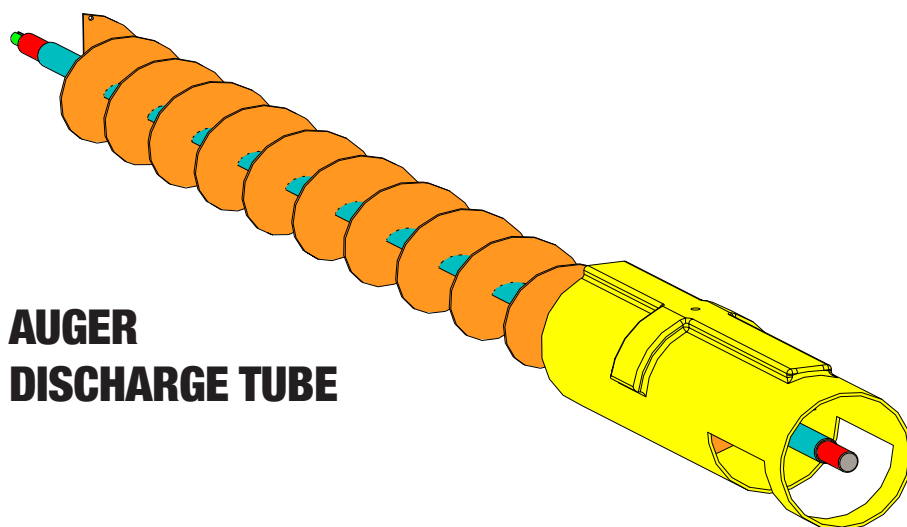

# Spreader Operation





Model # SP-9300XH


## ADJUSTABLE SPINNER INSTRUCTIONS

Your spreader is equipped with an adjustable spinner to assist you in more precise material application. The Spinner plate gives the operator control of whether the material spreads to the right, left or is centered. All of the fins should be in the same position; this will keep the spread pattern consistent and have even ground coverage. Before operating the spreader, spread some material in a clear area where you can easily observe the spread pattern and how it changes. Adjust according to the instructions below to get the pattern you desire.




When the fins are in their center adjustment position, the spread pattern will be mostly centered. However, collisions and other damage to the equipment may change this. Check the fin position and resulting spread pattern often enough to prevent the equipment performance from being adversely affected.

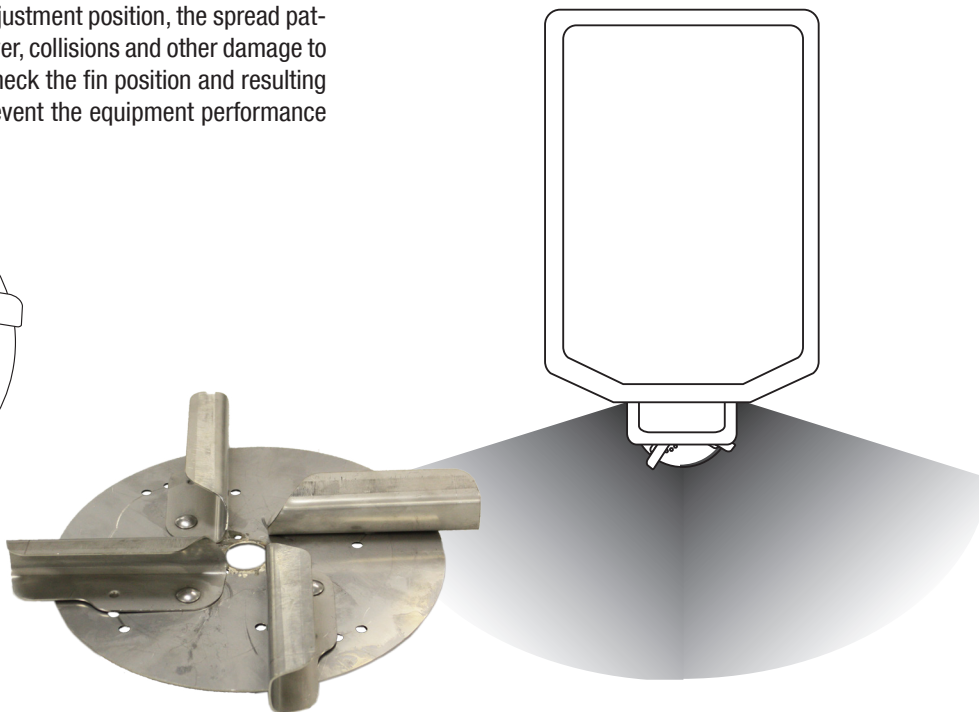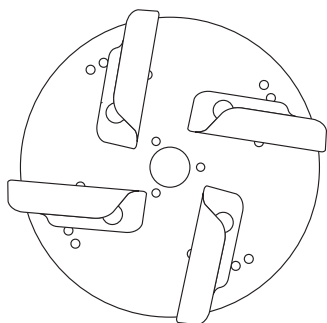

When looking down at the spinner, moving the fins clockwise will adjust the spread pattern toward the left side of the spreader.

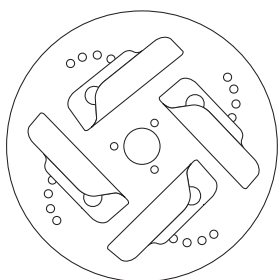


When looking down at the spinner, moving the fins counter-clockwise will adjust the spread pattern toward the right side of the spreader.

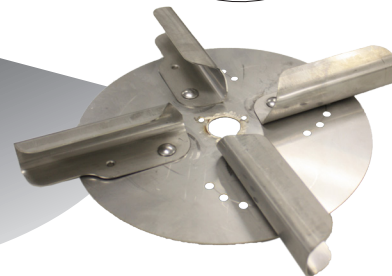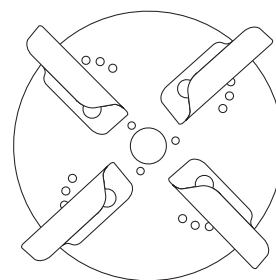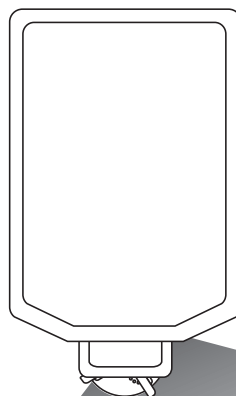

# Control and Harness Diagram

Model # SP-9300XH

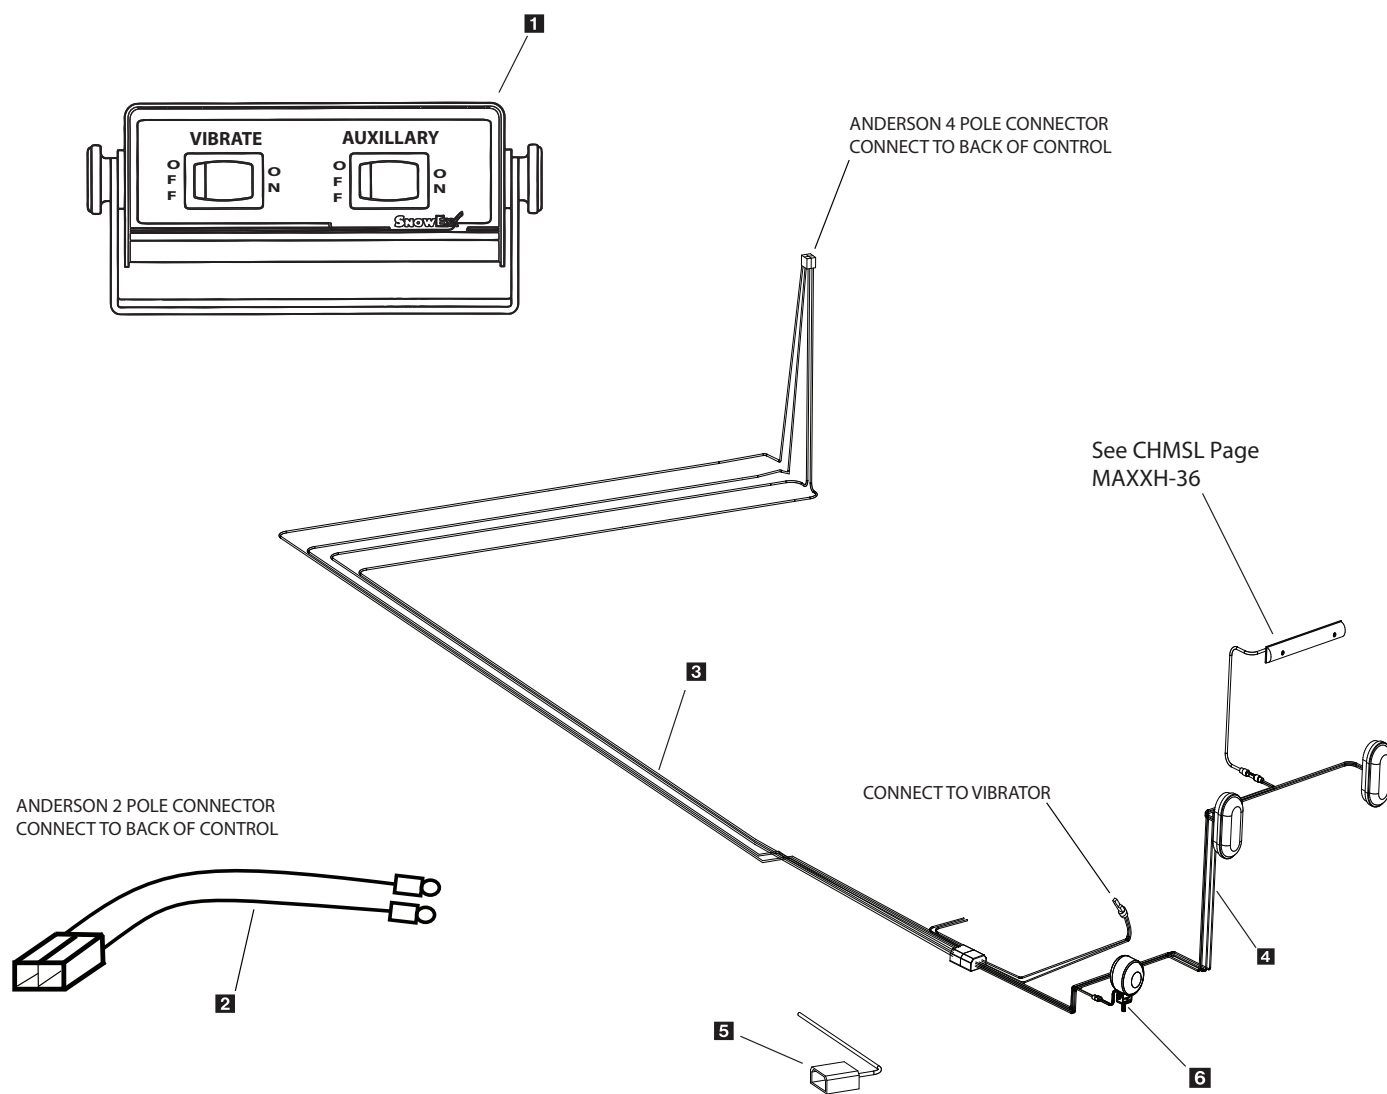

Key	Part No.	Description	Qty.
1	D 5774	Control	1
2	D 5772	Control Power Harness	1
3	D 5771	Vehicle Harness	1
4	D 5780	Spreader Harness	1
5	D 6343	Vehicle Harness Dust Cap	1
6	D 6786	Work Light	1

# Spreader Maintenance

---



Model # SP-9300XH

## GENERAL MAINTENANCE

Use dielectric grease on all electrical connections to prevent corrosion at the beginning and end of the season and each time power plugs are disconnected.

Wash unit after each use to prevent material build-up and corrosion.

Paint or oil all bare metal surfaces at the end of the season.

Apply small amount of light oil to latches as needed.

After first use, tighten all nuts and bolts on spreader and mount.

Grease bearings after every 20 hour's use.

Store control in cool dry place during the off season.



## WARNING

When servicing is necessary, perform it in a protected area. Do not use power tools in rain or snow because of danger of electrical shock or injury. Keep area well lighted. Use proper tools. Keep the area of service clean to help avoid accidents.

Never remove spreader with material in hopper.

Disconnect electricity to spreader before servicing.



## CAUTION

Vibrator is not designed for continuous duty. Allow motor to cool between long cycle times.

Do not modify vehicle or spreader wiring harness. Doing so will void product warranty.

When replacing parts use only original manufacturer's parts. Failure to do so will void warranty.

The controller is a solid state electronic unit and is not serviceable. Any attempt to service will void warranty.

There are no serviceable parts in the motor/transmission assembly. Any attempt to service will void warranty.

Spinner motor is not designed for continuous duty. Allow motor to cool between long cycle times.

When pressure washing motor enclosure area, stay at least 36" away from motor enclosures.

# Wiring Instructions



Model # SP-9300XH

## STEP 1

Take harness assembly and route from the rear of the vehicle to the front. Route harness along frame and attach to frame hole and frame supports. It is not recommended to attach to fuel or brake lines for obvious reasons. Do not route close to exhaust system or engine, even though Snowex uses high temperature wiring. It still could melt under extreme heat and short the spreader electrical system, as well as the vehicle electrical system.

## STEP 2

Mount rear plug on bumper using supplied bolts, locate towards the center of the bumper to reduce the amount of debris the tires will throw to the rear. Important: Apply a small amount of dielectric grease to the plug. Also try to mount so plug faces upward to help keep plugs tightly sealed.

## STEP 3

Secure harness from the rear to the front using heavy duty ty-wraps or frame clips along the frame and lighter duty ty-wraps everywhere else.

## STEP 4

Layout harness portion that connects to the battery along the fire wall and fender well. Do not connect power leads to battery yet. Drill a 3/4" hole in the fire wall, or use existing access hole, for the control portion of the harness and route connector and harness through hole. Be sure to check the area on the other side of the fire wall to make sure you are not drilling into the vehicle harness or a control module. Generally you can drill on either side of the steering wheel for a good location.

## STEP 4A

The power harness from control box to battery will need to be routed from the inside of the cab to the battery – this results from the large high amperage connector. Route leads with lugs to battery — do not connect power at this time.

## STEP 5

Connect harness to the back of the controller and mount to a suitable location. NOTE: You may want to contact customer before mounting controller as some prefer not to have holes drilled into the dashboard. Ty-wrap loose controller harness and move to the engine compartment. Do not mount close to any heater vents.

## STEP 6


Connect power leads to the battery: Red + Positive, Black – Negative, always connect to the primary battery if using a dual battery system. Secure loose loom to any other large or medium vehicle harness with medium duty ty-wraps, this will secure wiring harness.

## STEP 7

Push the ON/OFF button on the controller to check for power ; when that has been confirmed turn power OFF. The electrical portion of the installation is complete.

# Mounting System Diagrams

Model # SP-9300XH

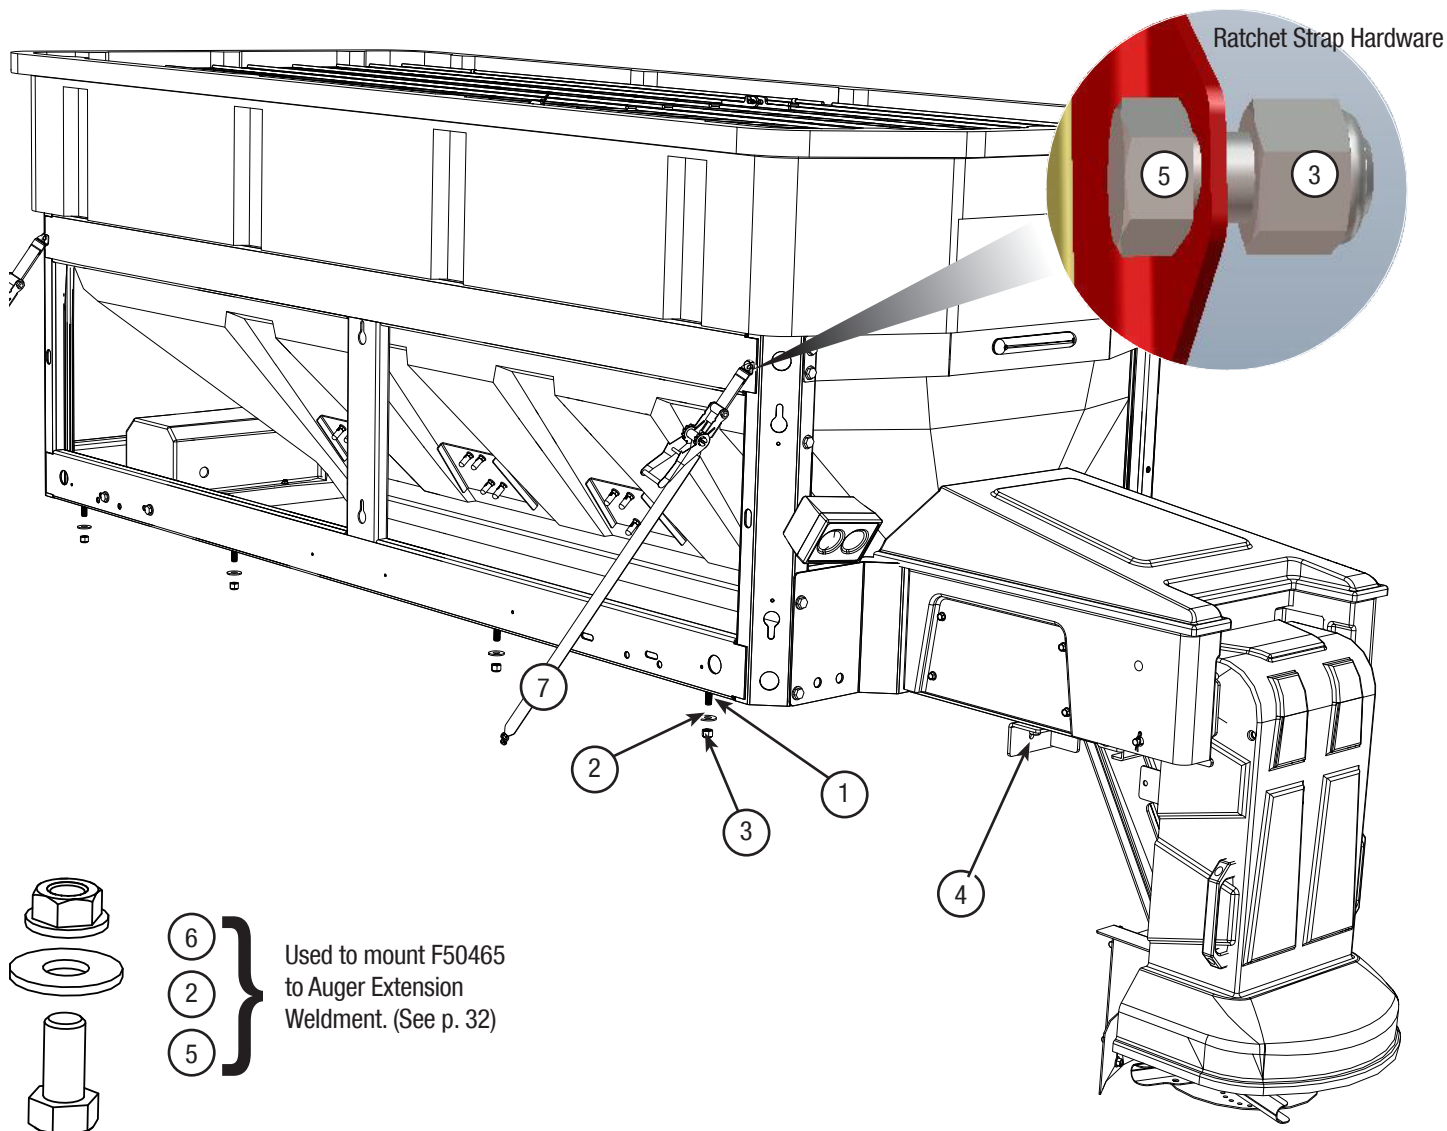

Key	Part No.	Description	Qty
1	D4116	Bolt 1/2"-13 X 1-1/2"	10
2	D4119	Washer 1/2" Flat	10
3	D4120	Nut 1/2"-13 Nylox	14
4	F50465	Rear Stop Bracket	1
5	D4115	Bolt 1/2"-13 X 1"	6
6	D5535	Nut 1/2"-13 Serrated Flange	2
7	F50600	X-Series Ratchet Straps (4PK)	1

## DANGER

Rear stop bar, ratchet straps and mount kit must always be in place. All mounting systems work together; none of them should be used exclusive of the other methods. Do not remove unless servicing spreader or removing the spreader from vehicle. Check straps and hardware before each use, making sure spreader is completely stable.

# Mounting Instructions



Model # SP-9300XH

## STEP 1

If using pickup/dump body, remove tailgate. If using platform body, remove rear stake sides.

## STEP 2

Load spreader onto truck bed.

## STEP 3

Install Rear Stop Bracket (F50465) onto Auger Extension Weldment (see diagram p. 20) using provided hardware [D4119 x2; D4115 x2; D5535 x2]

## STEP 4

Slide spreader forward until Stop Bracket touches the rear of the truck body.

## STEP 5

Slide spreader left or right keeping the spreader in the same front-to-back alignment until centered side-to-side. Use a tape measure for greatest accuracy. The spreader must be centered for the safety of the vehicle, its driver and those nearby.

## STEP 6

You will notice there are four holes in the bottom rail of each sideframe. These holes are on the bottom of the rail and will be used to mount the spreader to the truck body. There are also two holes in the rear stop bracket. Mark all these hole locations using a paint pen or similar device.

## STEP 7

Look underneath the truck body, checking that there are no vehicle components that will be in the path of the drill. If there are interferences, the holes can be relocated in the frame. Make sure there are 2 holes in each sideframe forward and rearward the front-back centerline.

## STEP 8

Drill the holes in the marked positions using a 9/16 inch drill bit. (You may need to slide the spreader four to eight inches to either side in order to drill the holes without climbing underneath the truck.) Wear eye protection when drilling.

## STEP 9

Slide the spreader back into position over top of the holes just drilled. Install Bolt through spreader frame and truck body with Washer and Nut below. Tighten all fasteners.

## STEP 10

Attach Ratchet Straps (F50600) using provided hardware as in diagram inset on page 20. Tighten the fasteners. Hook Ratchet Strap's other end to truck body. Tighten the Straps.

# Troubleshooting



## Model # SP-9300XH

### Preliminary Checks


- Be sure all electrical connections are tight and clean.
- Be sure nothing is jammed in the hopper.
- Be sure that all hydraulic connections are properly connected.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor doesn't run.	Loose hose connection.	Check all connections.
	Low fluid or pump malfunction.	Fill resevoir or replace pump
Material not flowing from hopper.	Empty hopper.	Fill hopper.
	Wet material.	Replace with dry material.
	Frozen or coarse material.	Replace material.
	Spinner not turning.	Check drive assembly.
	Auger coupling disengaged	Realign and tighten all set screws.
	Vibrator not working.	Check electrical connections.



# Troubleshooting Material Flow

Model # SP-9300XH

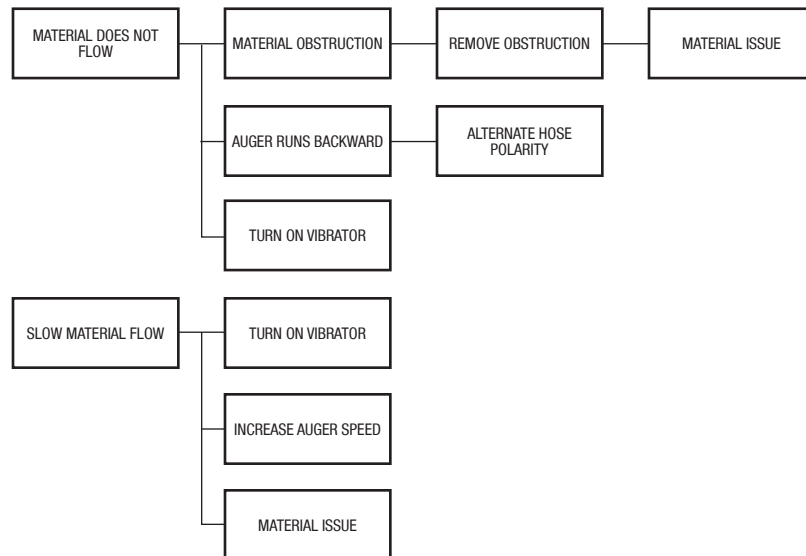

**SnowEx Diagnostic Test Kit (STK-090) Is Available To Accurately Diagnose Any Issues With SnowEx Spreaders.  
Call Your Dealer For Details.**

## Limited Warranty

Snowex products are warranted for a period of two years from the date of purchase against defects in material or workmanship under normal use and service, subject to limitations detailed below. Warranty period of two years begins on the date of purchase by the original retail user.

The WARRANTY REGISTRATION CARD must be returned to the manufacturer for this warranty to become effective. This warranty applies to the original retail purchaser only. This warranty does not cover damages caused by improper installation, misuse, lack of proper maintenance, alterations or repairs made by anyone other than authorized Snowex dealers or Snowex personnel. Due to the corrosive properties of the materials dispensed by spreaders, Trynex does not warrant against damage caused by corrosion. Warranty claims by the user must be made to the dealer from where the product was purchased, unless otherwise authorized by Snowex. Snowex reserves the right to determine if any part is defective and to repair or replace such parts as it elects. This warranty does not cover shipping costs of defective parts to or from the dealer.

### LIMITATION OF LIABILITY

Neither Snowex, nor any company affiliated with it, makes any warranties, representations for promise as to the performance or quality other than what is herein contained. The liability of Snowex to the purchaser for damages arising out of the manufacture, sale, delivery, use or resale of this spreader shall be limited to and shall not exceed the costs of repair or replacement of defective parts. Snowex shall not be liable for loss of use, inconvenience or any other incidental, indirect or consequential damages, so the above limitations on incidental or consequential damages may not apply to you.


NO DEALER HAS AUTHORITY TO MAKE ANY REPRESENTATION OR PROMISE ON BEHALF OF SNOWEX, OR TO ALTER OR MODIFY THE TERMS OR LIMITATIONS OF THIS WARRANTY IN ANY WAY.

## Spreader Views


Model # SP-9300XH



### Driver's Side

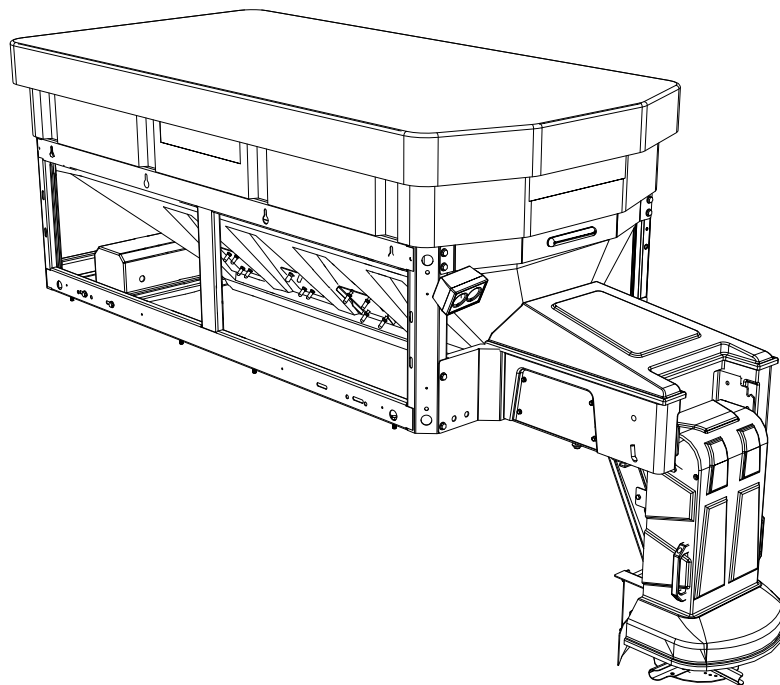


### Passenger's Side

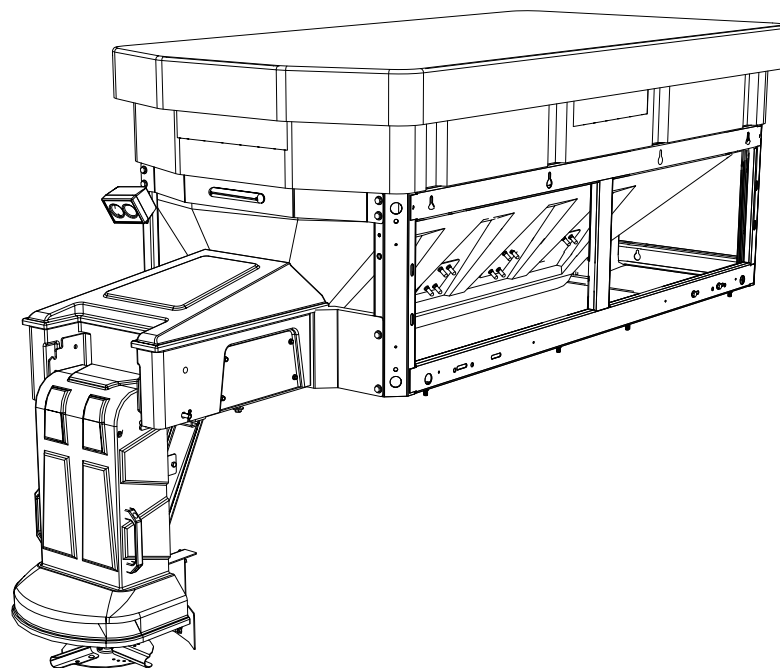

# Frame Assembly Parts Breakdown




Model # SP-9300XH

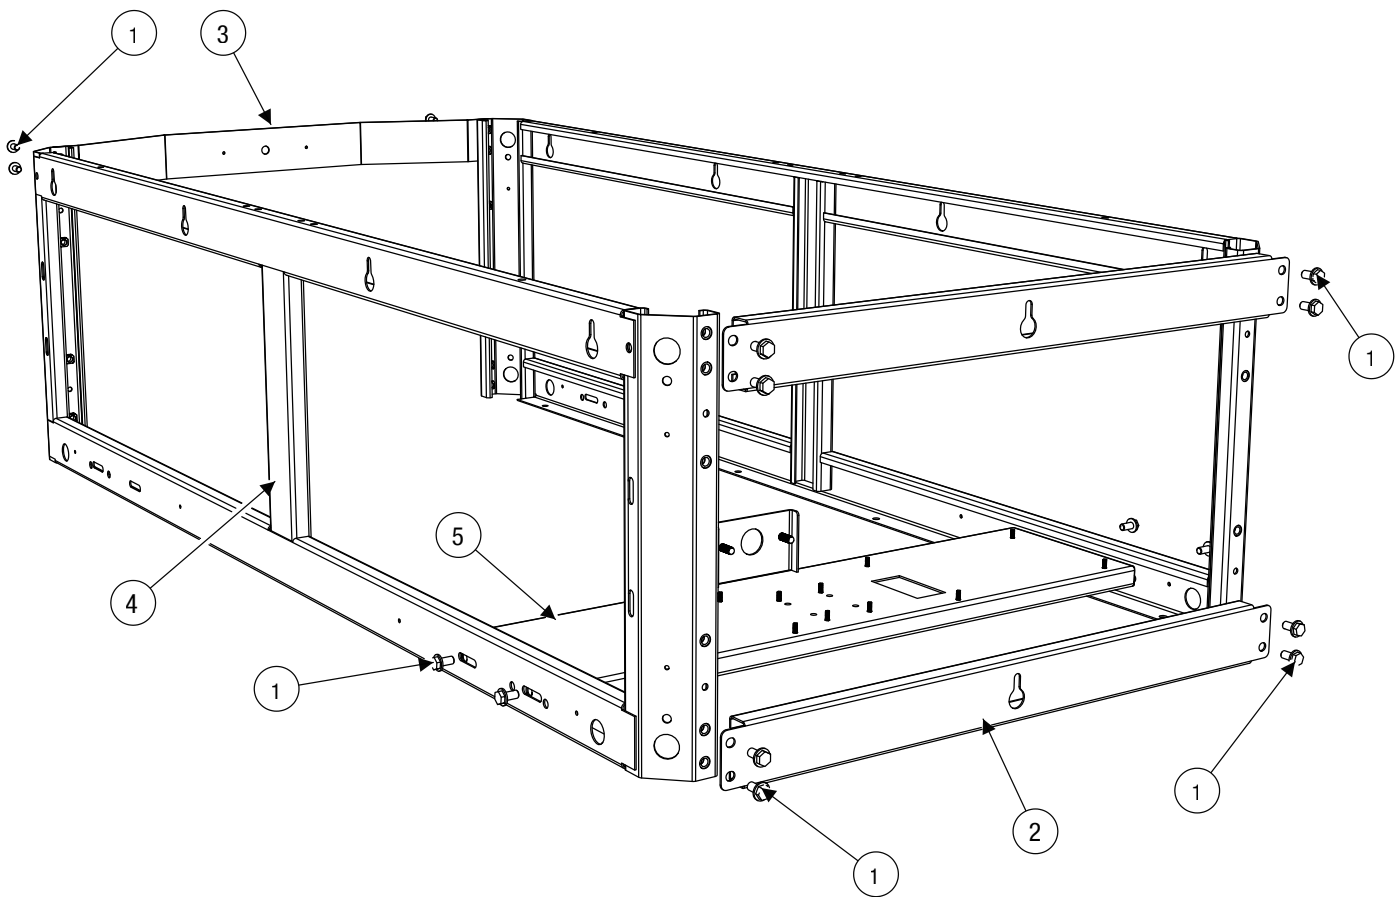

# Frame Assembly Parts Breakdown



Model # SP-9300XH

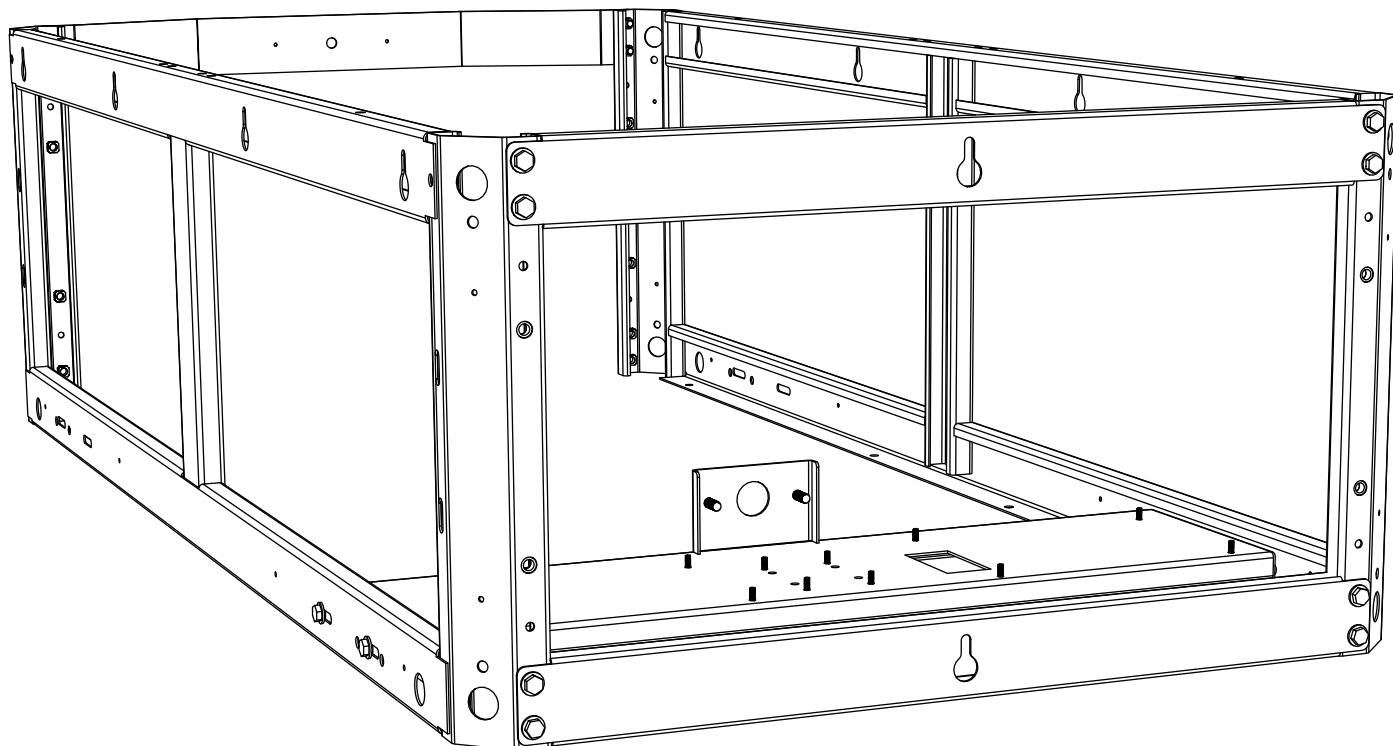


ID #	Part #	Qty
1	D6528	16
2	D6765	2
3	D6766	1
4	D6797	2
5	D6884	1

# Auger Drive Assembly Parts Breakdown




Model # SP-9300XH

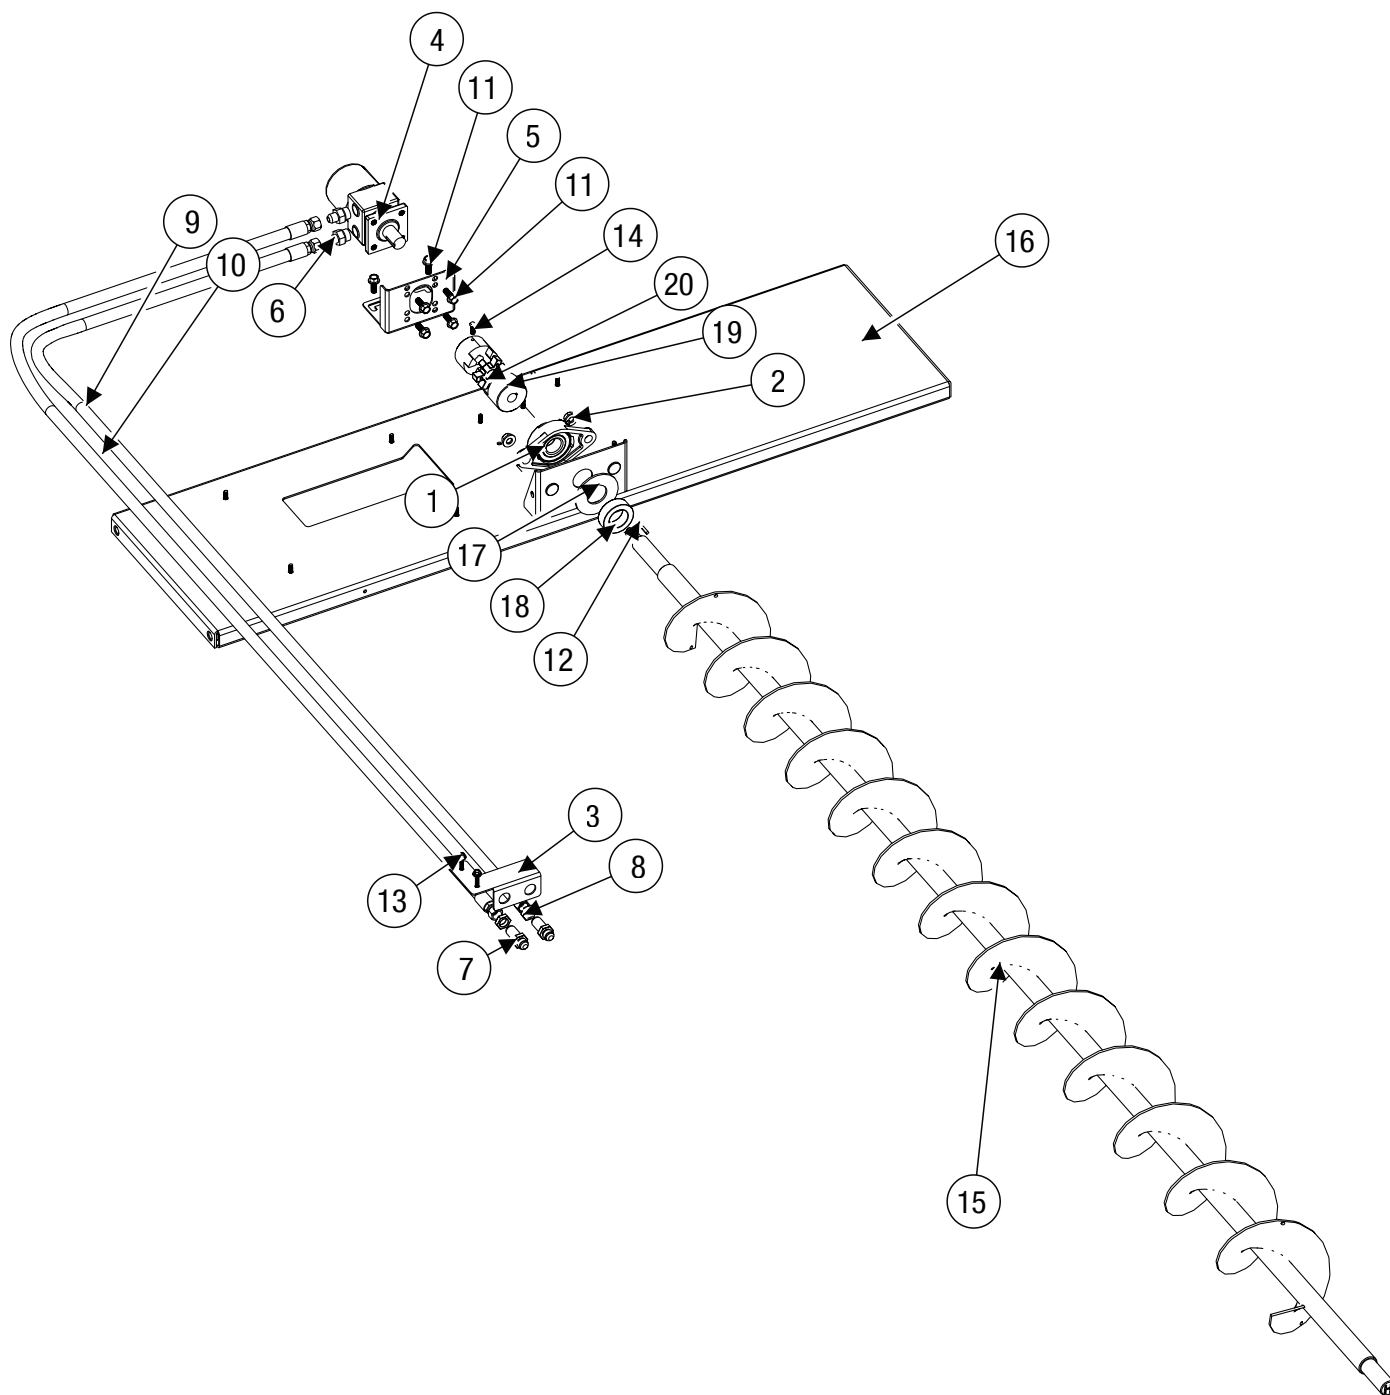

# Auger Drive Assembly Parts Breakdown



Model # SP-9300XH

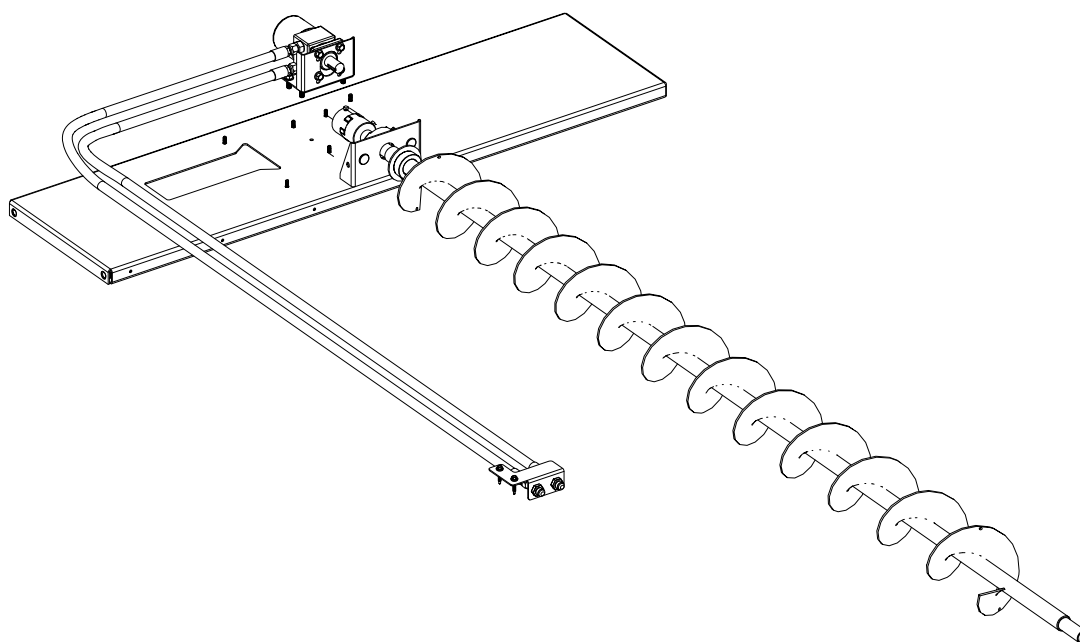


ID #	Part #	Qty
1	D5382	1
2	D5535	2
3	D5759	1
4	D5760	1
5	D5761	1
6	D5767	2
7	D5768	2
8	D5769	2
9	D5779	1
10	D5779-1	1
11	D6452	8

ID #	Part #	Qty
12	D6873	1
13	D6874	2
14	D7162	2
15	F50374	1
16	F50444	1
17	F50509	1
18	F50510	1
19	F50513	2
20	F50514	1

# Hopper Assembly Parts Breakdown



Model # SP-9300XH

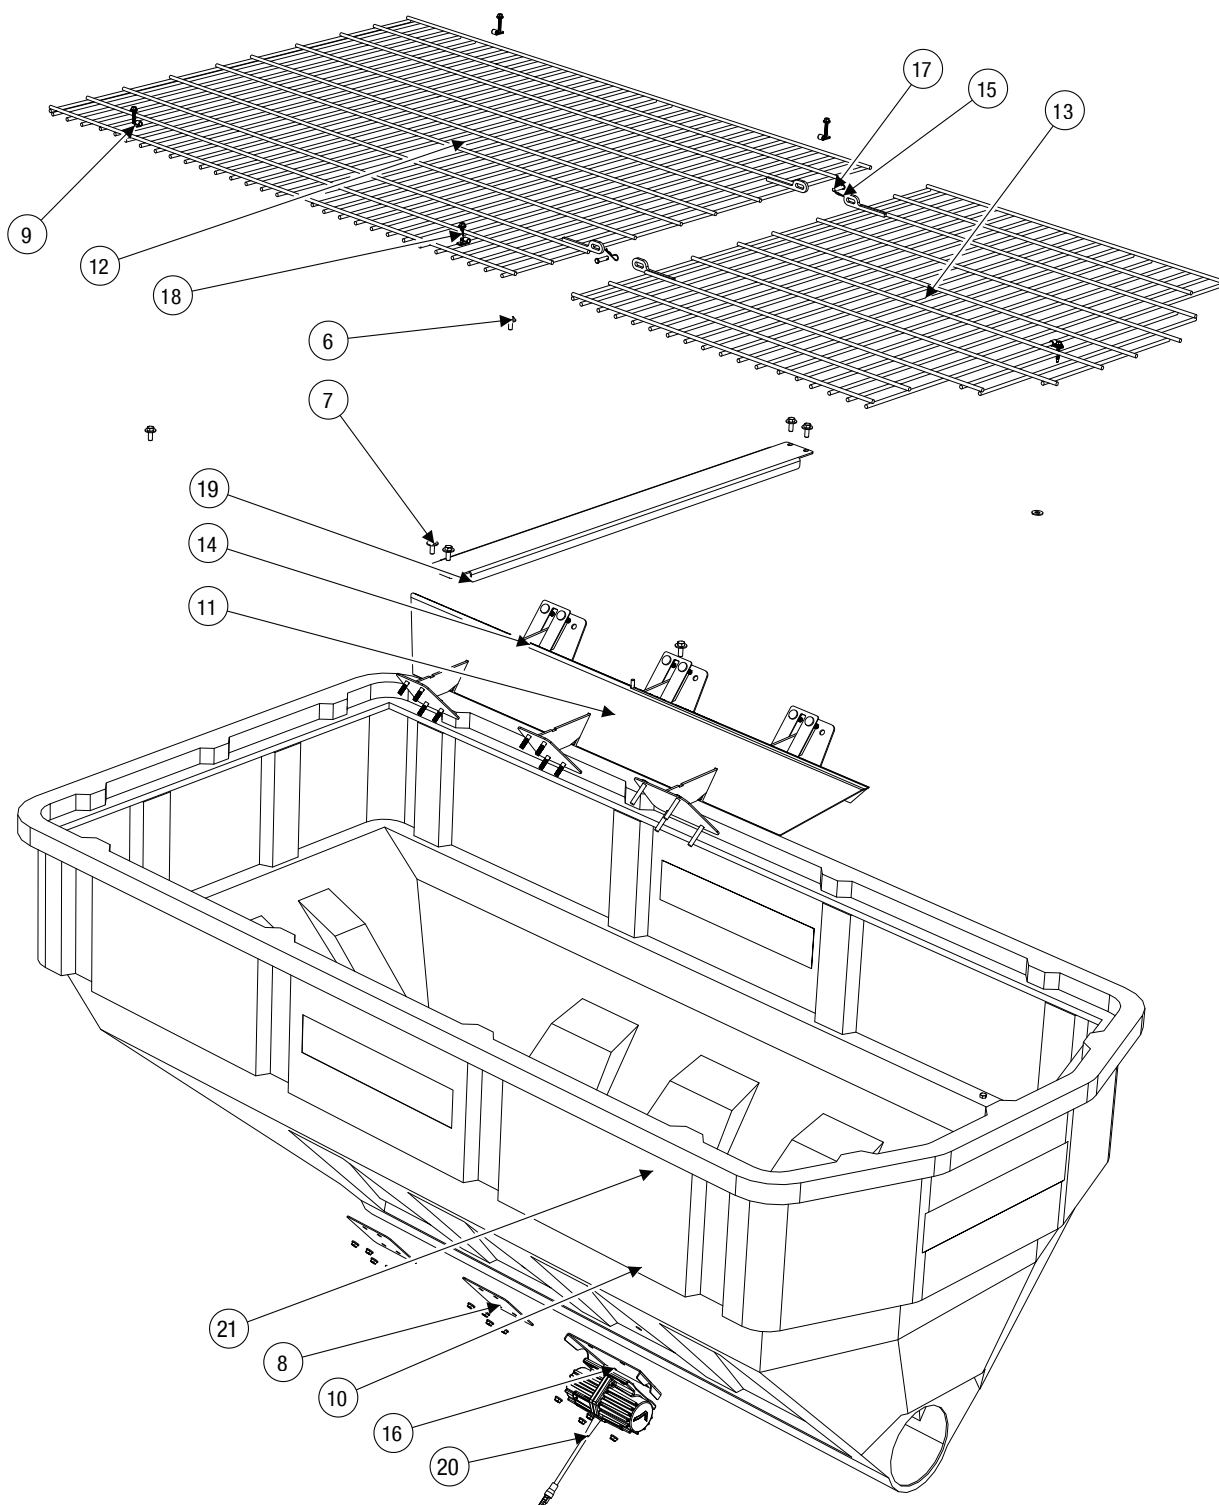


Hopper Cover...Part No. D6883



# Hopper Assembly Parts Breakdown



Model # SP-9300XH

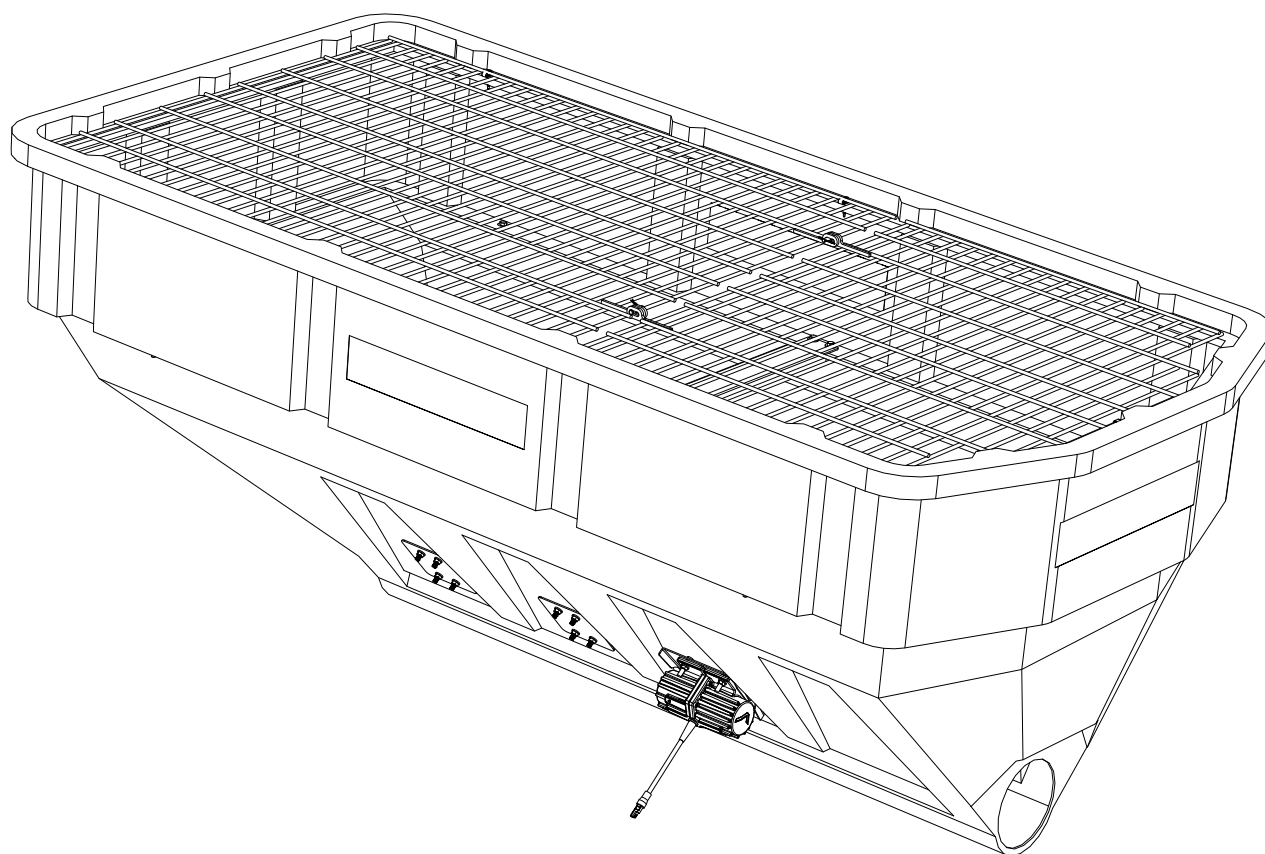


ID #	Part #	Qty
1	D6528	16
2	D6765	2
3	D6766	1
4	D6797	2
5	D6884	1
6	D4121	8
7	D4125	8
8	D5508	5
9	D6509	5
10	D6584	32
11	D6764	1

ID #	Part #	Qty
12	D6795	1
13	D6796	1
14	D6815	3
15	D6853	2
16	D6860	1
17	D6866	2
18	D6874	5
19	D6898	1
20	D6899	1
21	F50459	1

# Auger Extension Assembly Parts Breakdown




Model # SP-9300XH

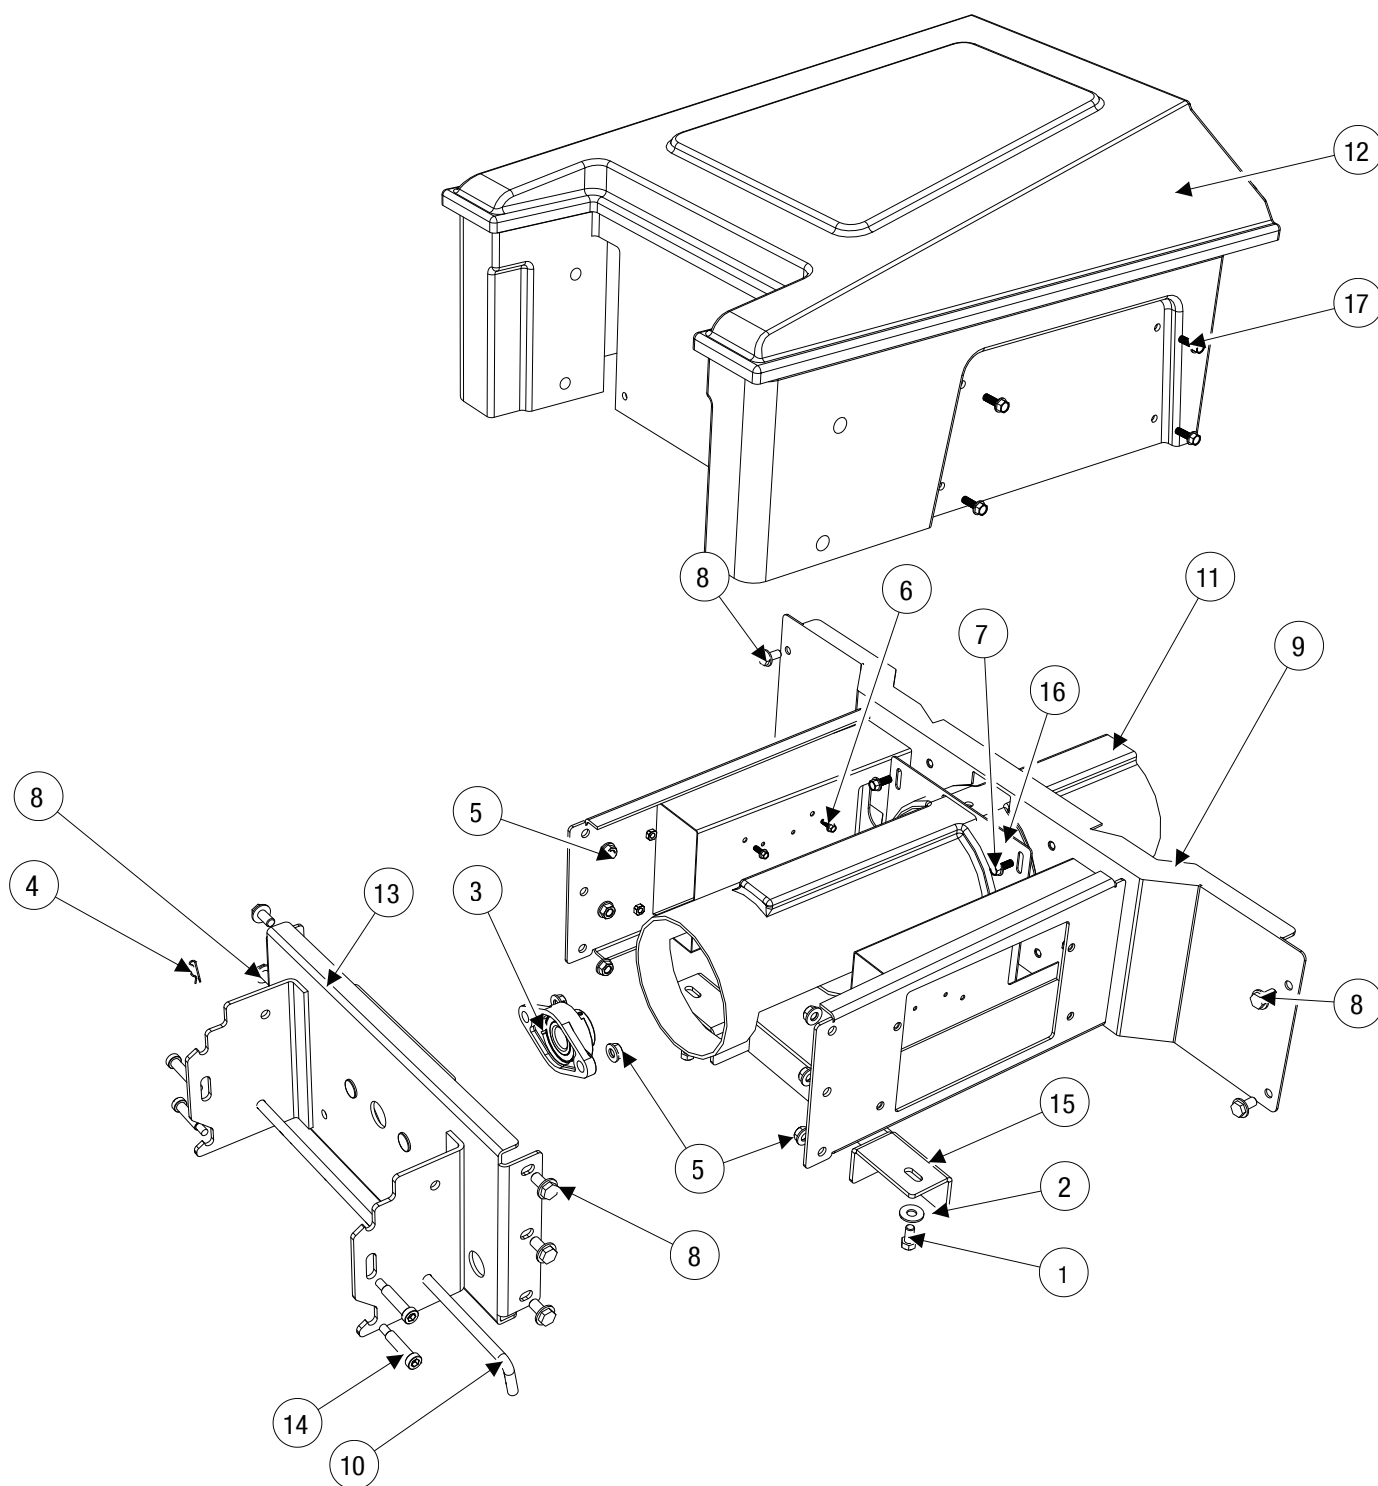

# Auger Extension Assembly Parts Breakdown



Model # SP-9300XH

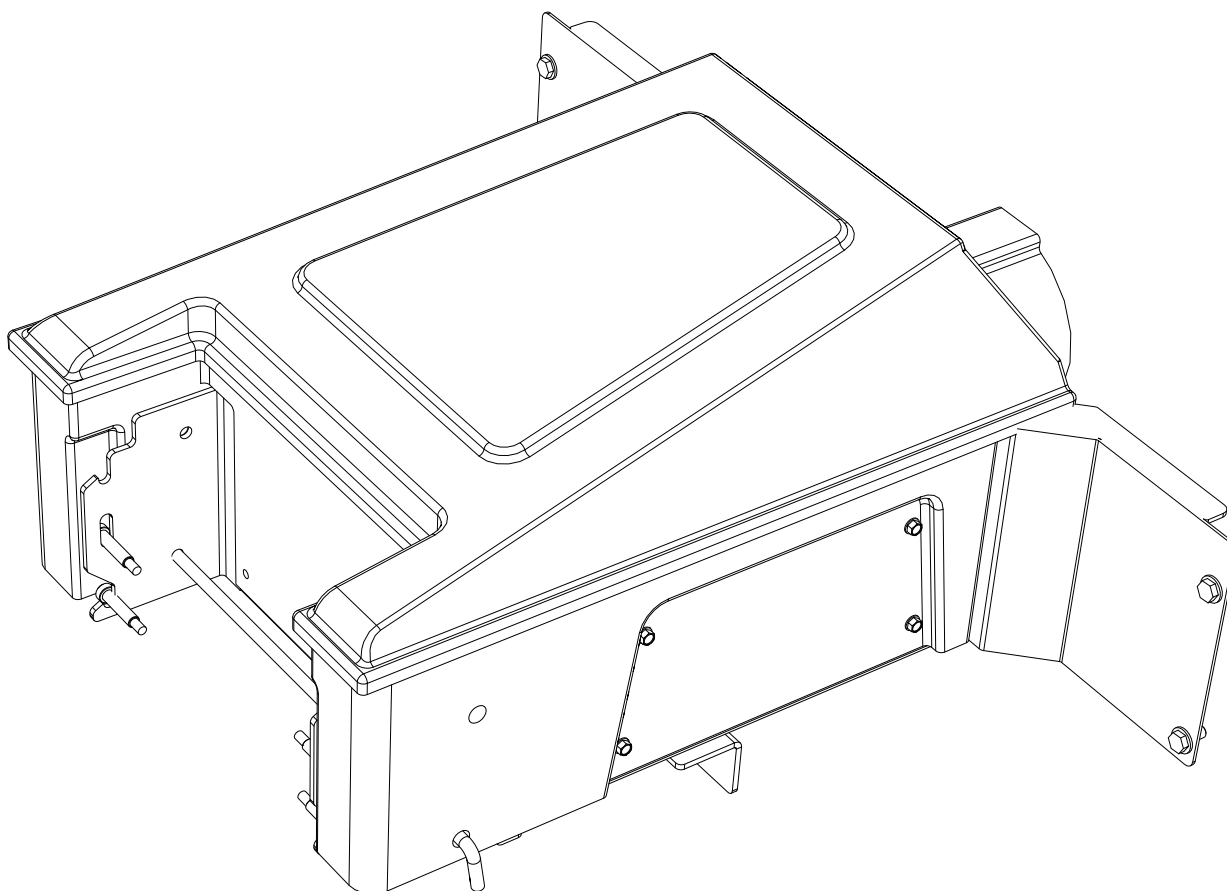


ID #	Part #	Qty
1	D4115	2
2	D4119	2
4	D4135	1
3	D5382	1
5	D5535	10
6	D6132	4
7	D6452	4
8	D6528	10
9	F50365	1

ID #	Part #	Qty
10	F50366	1
11	F50367	1
12	F50368	1
13	F50393	1
14	F50407	4
15	F50465	1
16	F50518	1
17	F50587	8


# Drive Assembly Parts Breakdown

Model # SP-9300XH

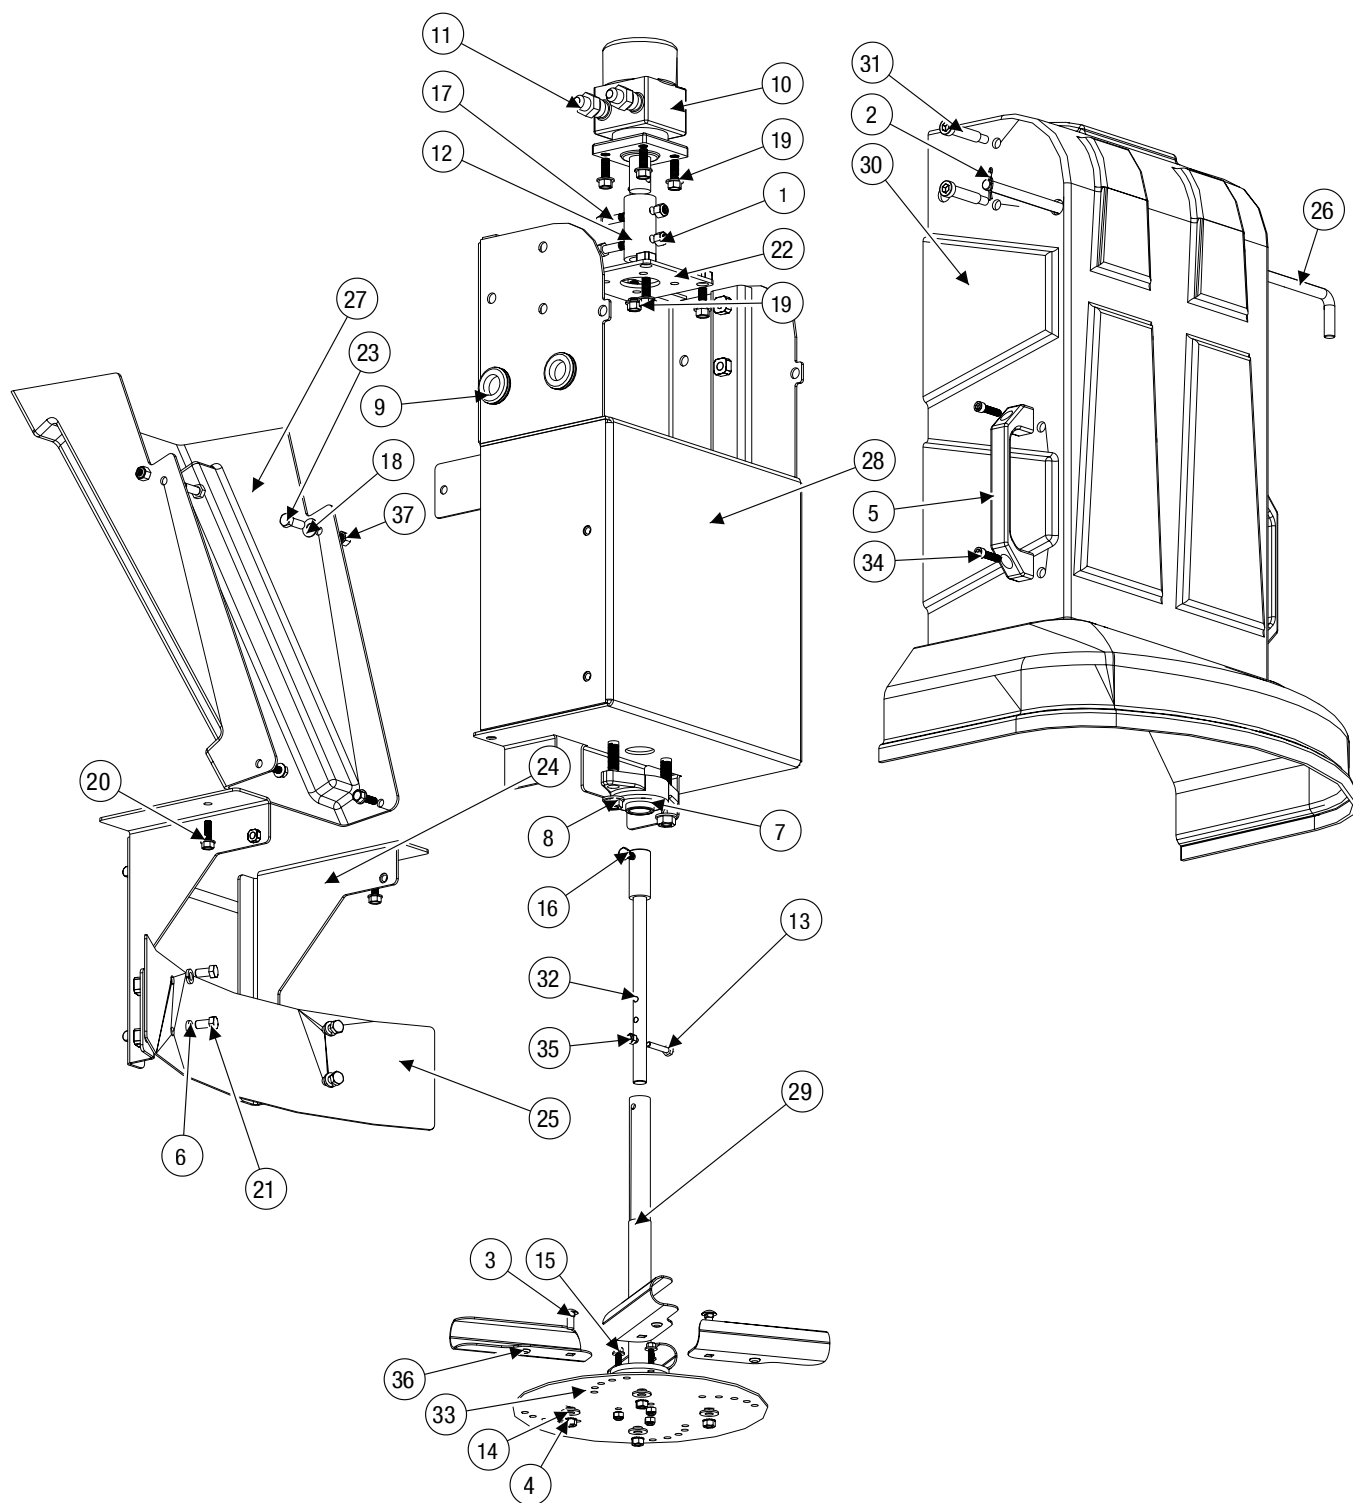

# Drive Assembly Parts Breakdown

Model # SP-9300XH

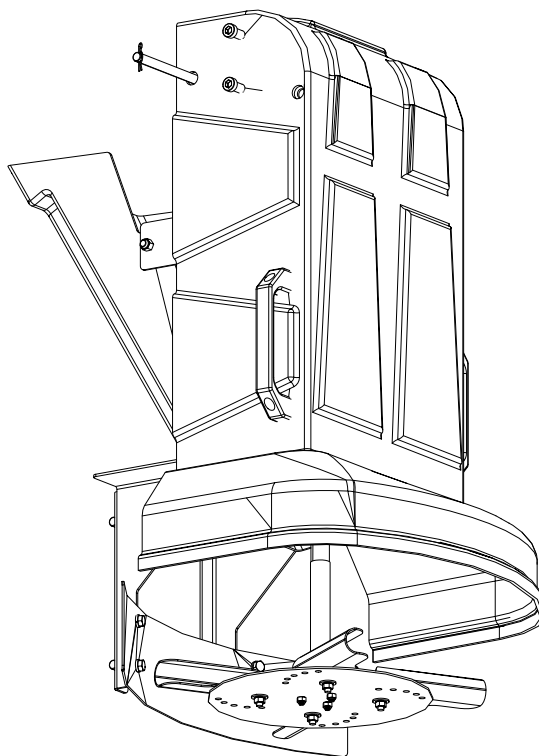

ID #	Part #	Qty
1	D4124	2
2	D4135	1
3	D5022	4
4	D5023	4
5	D5248	2
6	D5336	4
7	D5527	1
8	D5535	2
9	D5602	2
10	D5755	1
11	D5767	2
12	D5784	1
13	D5907	1
14	D5949	4
15	D6132	3
16	D6133	1
17	D6160	2
18	D6169	2
19	D6452	8

ID #	Part #	Qty
20	D6453	4
21	D6978	4
22	F50018	1
23	F50110	2
24	F50316	1
25	F50318	1
26	F50366	1
27	F50371	1
28	F50376	1
29	F50394	1
30	F50405	1
31	F50407	4
32	F50441	1
33	F50517	1
34	F50711	4
35	T15016	4
36	T30207	4
37	T30728	2

[illegible]

[illegible]

