



C.R. PLASTIC PRODUCTS

we create sustainable outdoor living
STRATFORD DEEP SEATING


DSF261

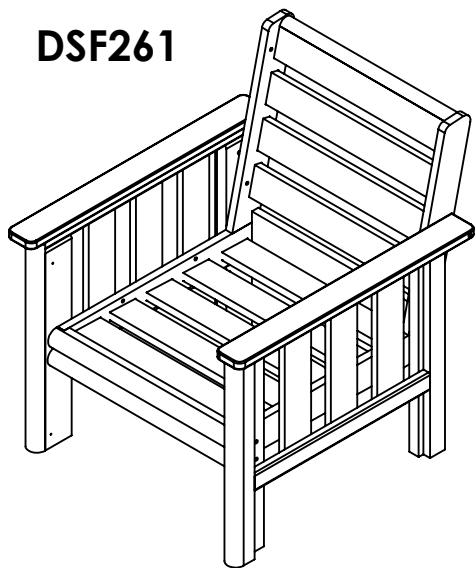

DSF262

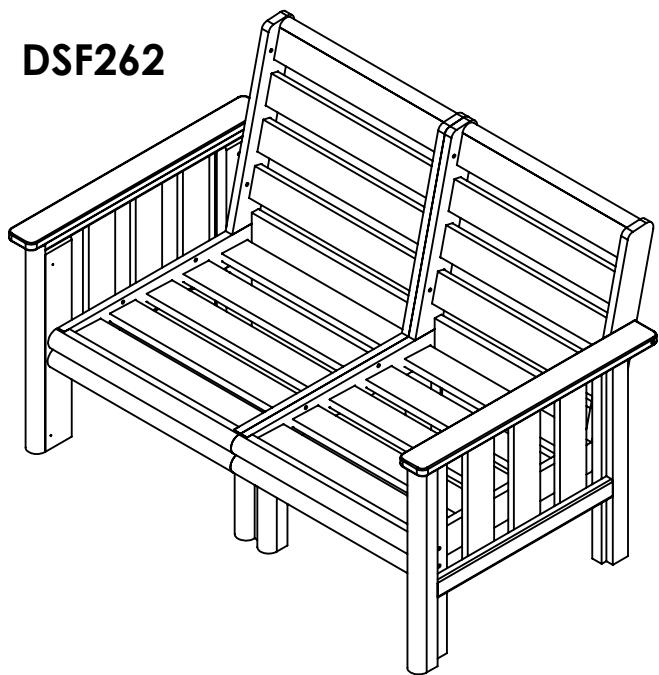

DSF263

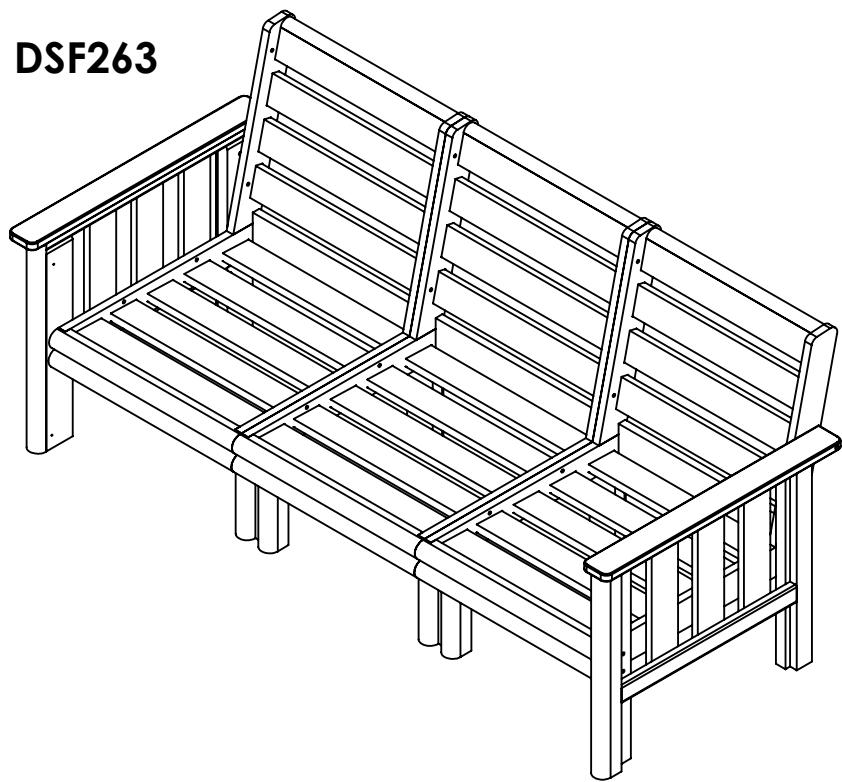

C.R. PLASTIC PRODUCTS


we create sustainable outdoor living

DSF 261


DSF 265

(expansion kit for DSF262 & DSF263)


(A) x1

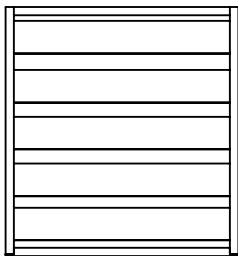


(B) x1

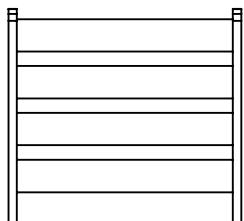


(C) x1

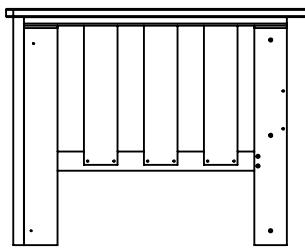


(D) x1

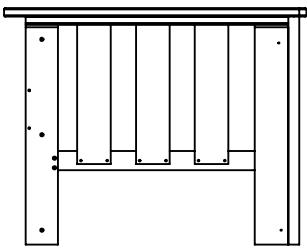


(A) x1

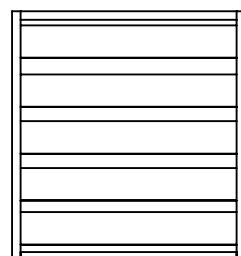


(B) x1

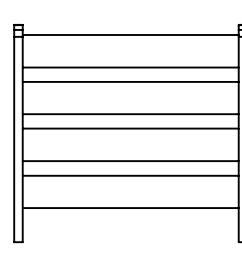

(E) x1



(F) x1






(L) x2



1 1/2" (38mm) SCREW




(I) x1 (J) x1 (K) x1



2" (51mm) SCREW



2 1/2" (64mm) SCREW



1 1/2" (38mm) SCREW



2 1/2" (64mm) SCREW



#2



PLEASE USE 6" DRIVER BITS



1-866-439-9521


wecare@crplastics.com



www.crpproducts.com


1

- (A)x1
- (B)x1
- (G)x2
- (H)x2

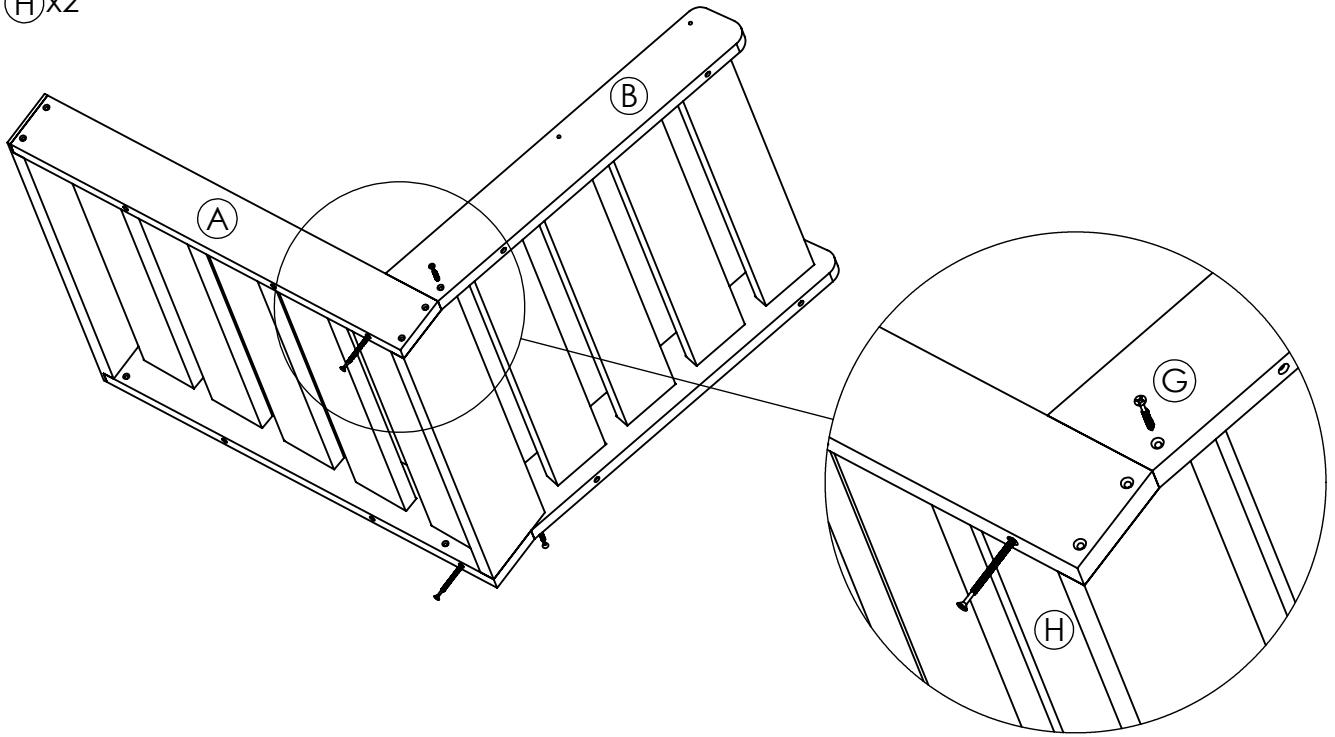



2

- (I)x1
- (J)x1
- (K)x1
- (G)x9

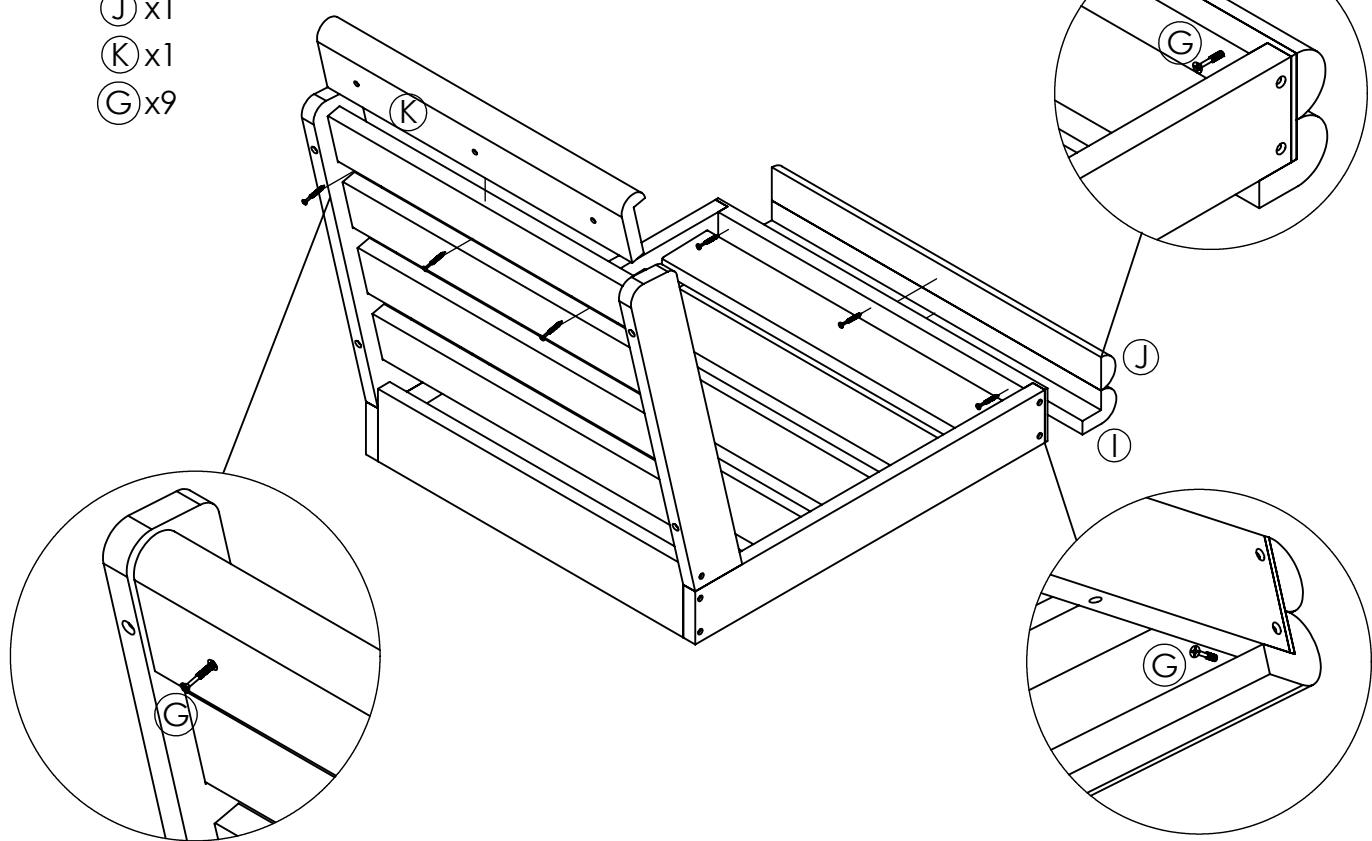

3

- (C) x1
- (D) x1
- (G) x2
- (M) x8

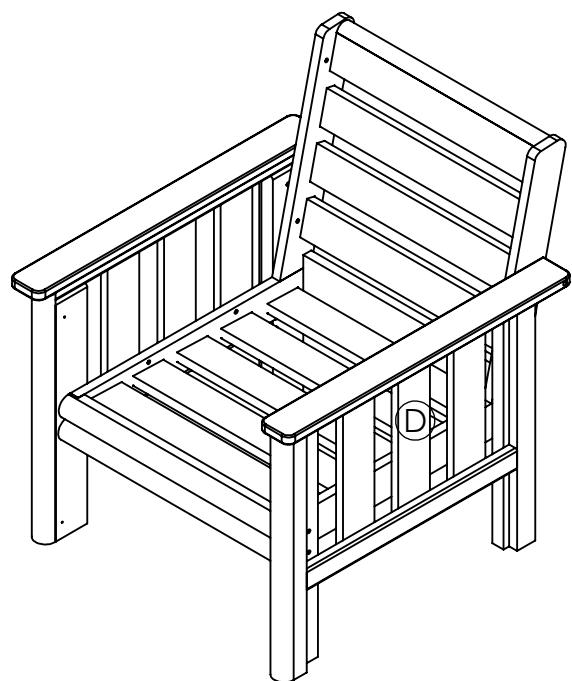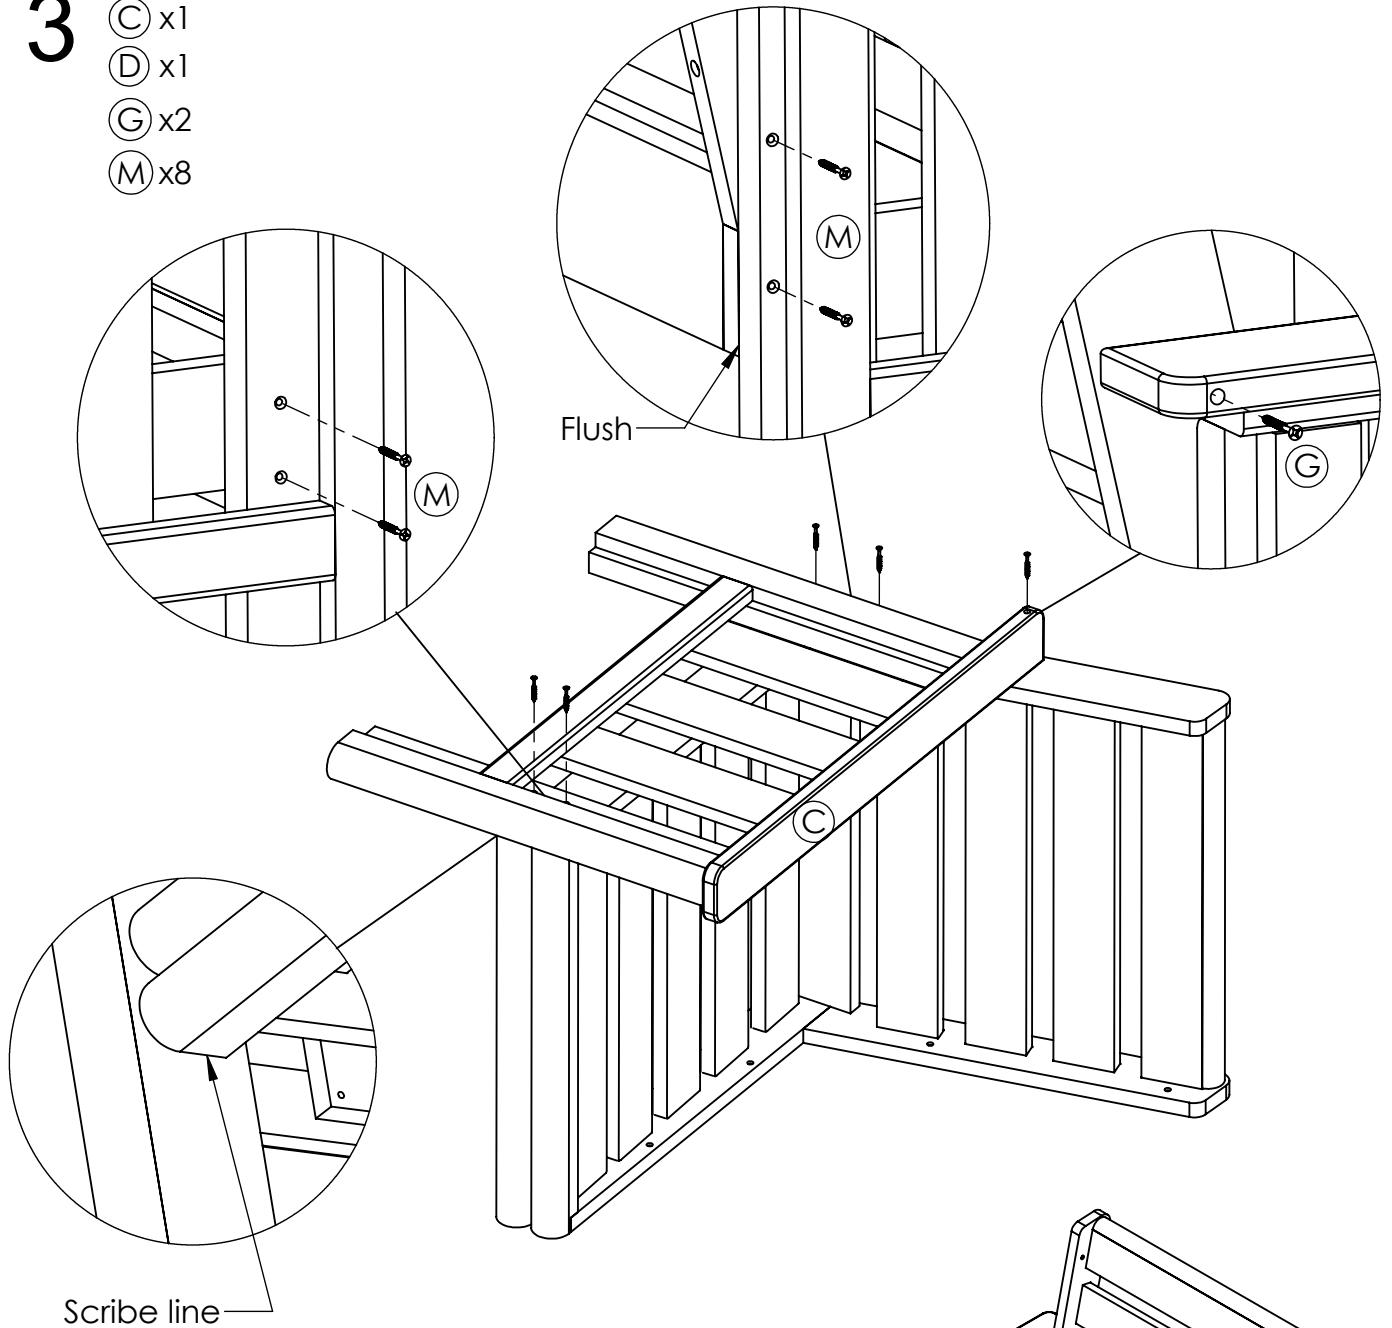




C.R. PLASTIC PRODUCTS




DSF 262 (DSF261 + DSF265)

Ⓐ x2

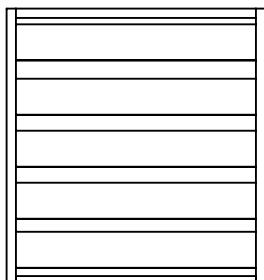


Ⓑ x2

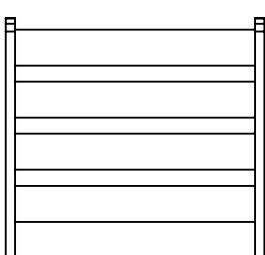

Ⓔ x1



Ⓕ x1





Ⓛ x2




Ⓒ x1

Ⓓ x1

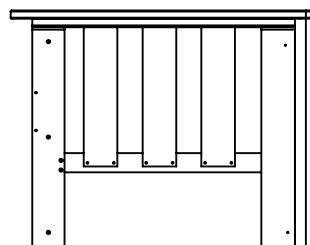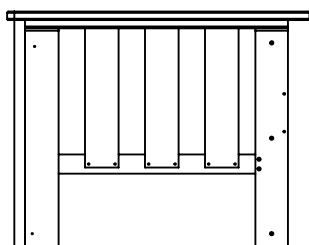

Ⓛ x2




Ⓡ x2



Ⓛ x2




1 1/2" (38mm) SCREW




Ⓖ x44

2" (51mm) SCREW



Ⓜ x8

2.5" (64mm) SCREW



Ⓗ x4



#2



PLEASE USE 6" DRIVER BITS



800.490.1283


FAX 519.271.8544



crpproducts.com

1
 (C)x1
(G)x1
(M)x4






Follow previous steps 1 and 2 to build seat and back

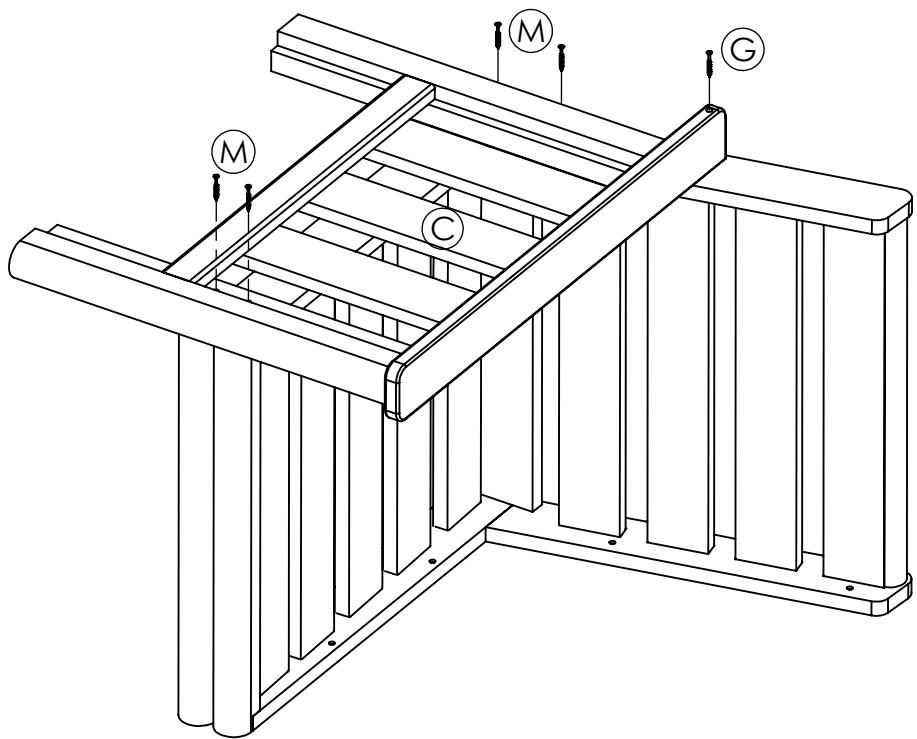

2 (G)x8






DO NOT ASSEMBLE HORIZONTALLY AND FLIP

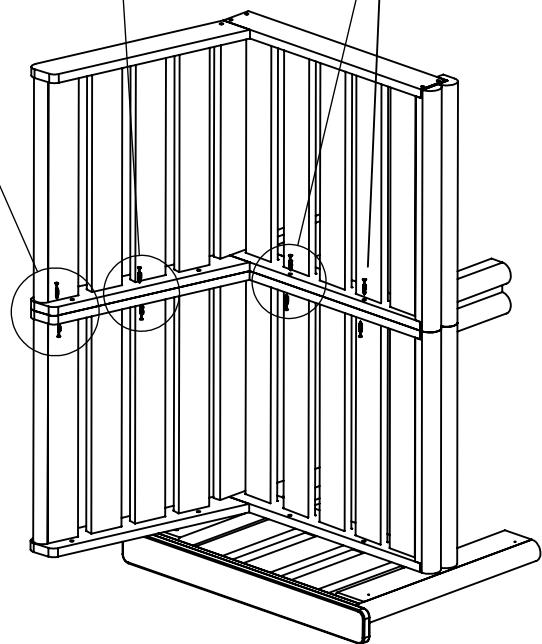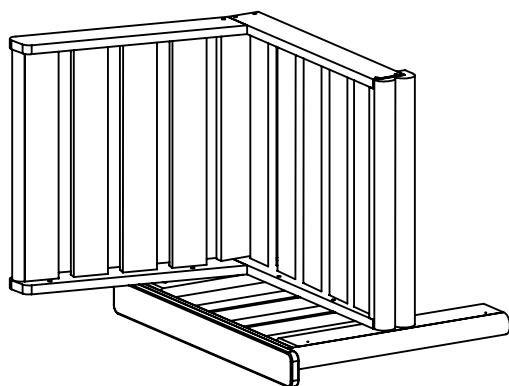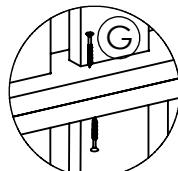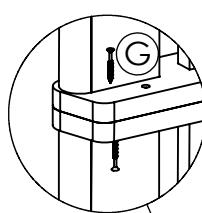
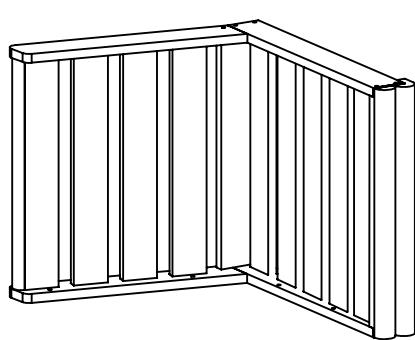


3

- (E)x1
- (F)x1
- (L)x2
- (G)x12

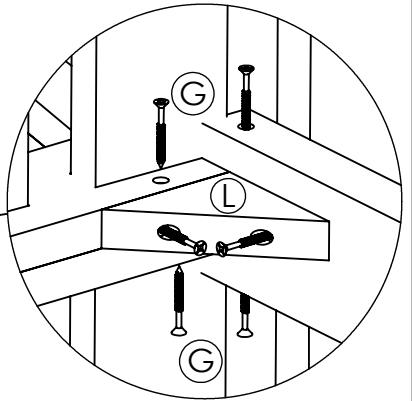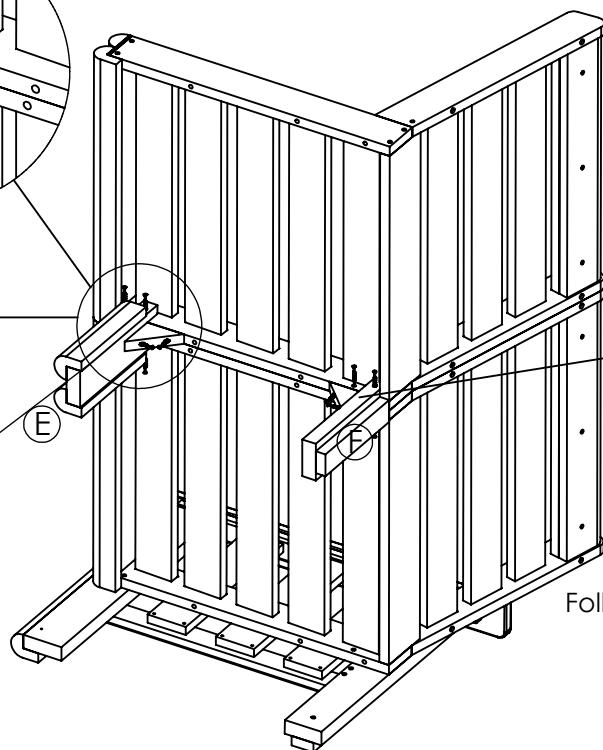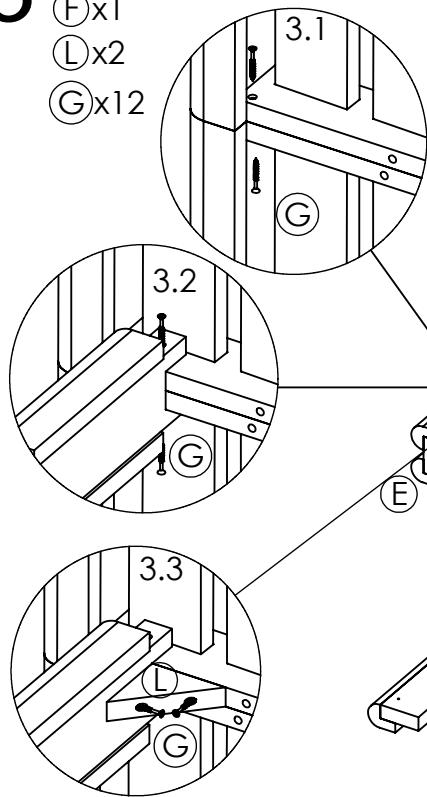**4**


- (D)x1
- (G)x1
- (M)x4

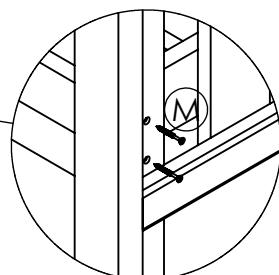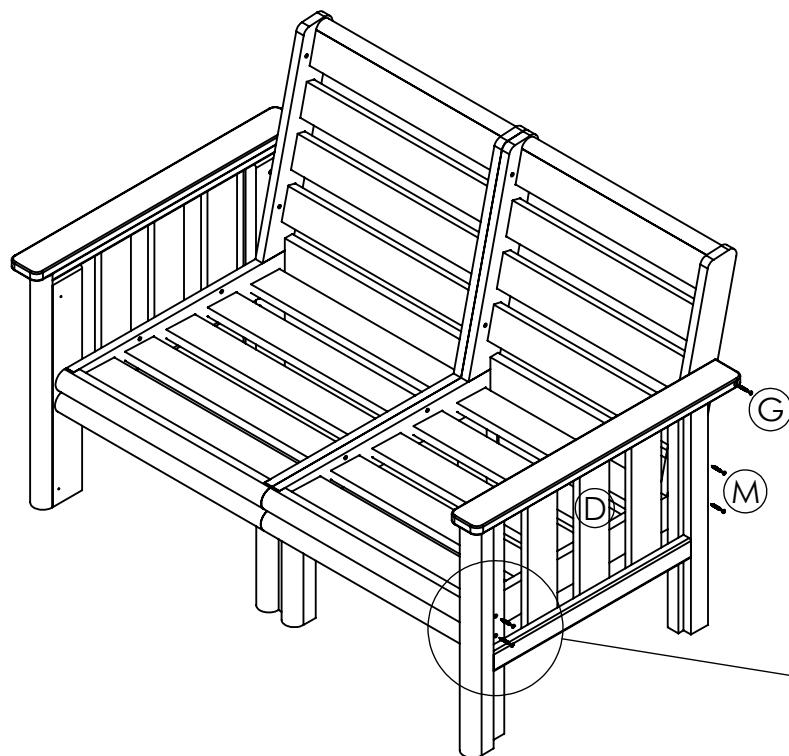


C.R. PLASTIC PRODUCTS

DSF263 (DSF261 + 2x DSF265)


(A)x3

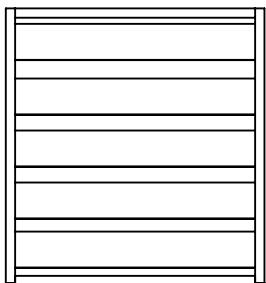


(B)x3

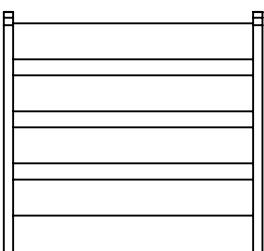

(C) x1

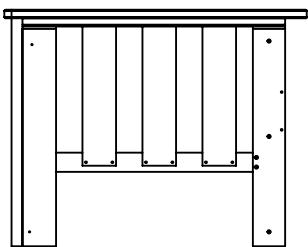


(D)x1

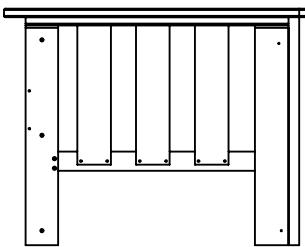

(I)x3

(J)x3


(K)x3



(E)x2

(F)x2

(L)x4



1 1/2" (38mm) SCREW




(G)x75

2" (51mm) SCREW



(M)x8

2 1/2" (64.5mm) SCREW



(H)x6



#2



PLEASE USE 6" DRIVER BITS



800.490.1283


FAX 519.271.8544



crpproducts.com


1 (G)x8

Follow previous steps 1, 2 and 3 (page 6 and 7)

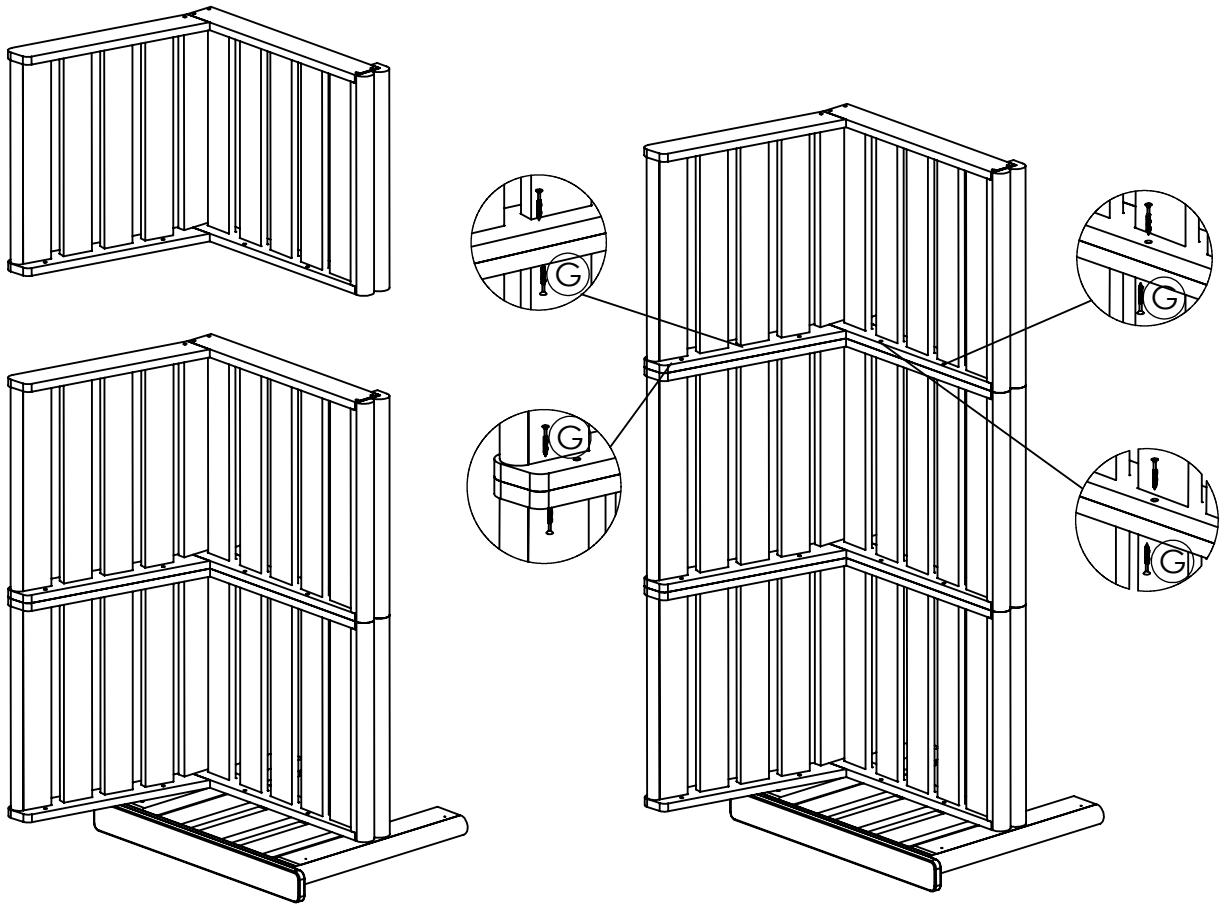

2 (E)x1
(F)x1
(L)x2
(G)x12

⚠ DO NOT ASSEMBLE HORIZONTALLY AND FLIP

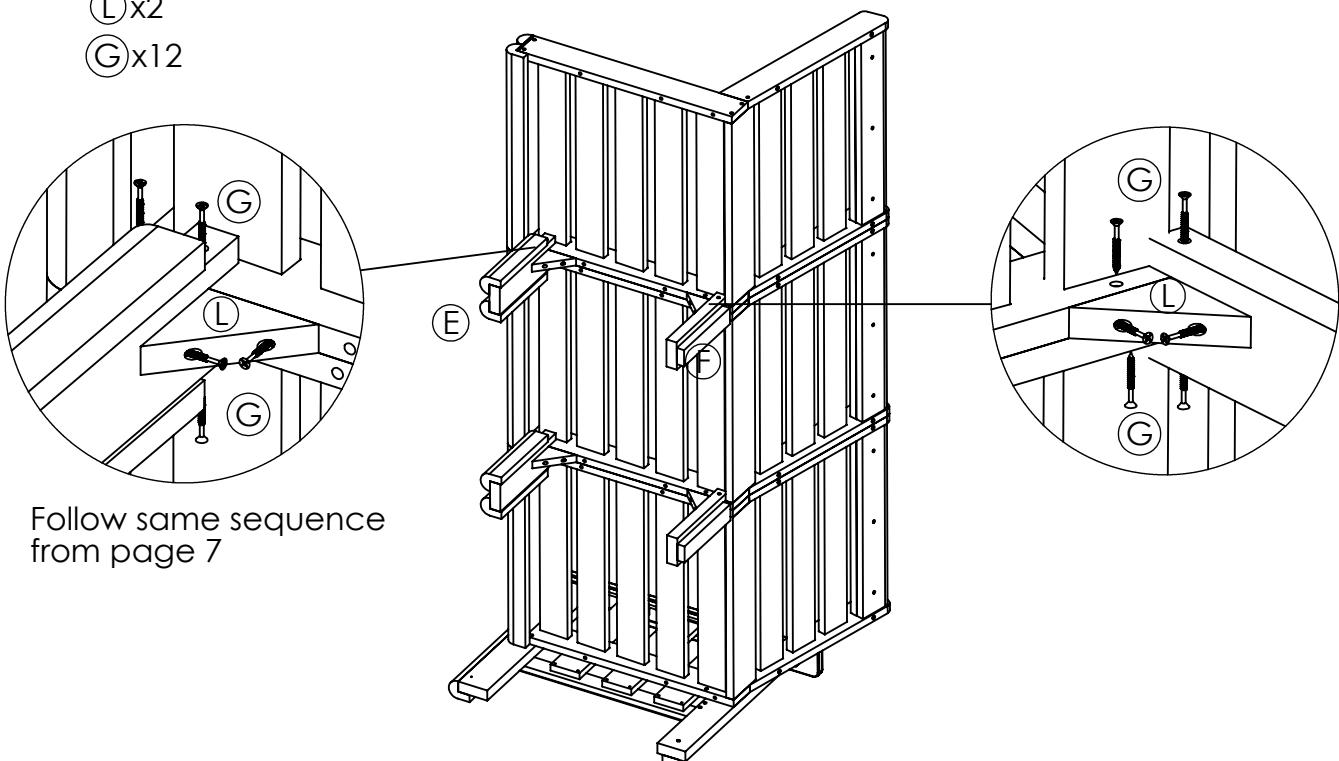

3

(D) x1

(G) x1

(M) x4

