




## 31" H-Beam Installation Instructions 21906

1. Line up two of the 40" x 120" Wave Dock sections end to end. Butt them up tight against each other and insert the H-Beam into the channels. Be sure to have the brass inserts in the H-Beam facing upwards. Use silicone spray to allow the H-Beam to slide into position easier. In some cases a 4 x 4 piece of wood may necessary to help drive the H-Beam into position.

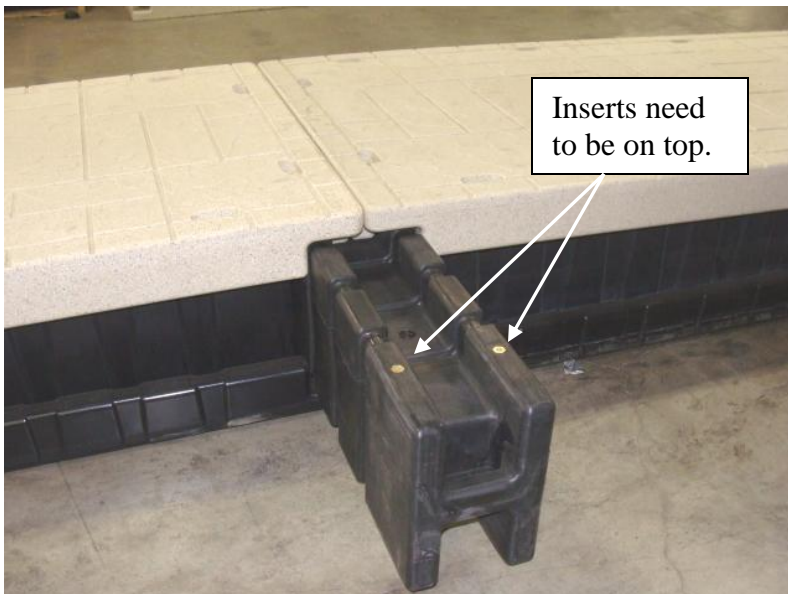

2. Slide the H-Beam all the way into the channel until the inserts align with all four slots on top. The H-Beam should not stick out into the outside channel.



3. Once the inserts are aligned with the slots secure the H-Beam using the 3/8 x 1 1/2" bolts and washers.

